



Warnings and Cautions

Please retain this instruction for future usage and read carefully before assembly.

Make sure you have all the parts & hardware as item list shows.

2 adults or more are recommended to install your gazebo.

Do not discard any of the packaging until you have checked that you have all the parts and pack of fittings.

Check all bolts for tightness before use, and periodically check and tighten bolts ensure your gazebo works properly.


Some parts might have sharp edges/corners. Please follow basic safety precautions to reduce the risk of hurts.

*Maximum weight capacity is **2500 pounds**.*

*It is essential to place the gazebo on level ground and not less than **6 feet** from any obstruction such as fences, garages, overhanging branches, laundry lines, or electrical wires.*

If you have questions or concerns.

*Please contact us via email at **service@domioutdoorliving.com***

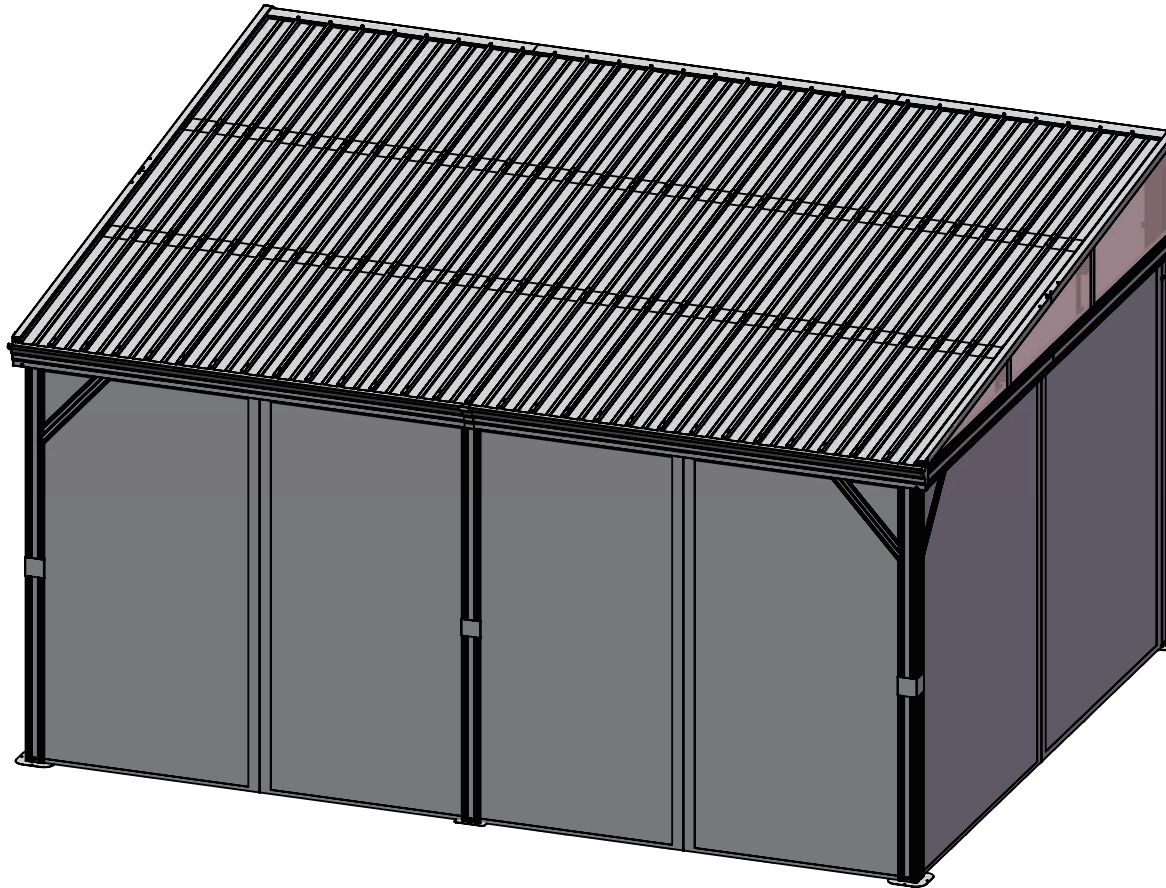

12'x16'

SKU:LGMF1636B

WALL MOUNT GAZEBO

Assembly Manual

Thank you for your purchase of

Domi outdoor living's Gazebo

Read and follow this assembly and operation guide.

To reduce personal injury and damage to your gazebo

Please open your gazebo curtain when it is incoming over 30 mph wind, and tie with Strap.

We recommend a **two-person team** for assembly and disassembly.

If you like our products, please tell other customers

If you have prbblem with our products, please tell us

Please feel free to contact us.

DOMI OUTDOOR LIVING




Pre-assembly

TOOLS THAT MAY BE REQUIRED (Not included in boxes)

**NOTE: Tools / equipment are not shown to actual size and scale.*



LEVEL




RUBBER Mallet




PHILLIPS SCREW



DRILL



ALLEN KEY



ALLEN KEY

EQUIPMENT REQUIRED (Not included in boxes)

**NOTE: Equipment are not shown to actual size and scale.*



SAFETY HAT



GLOVES



SAFETY GOGGLES



STEPLADDER

IMPORTANT

The construction of a gazebo may require a municipal permit or be subject to specific building codes. It is the responsibility of the consumer to check and ensure compliance with any local regulations or restrictions before proceeding with assembly.


Matters needing attention






1. Two or more people are required for assembly.





2. Do not fully tighten screws prior to complete assembly.

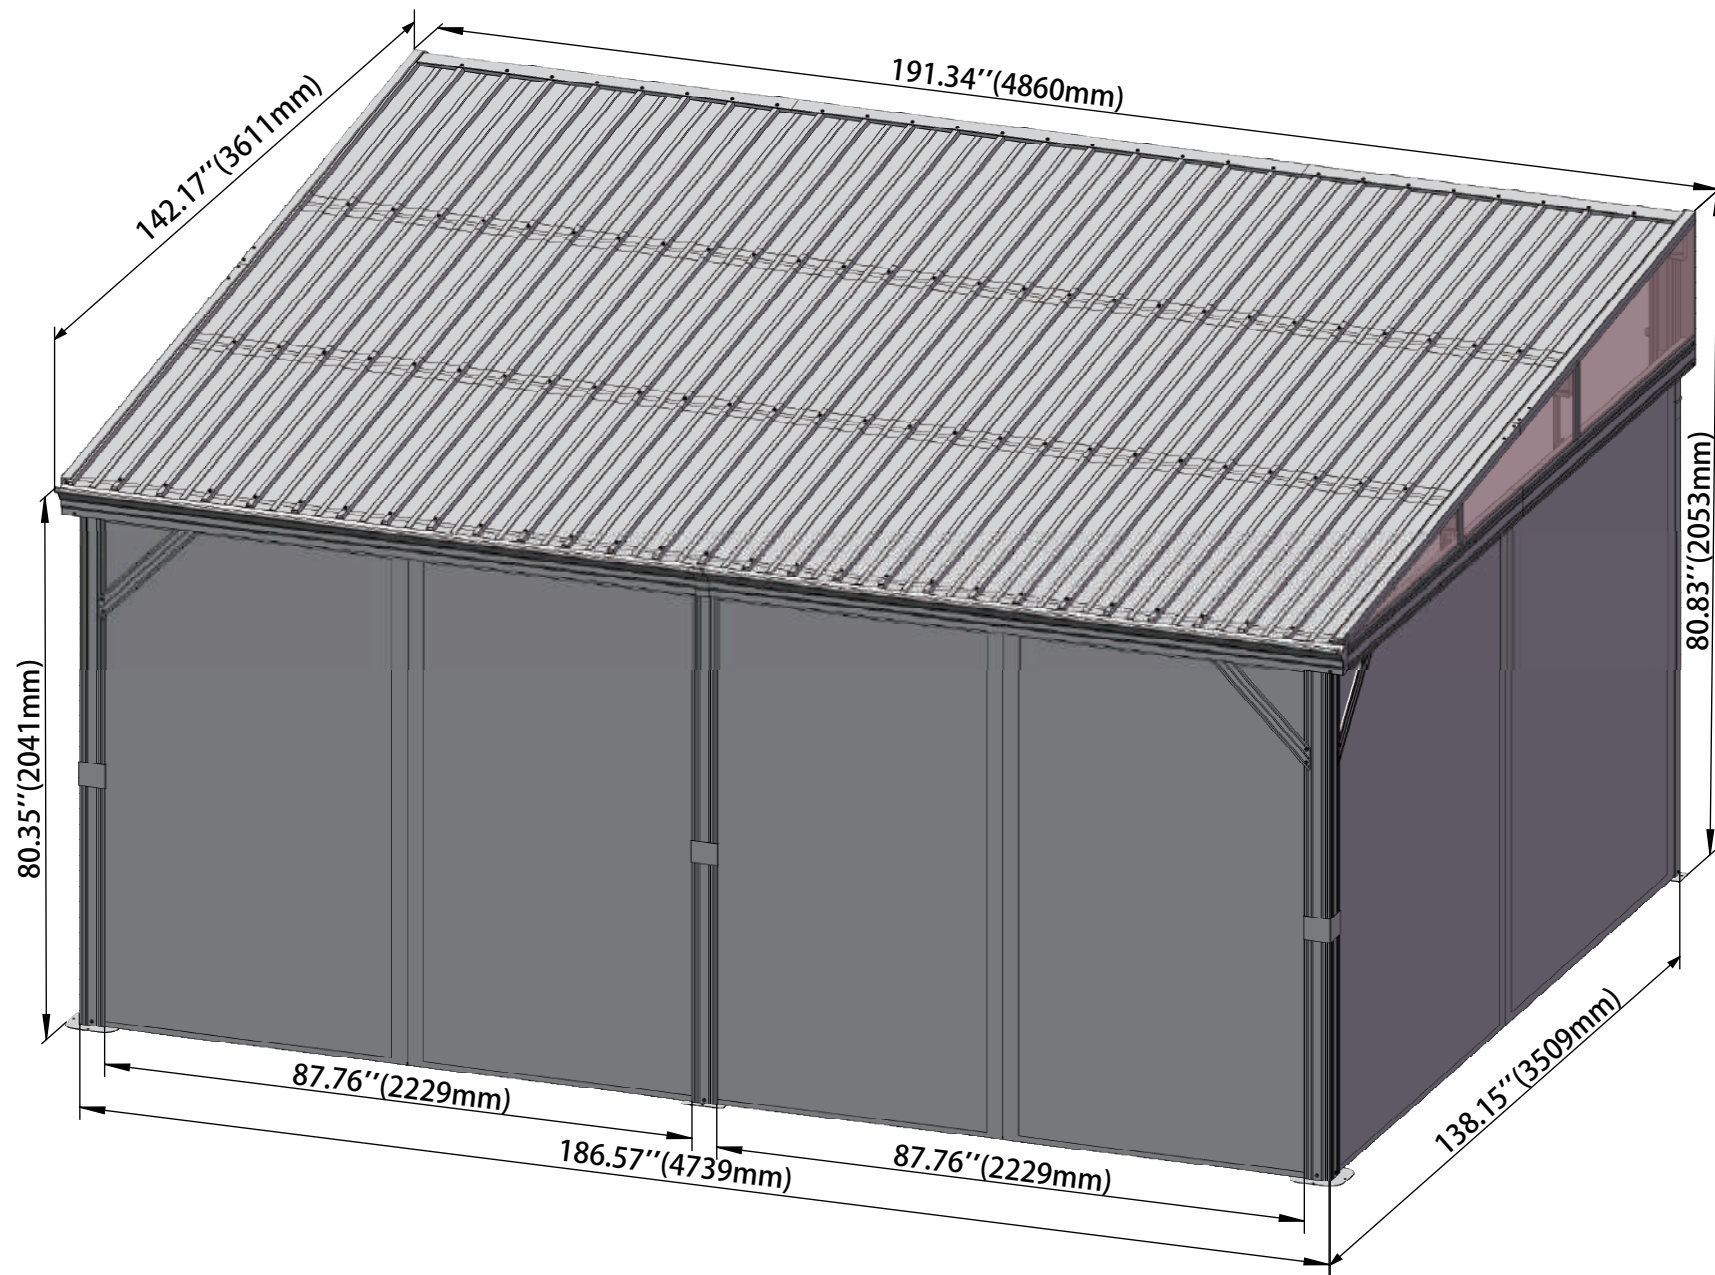

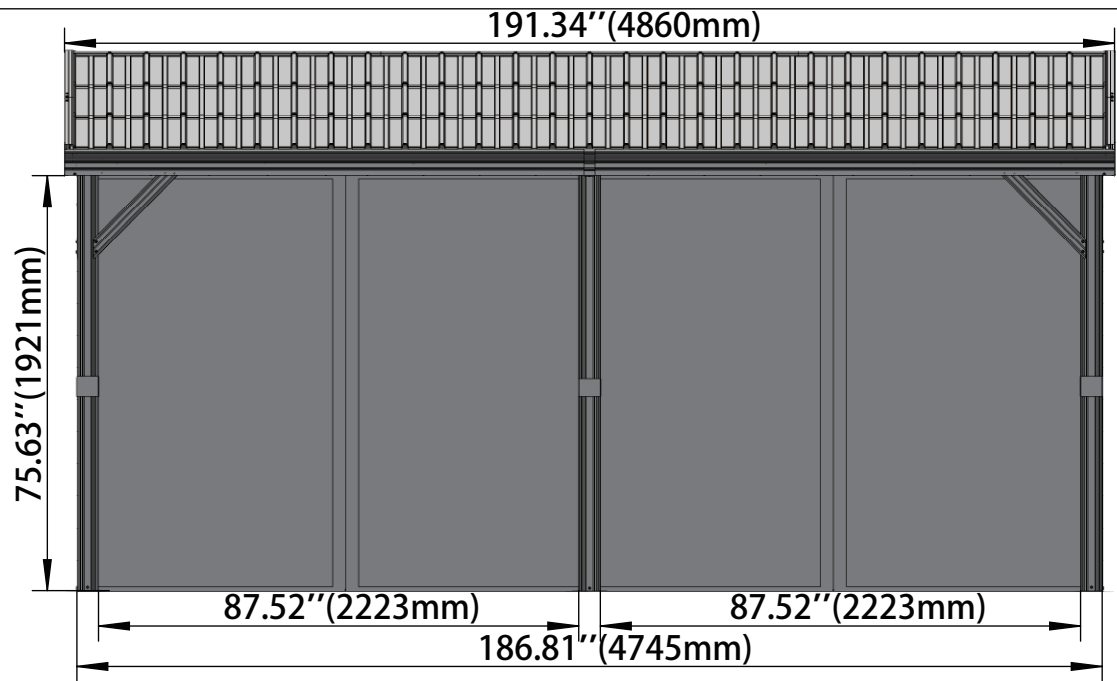
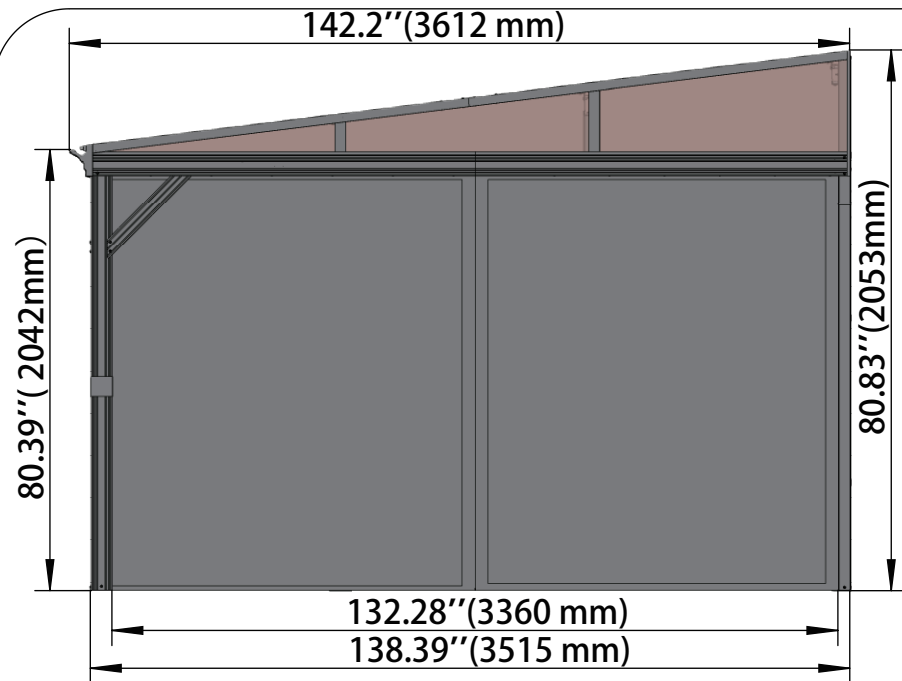


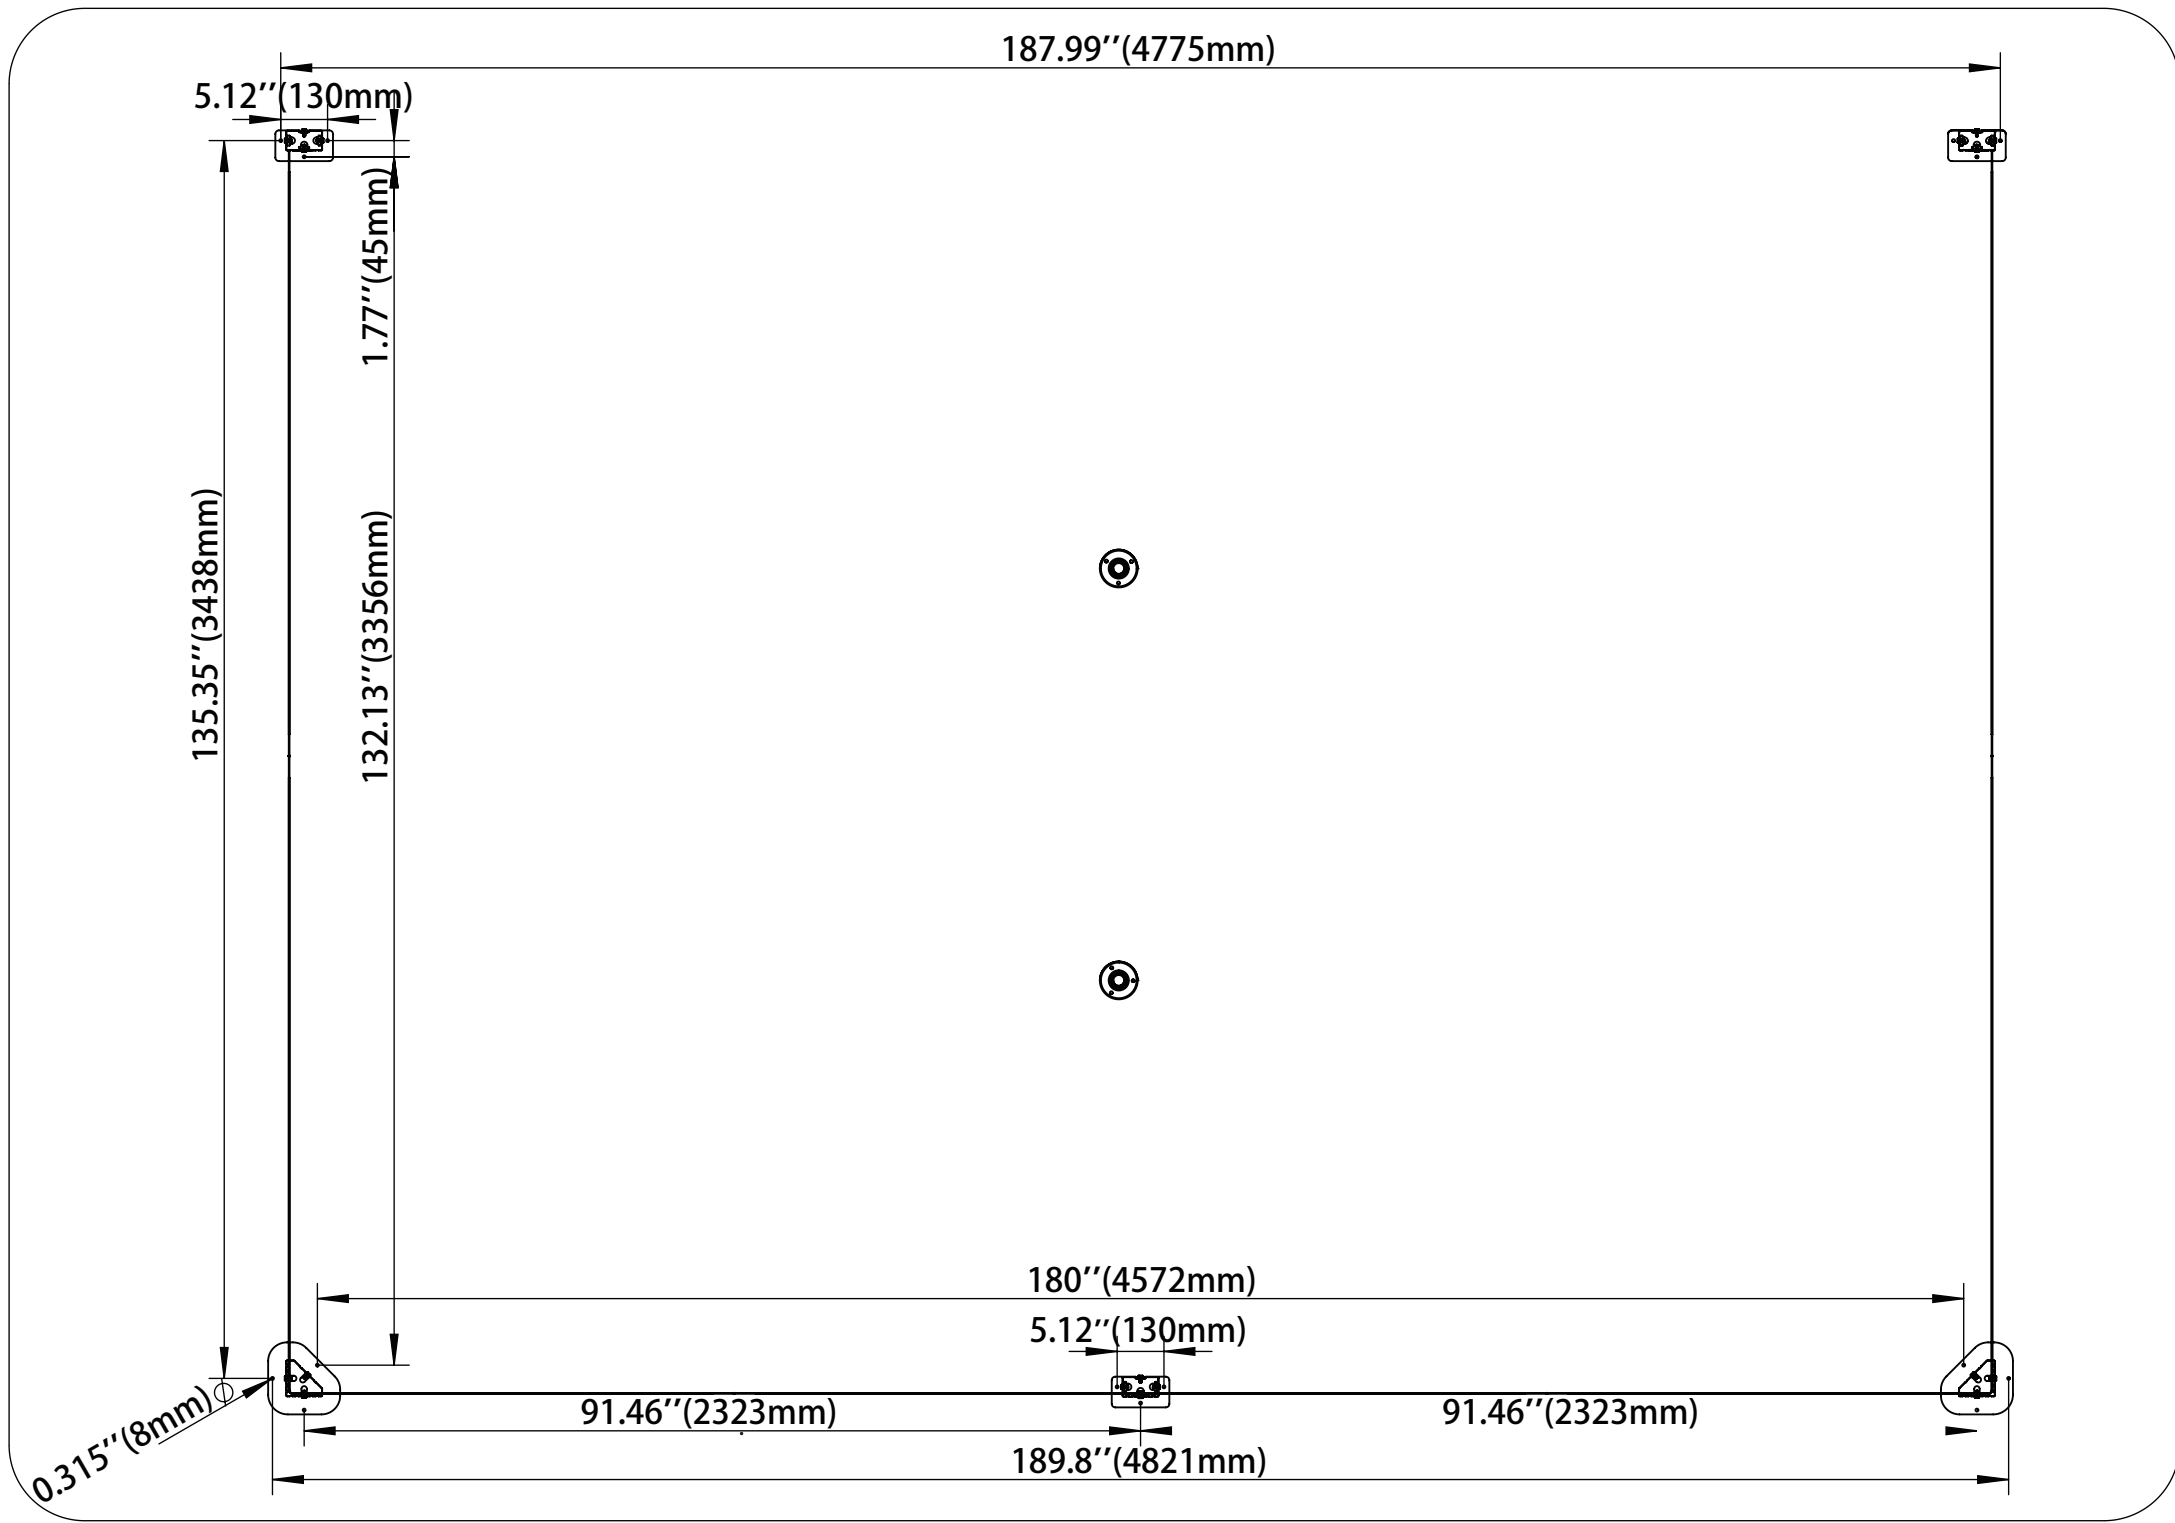



1

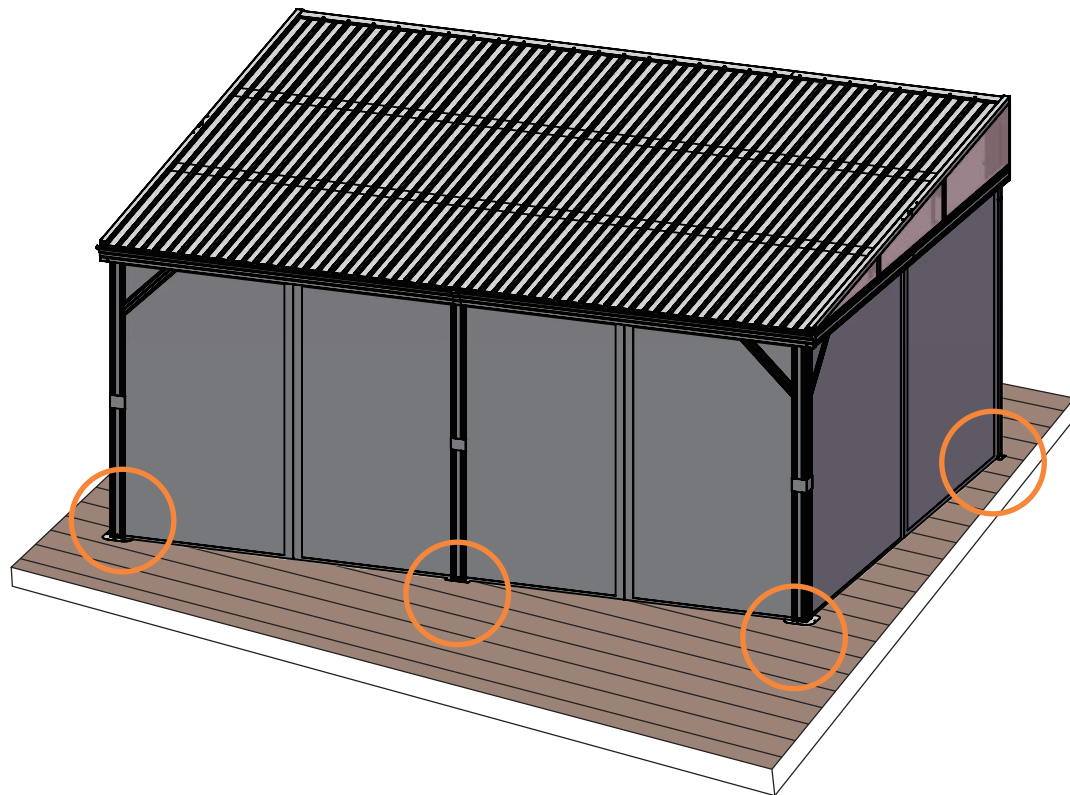














If the deck is hard wood and the depth of it is over 3 inch, you can use **5/16 in. ×4 in. Structural Wood Screw** to mount the pergola.











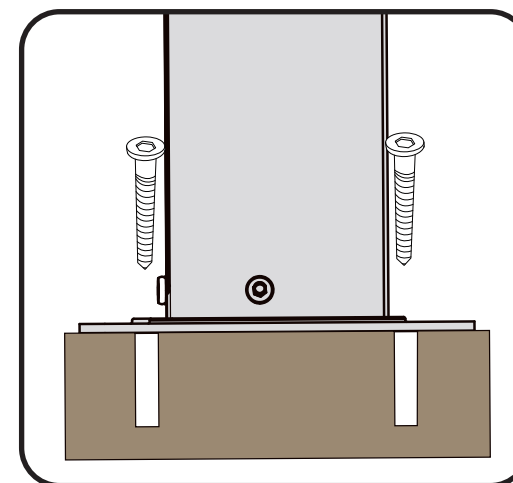
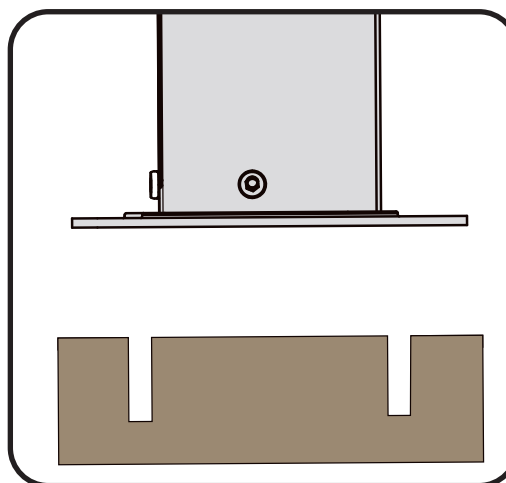


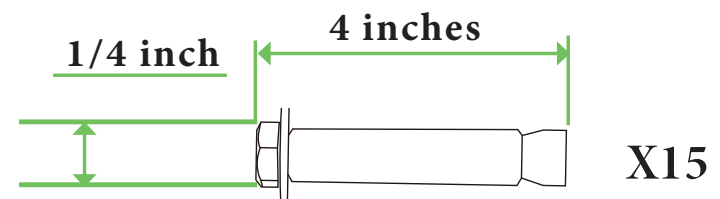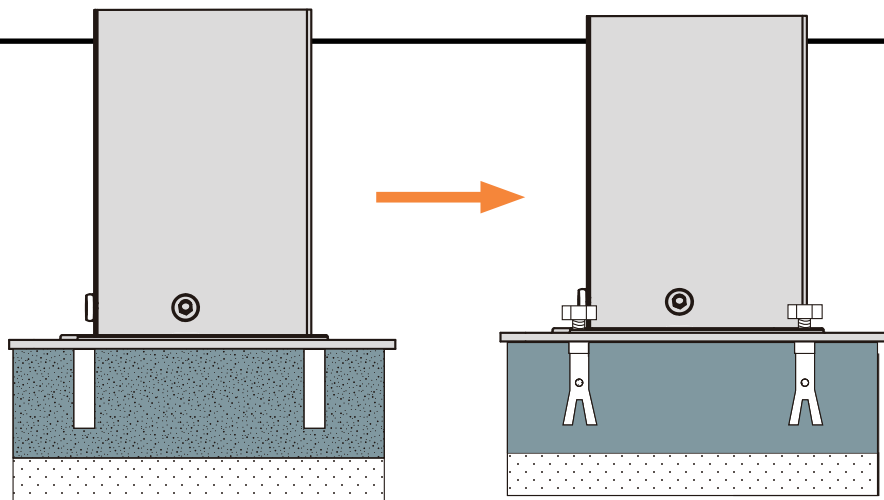


2

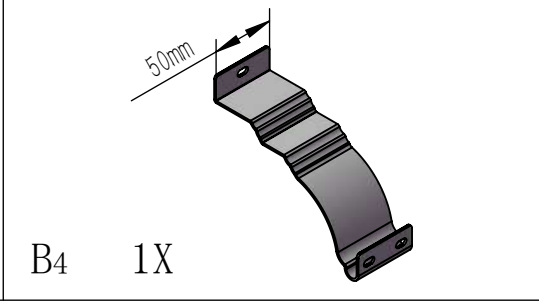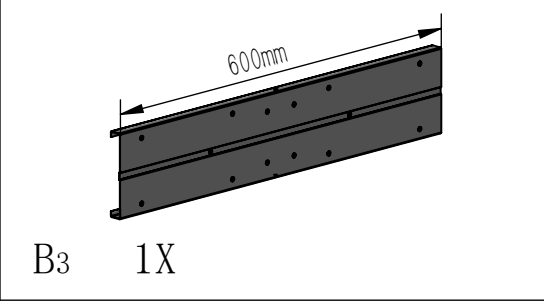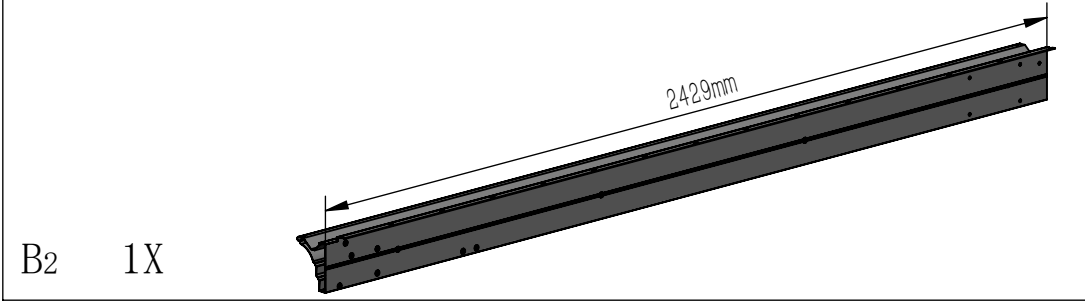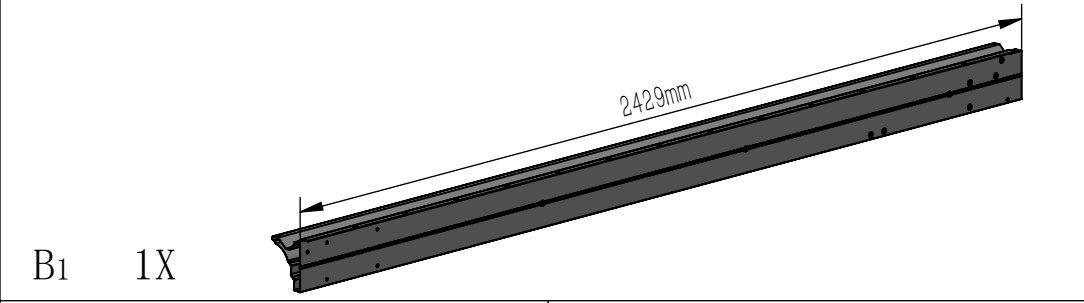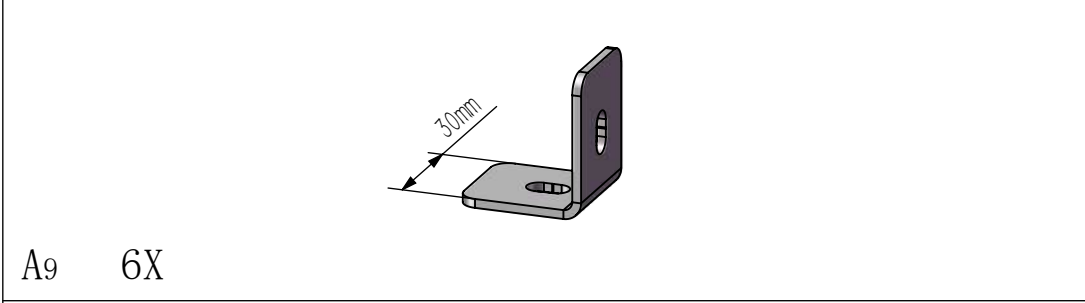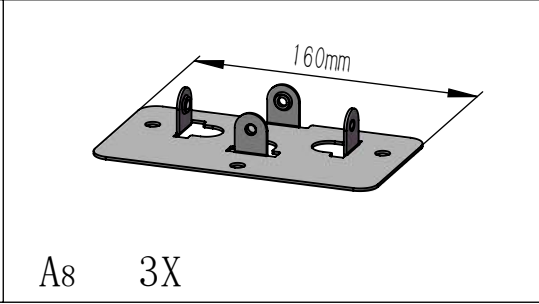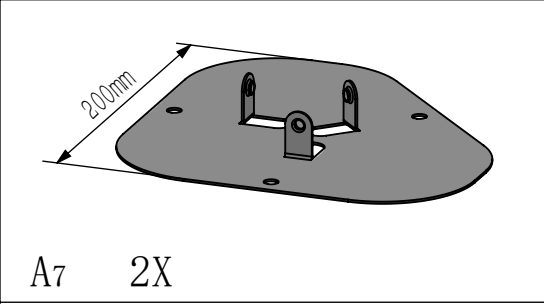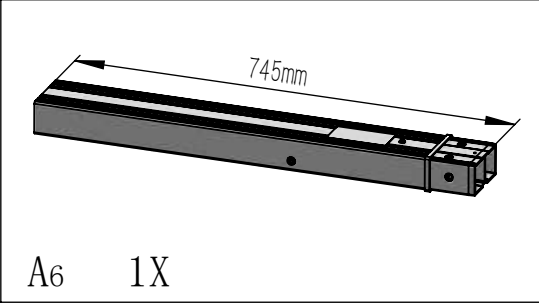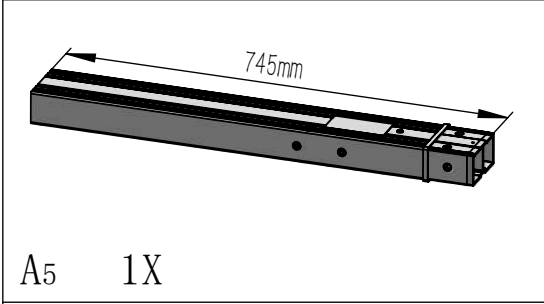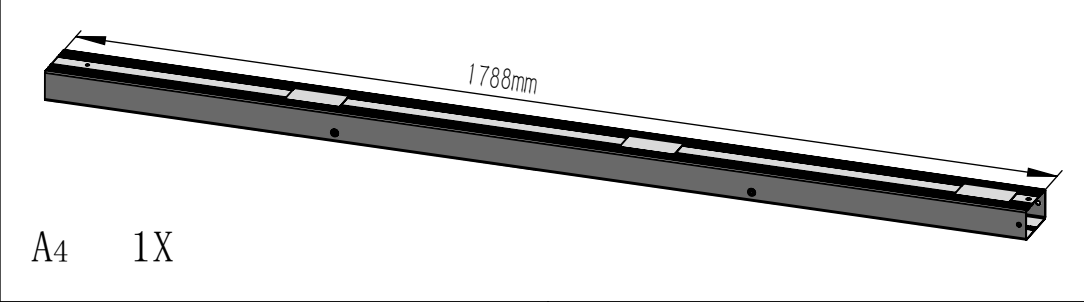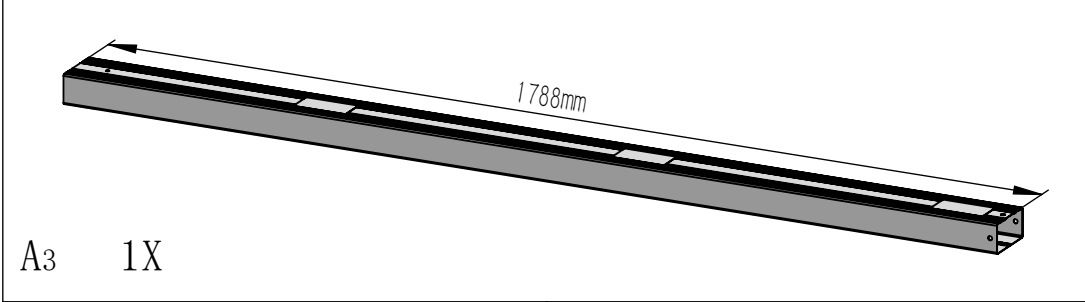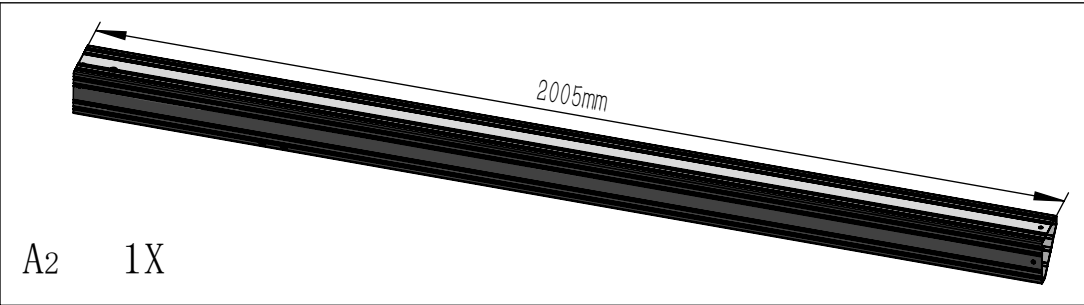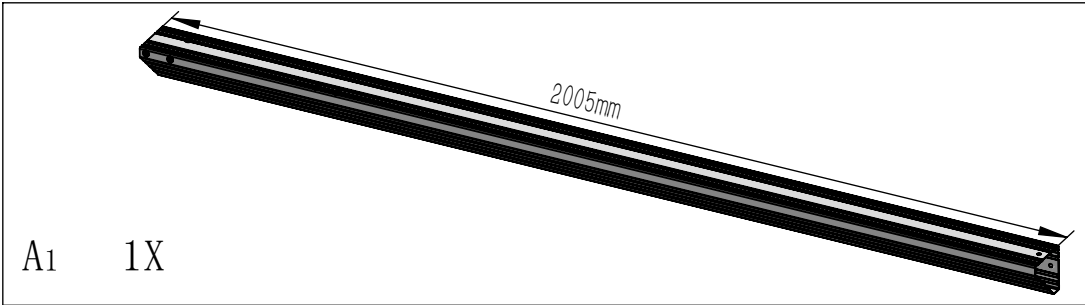


If the ground is concreted and the depth of it is over 3 inch, you can use $\frac{1}{4}$ inch expansion bolts to mount the pergola

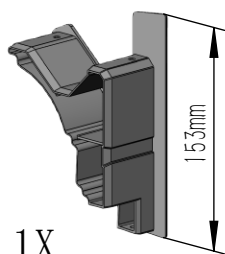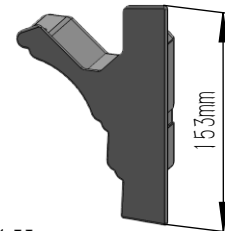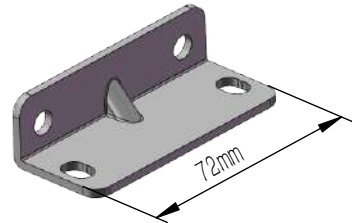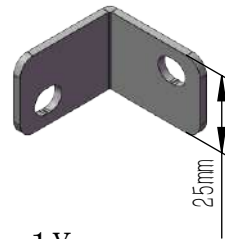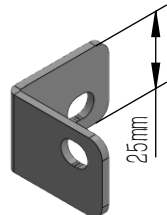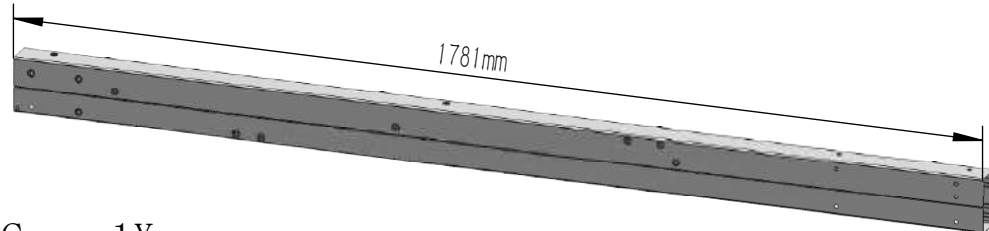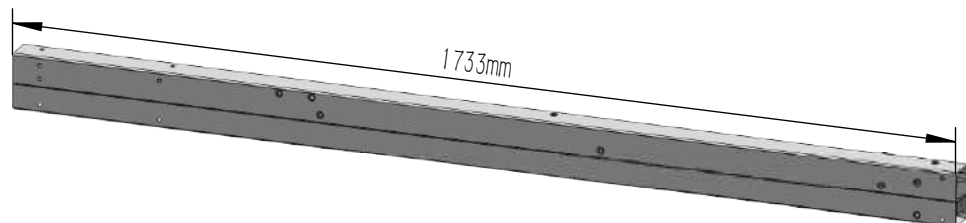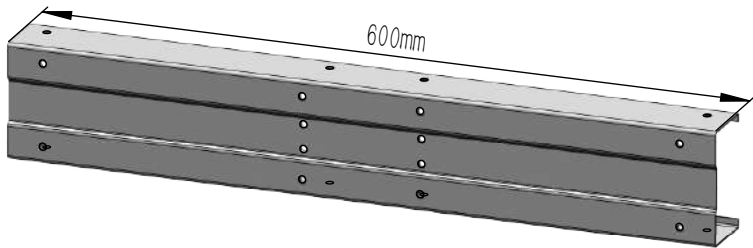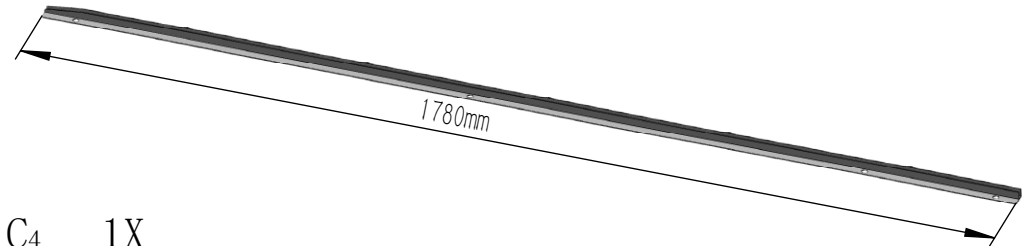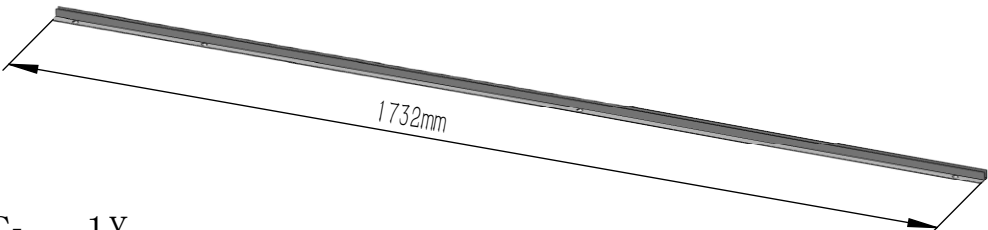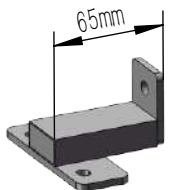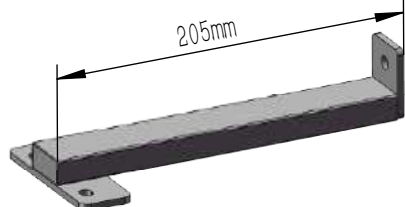


 <p>B₅ 1X</p>	 <p>B₆ 1X</p>	 <p>B₇ 6X</p>	 <p>B₈ 1X</p>	 <p>B₉ 1X</p>
 <p>C₁ 1X</p>			 <p>C₂ 1X</p>	
 <p>C₃ 2X</p>			 <p>C₄ 1X</p>	
 <p>C₅ 1X</p>			 <p>C₆ 2X</p>	 <p>C₇ 2X</p>
 <p>D₁ 1X</p>			 <p>D₂ 1X</p>	

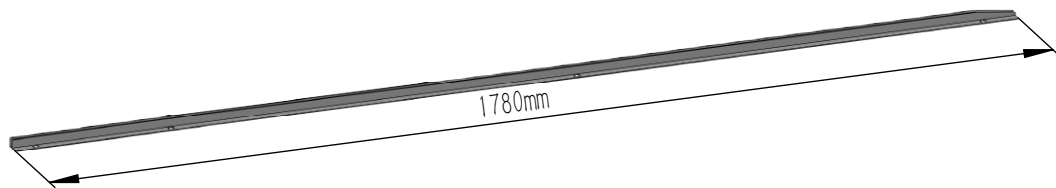


D₃ 1X

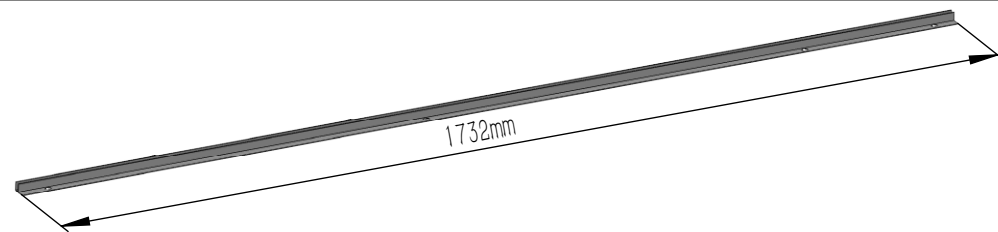


D₄ 1X

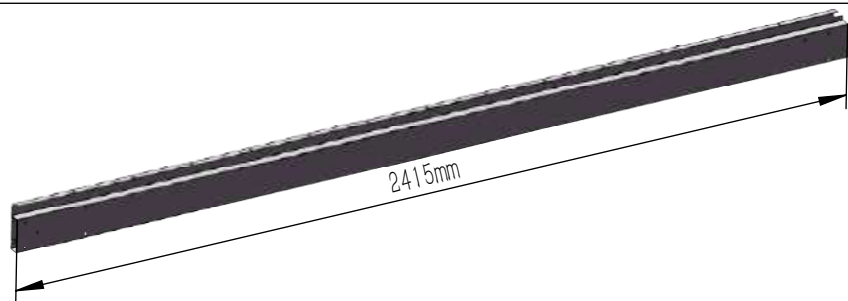


E₁ 1X

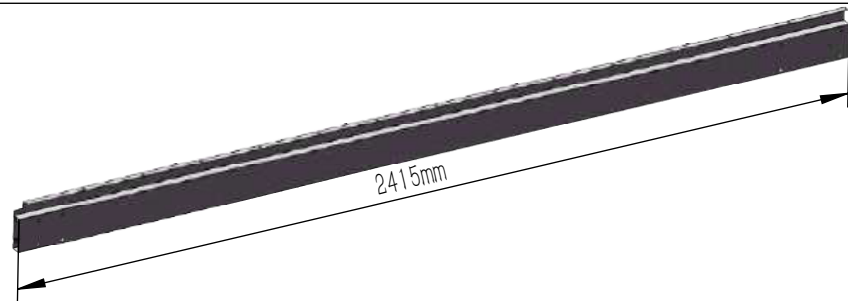

E₂ 1X

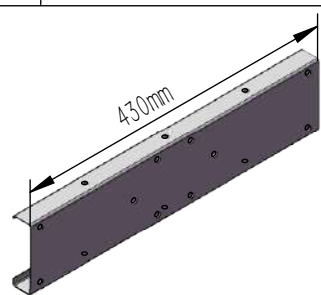

E₃ 3X

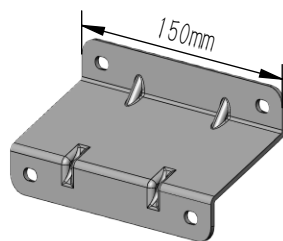


E₄ 1X




E₅ 2X



E₆ 2X

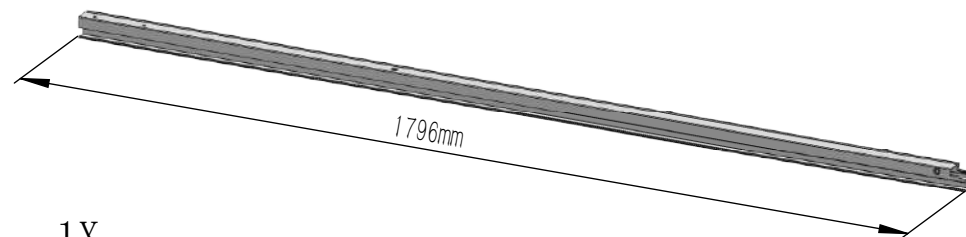













F₁ 1X

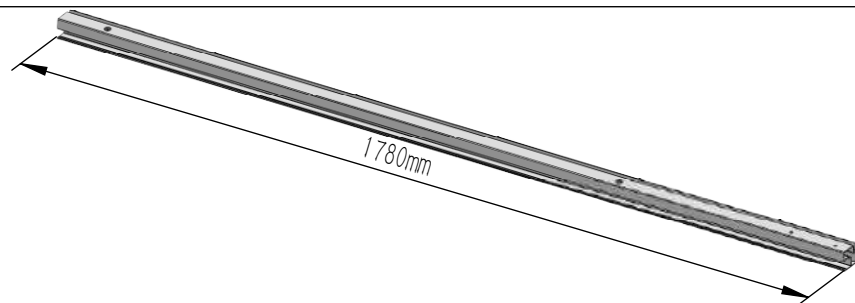


F₂ 1X




F₃ 2X

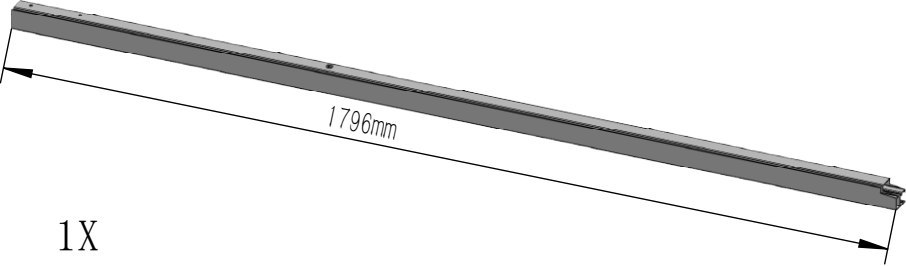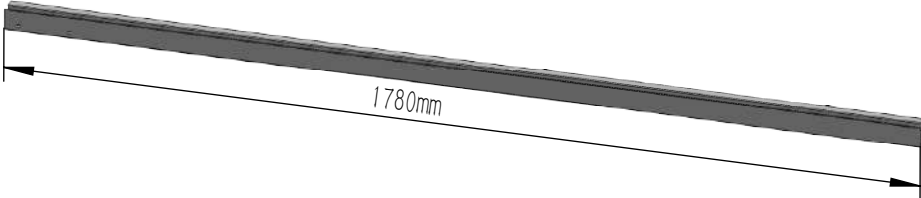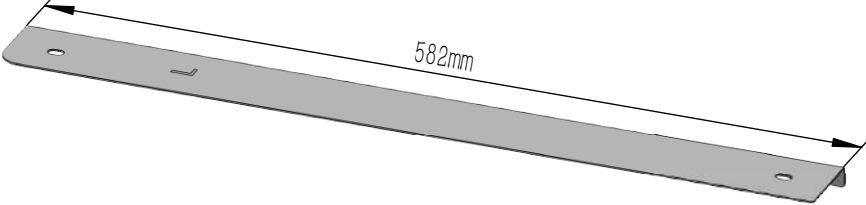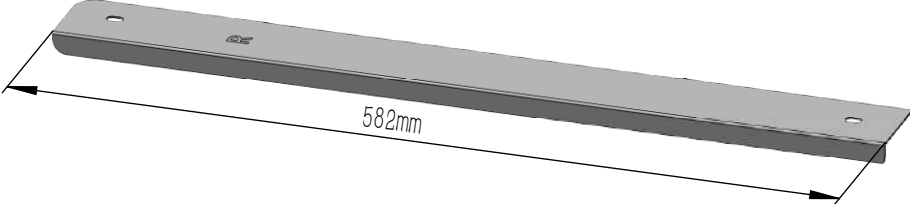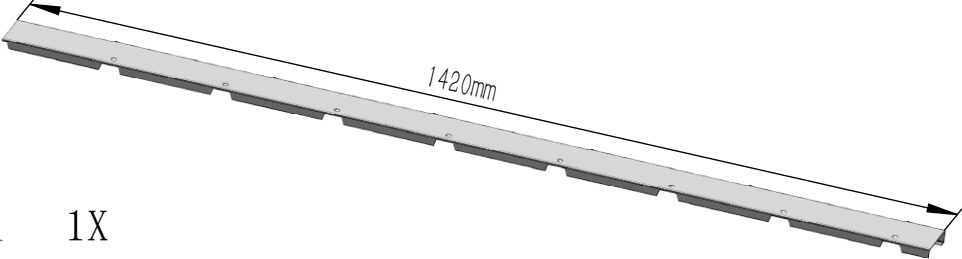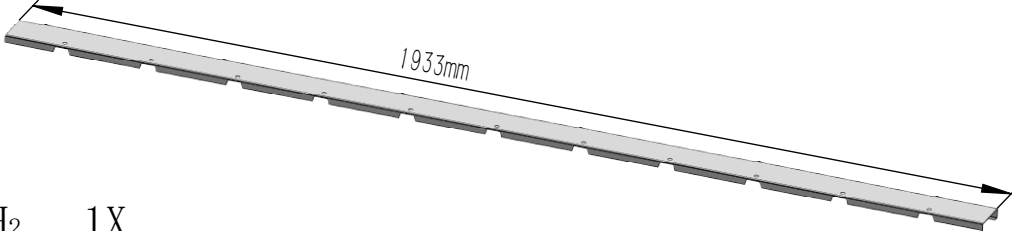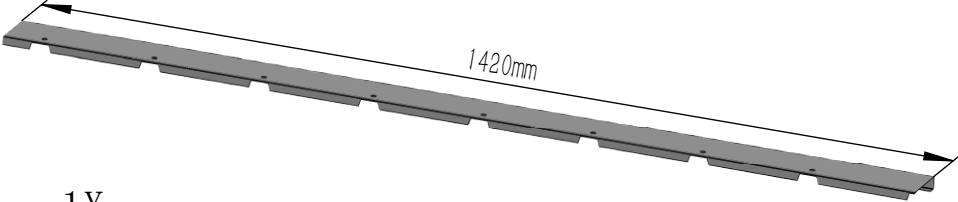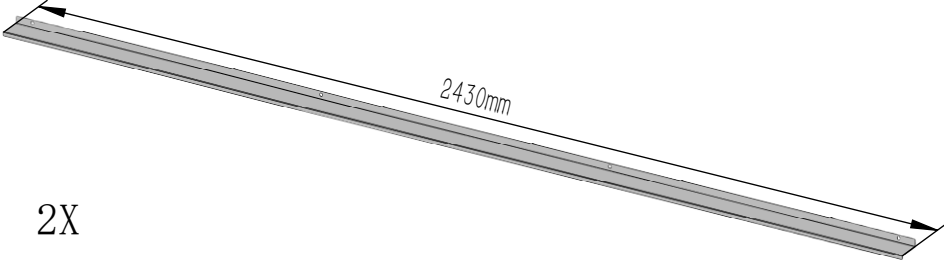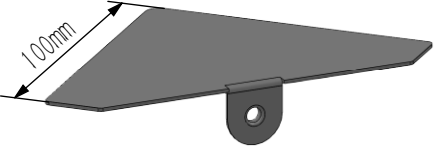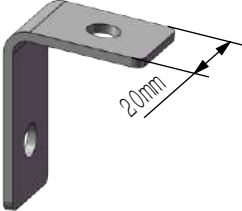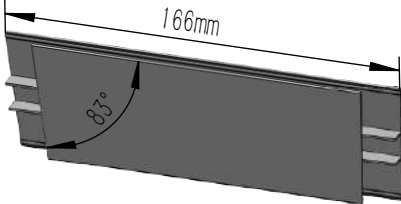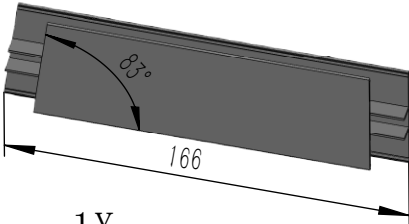 <p>F₄ 1X</p>	 <p>F₅ 1X</p>
 <p>G₁ 1X</p>	 <p>G₂ 1X</p>
 <p>H₁ 1X</p>	 <p>H₂ 1X</p>
 <p>H₃ 1X</p>	 <p>H₄ 2X</p>
 <p>I₁ 2X</p>	 <p>I₂ 6X</p>
 <p>J₁ 1X</p>	 <p>J₂ 1X</p>


J₃ 1X

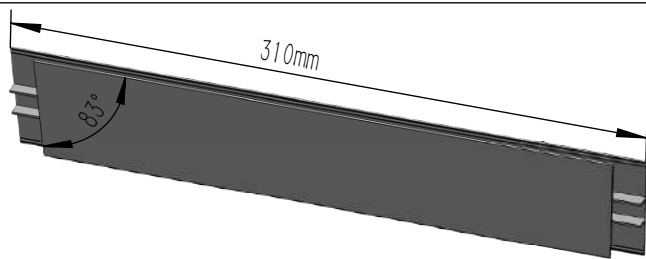


J₄ 1X

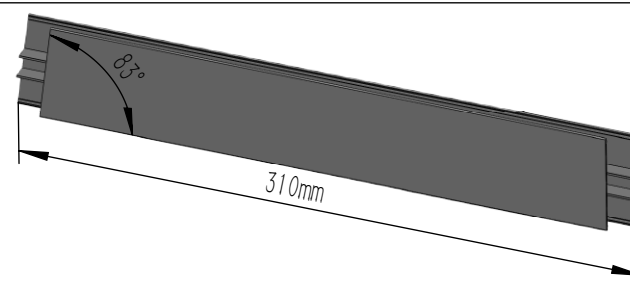


J₅ 1X

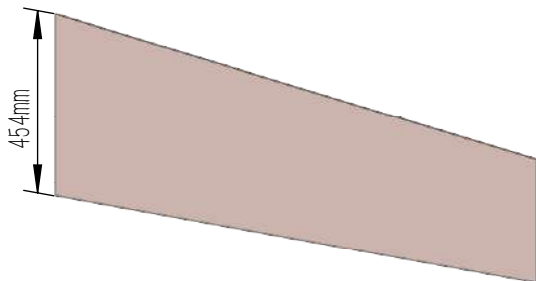


J₆ 1X

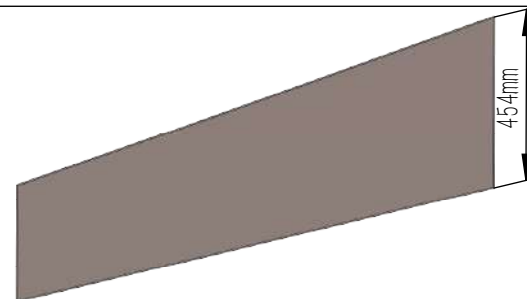


J₇ 1X

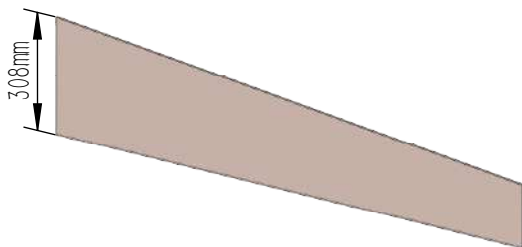


J₈ 1X

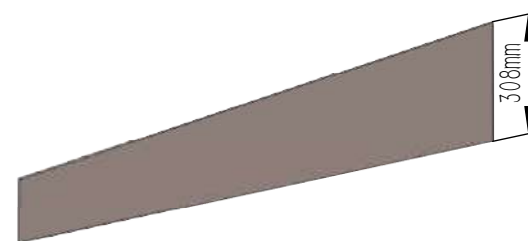


J₉ 1X

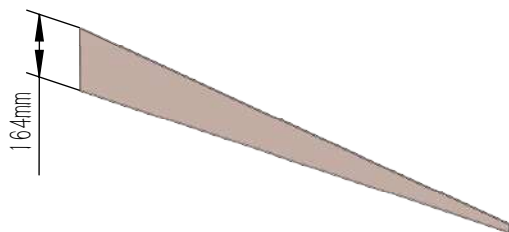

J₁₀ 1X










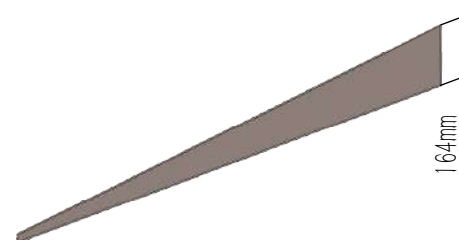


K₁ 6X

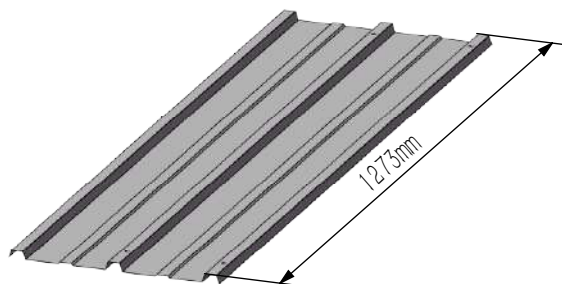


K₂ 24X

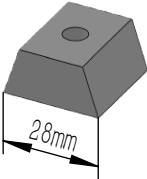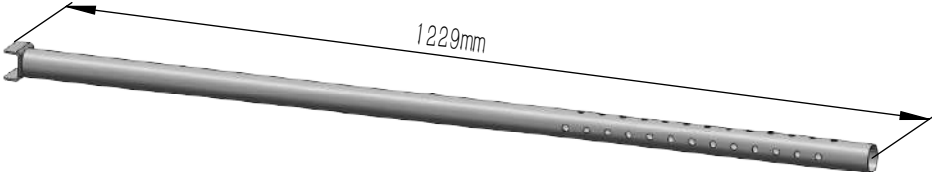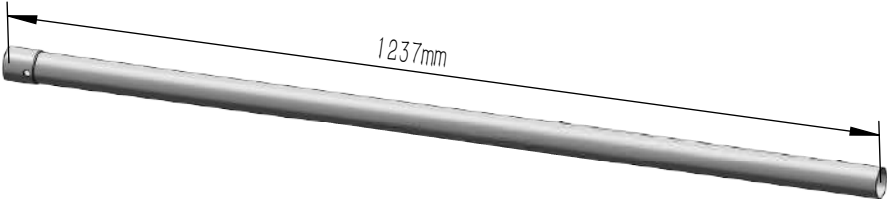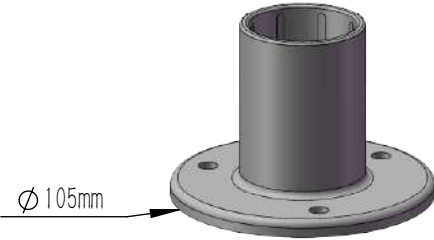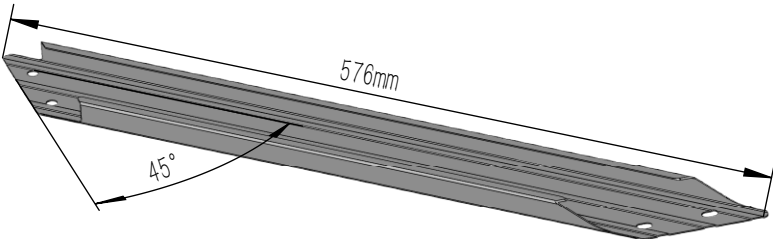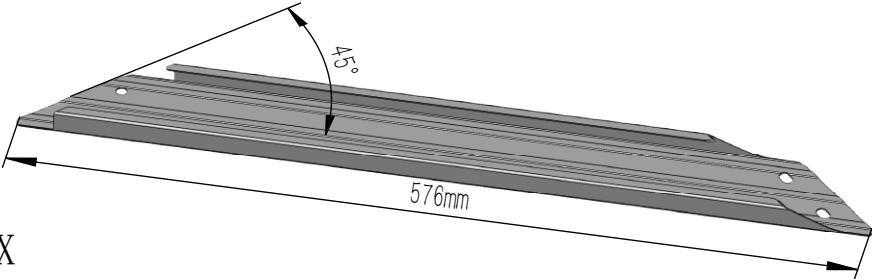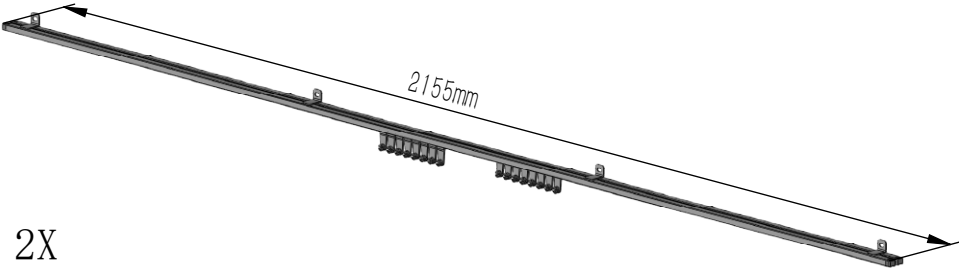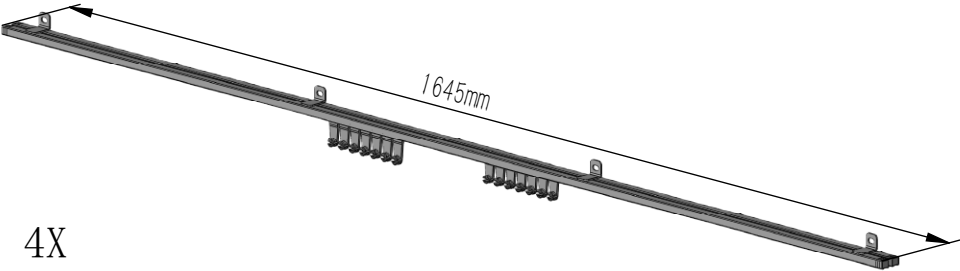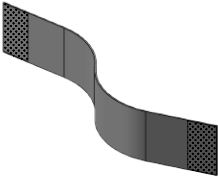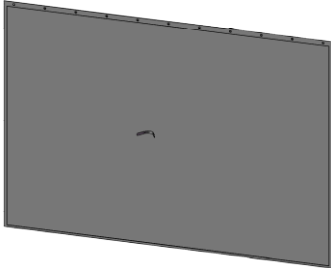

<div data-bbox="499 105 645 284">  </div> <div data-bbox="51 280 241 320"> <p>K₃ 108X</p> </div>	<div data-bbox="1216 76 2145 248">  </div> <div data-bbox="1137 260 1281 300"> <p>L₁ 2X</p> </div>
<div data-bbox="159 384 1043 584">  </div> <div data-bbox="56 587 201 627"> <p>L₂ 2X</p> </div>	<div data-bbox="1422 379 1854 619">  </div> <div data-bbox="1137 587 1281 627"> <p>L₃ 2X</p> </div>
<div data-bbox="235 667 1005 906">  </div> <div data-bbox="56 890 201 930"> <p>M₁ 2X</p> </div>	<div data-bbox="1265 659 2134 938">  </div> <div data-bbox="1137 890 1281 930"> <p>M₂ 2X</p> </div>
<div data-bbox="141 962 1097 1230">  </div> <div data-bbox="56 1189 201 1228"> <p>N₁ 2X</p> </div>	<div data-bbox="1216 967 2172 1238">  </div> <div data-bbox="1137 1189 1281 1228"> <p>N₂ 4X</p> </div>
<div data-bbox="468 1302 685 1479">  </div> <div data-bbox="56 1497 201 1536"> <p>O₁ 5X</p> </div>	<div data-bbox="1543 1267 1872 1536">  </div> <div data-bbox="1137 1497 1281 1536"> <p>O₂ 1X</p> </div>


O₃

1X

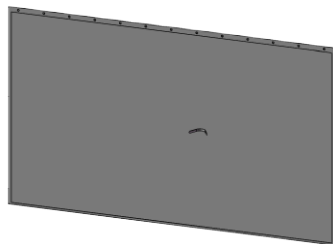


O₄

1X

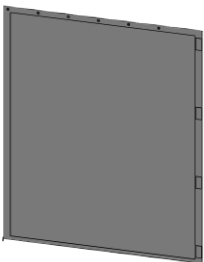


O₅

1X

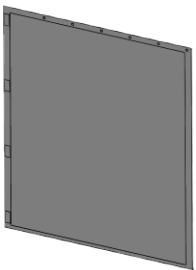


O₆

1X

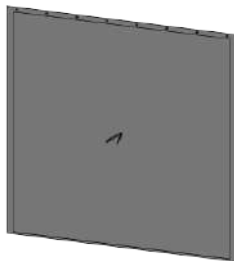


O₇

1X

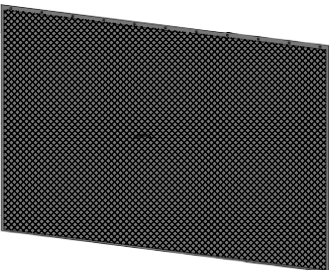


O₈

1X

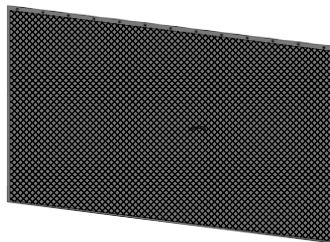


O₉

1X

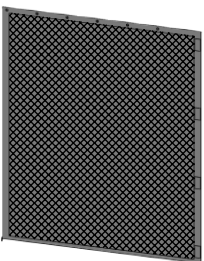


O₁₀

1X

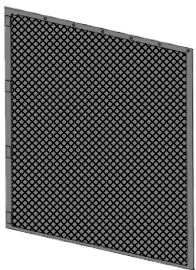


O₁₁

1X

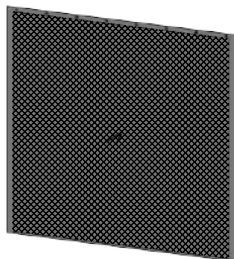


P₁

1X

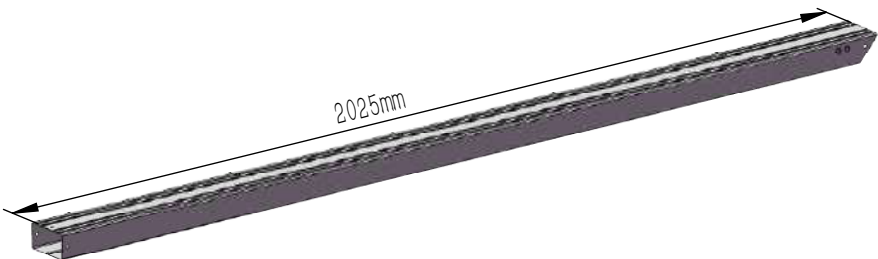


P₂

1X

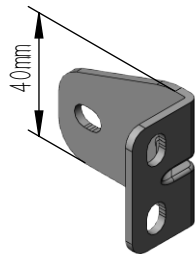


P₃



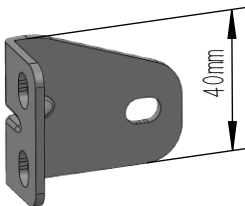








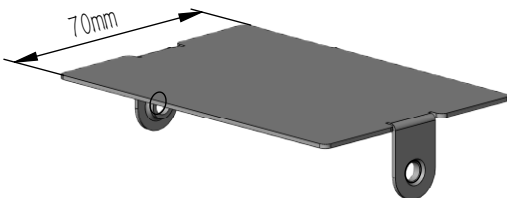



1X


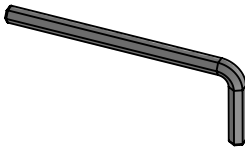
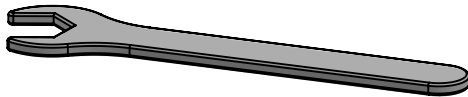



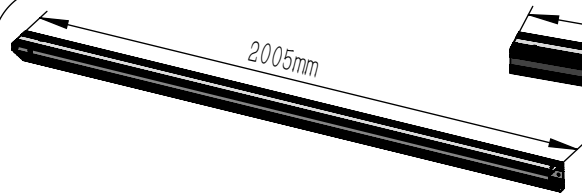
P₄

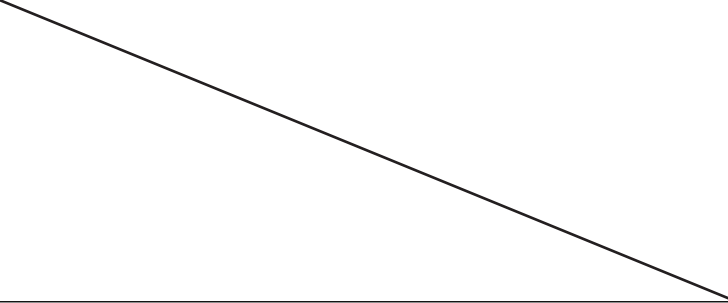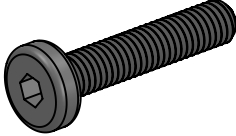1X

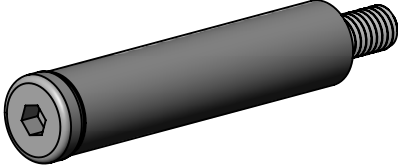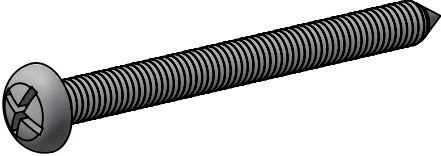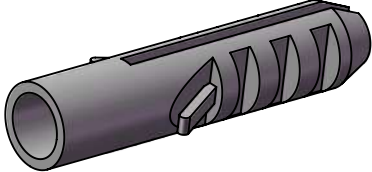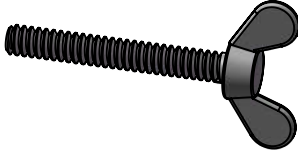


 1# 6 ST4. 8*13	 2# 4 ST5*16	 3# 17 M5*12
 4# 204 M6*16		
 6# 108 M6*30		
 7# 2 M6*30	 8# 8 M6*40	 9# 6 M6*62
 10# 16 ST6*70	 11# 16	 12# 2 M8*60
 13# 2 M8	 14# 2 M8	 15# 108 M6


<div data-bbox="347 135 443 199"></div> <div data-bbox="56 279 712 327"><div>16#</div><div>108</div><div>D12/d6. 2*H2</div></div>	<div data-bbox="1032 92 1276 239"></div> <div data-bbox="788 279 1435 327"><div>17#</div><div>1</div><div>S4</div></div>	<div data-bbox="1666 108 2132 204"></div> <div data-bbox="1514 279 2157 327"><div>18#</div><div>1</div><div>S4</div></div>
<div data-bbox="147 405 654 533"></div> <div data-bbox="56 582 217 630"><div>19#</div><div>2</div></div>		



A1 1X

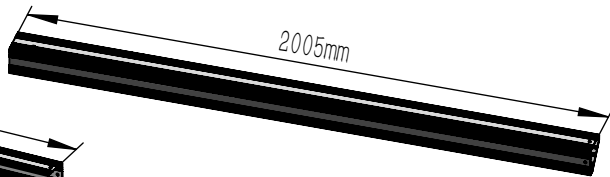


A2 1X




A7 2X






4# 6X

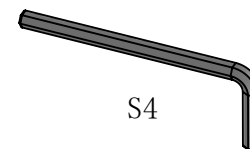


17# 1X

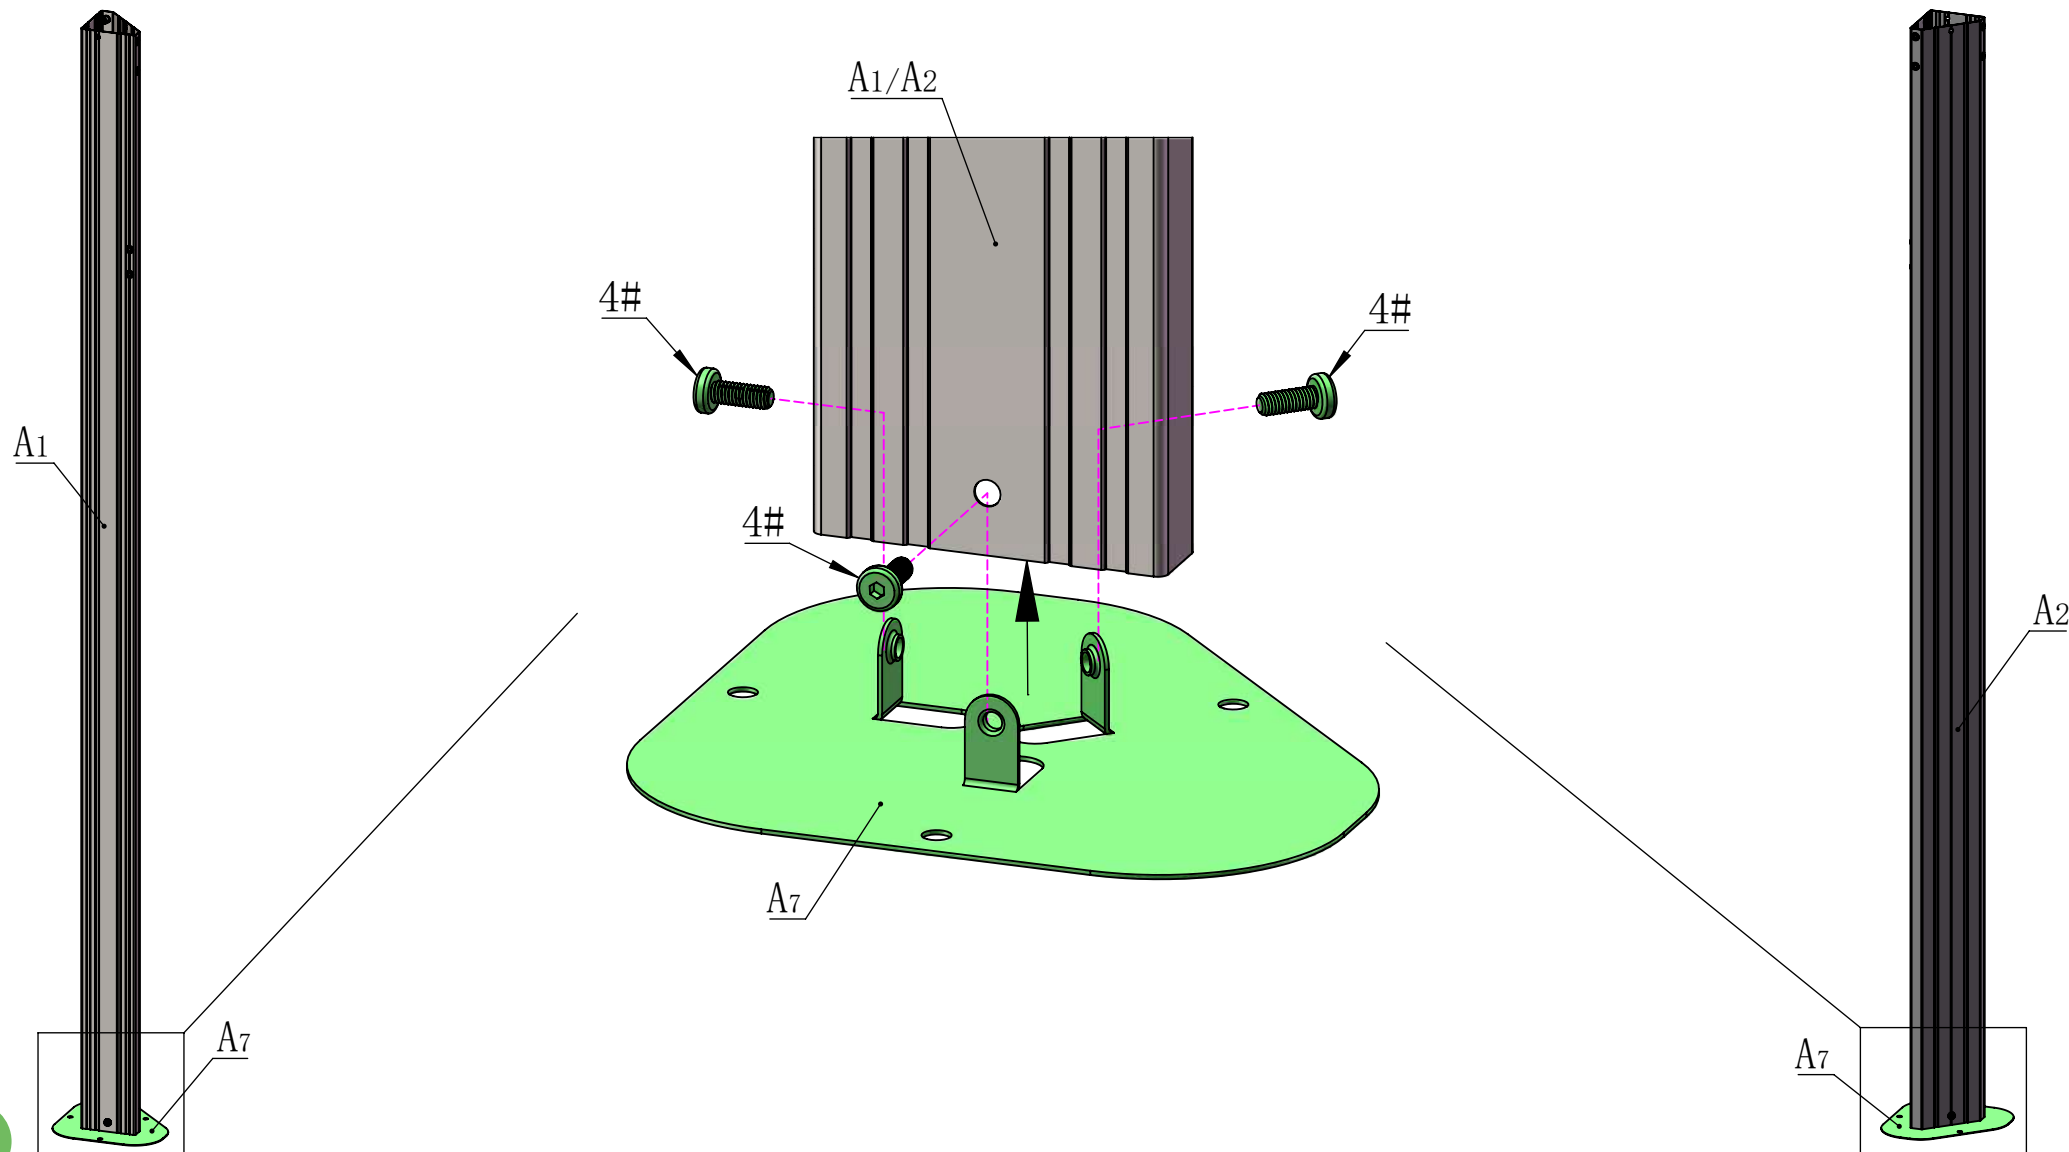

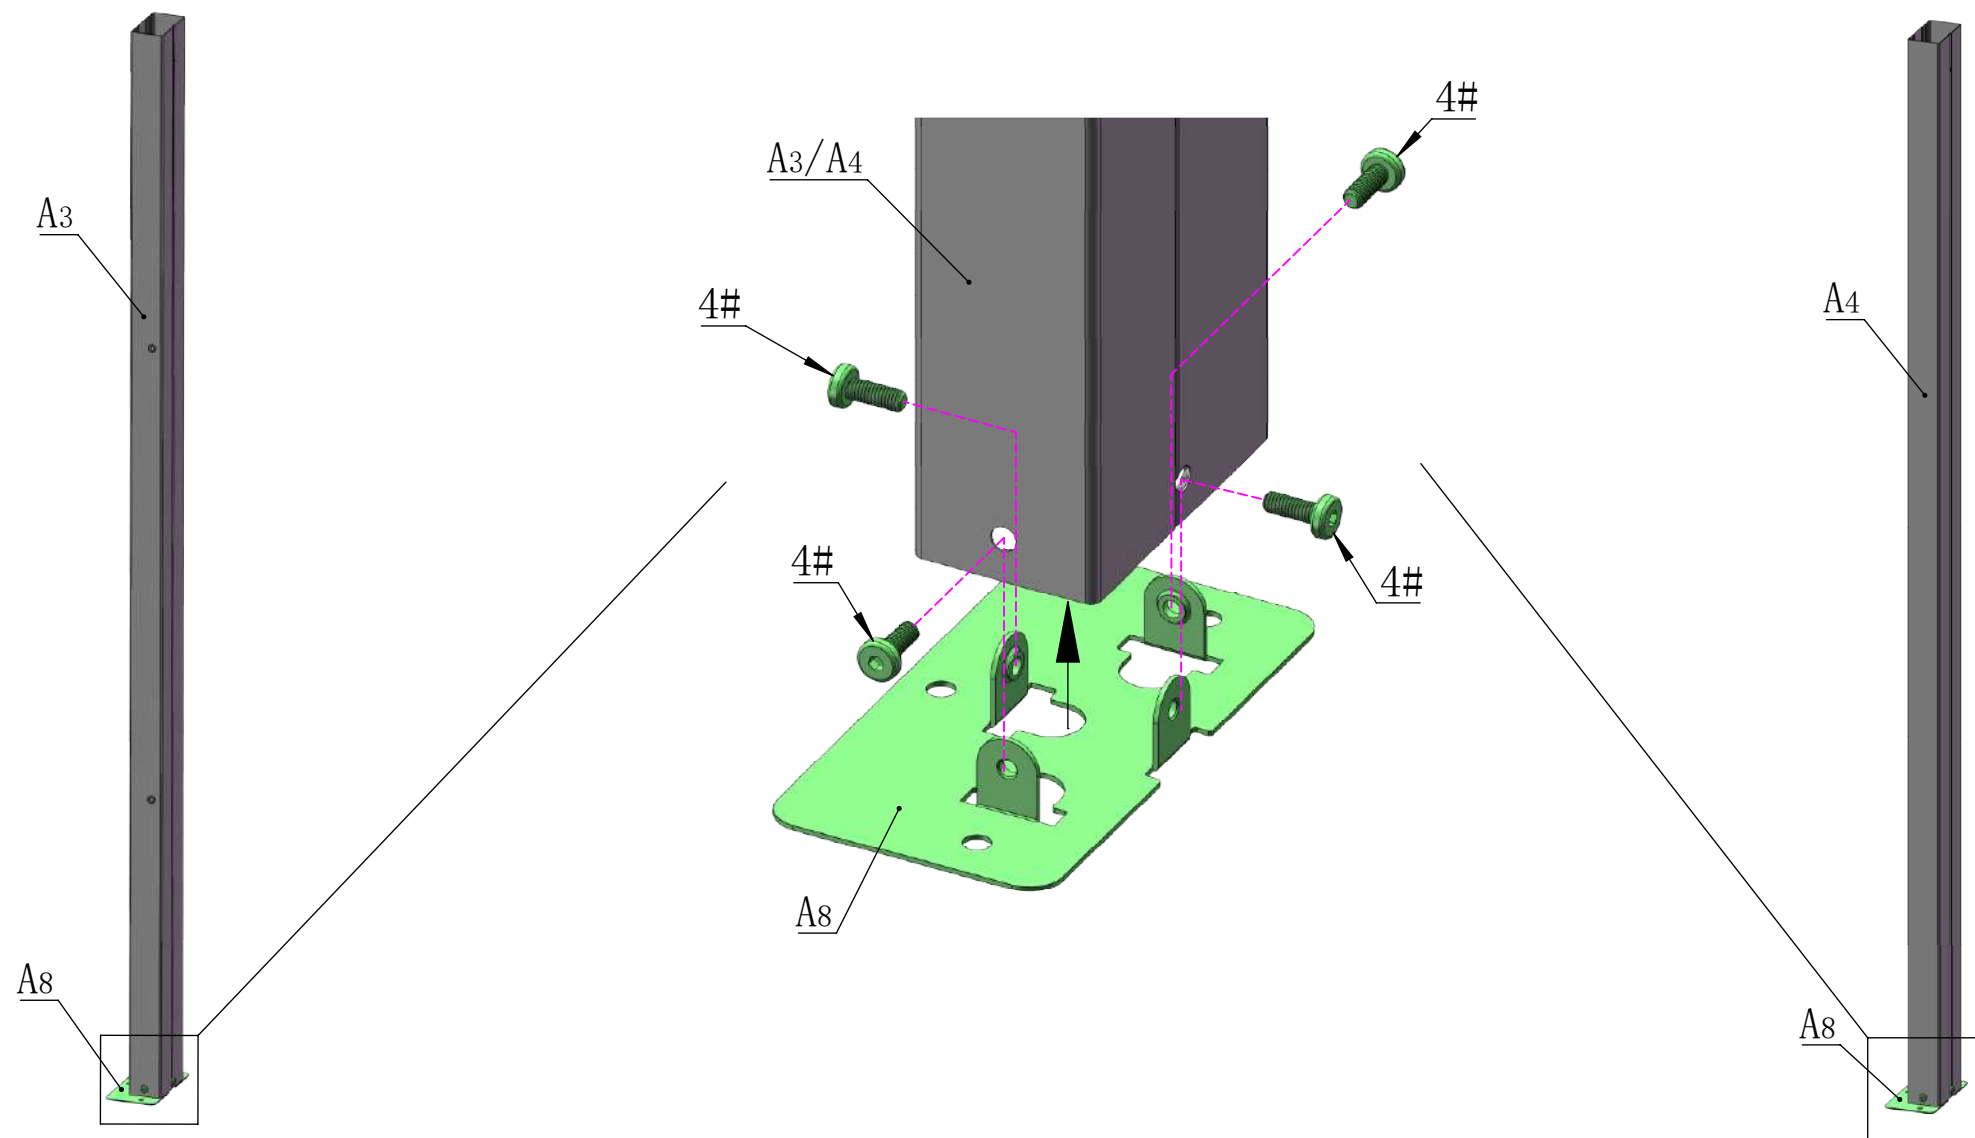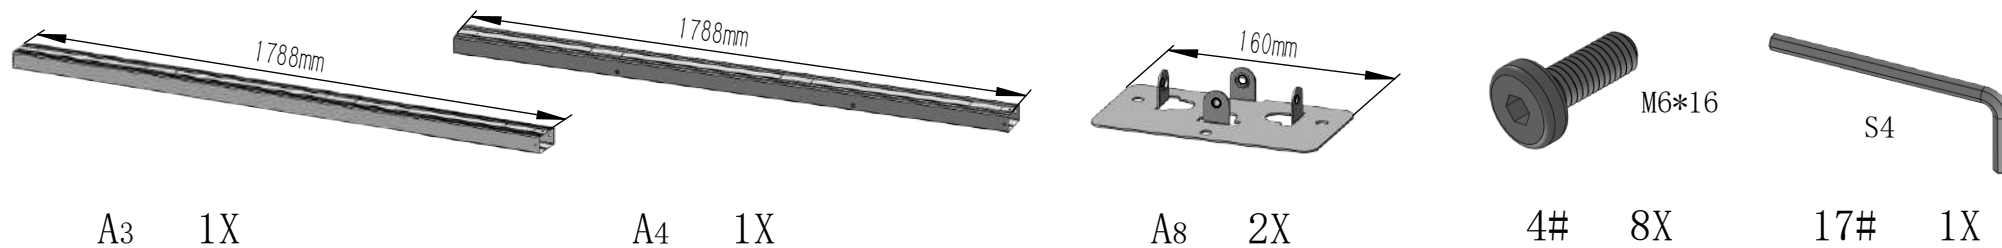

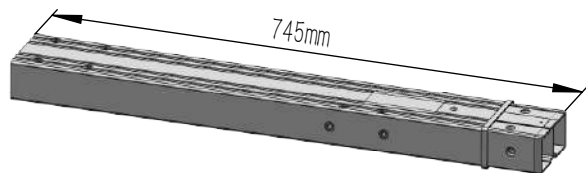

A5 1X

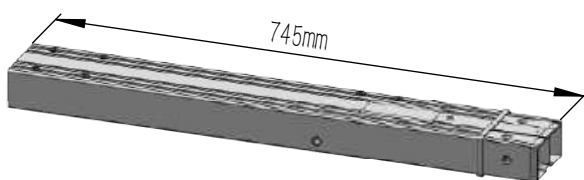



A6 1X




ST5*16

2# 4X

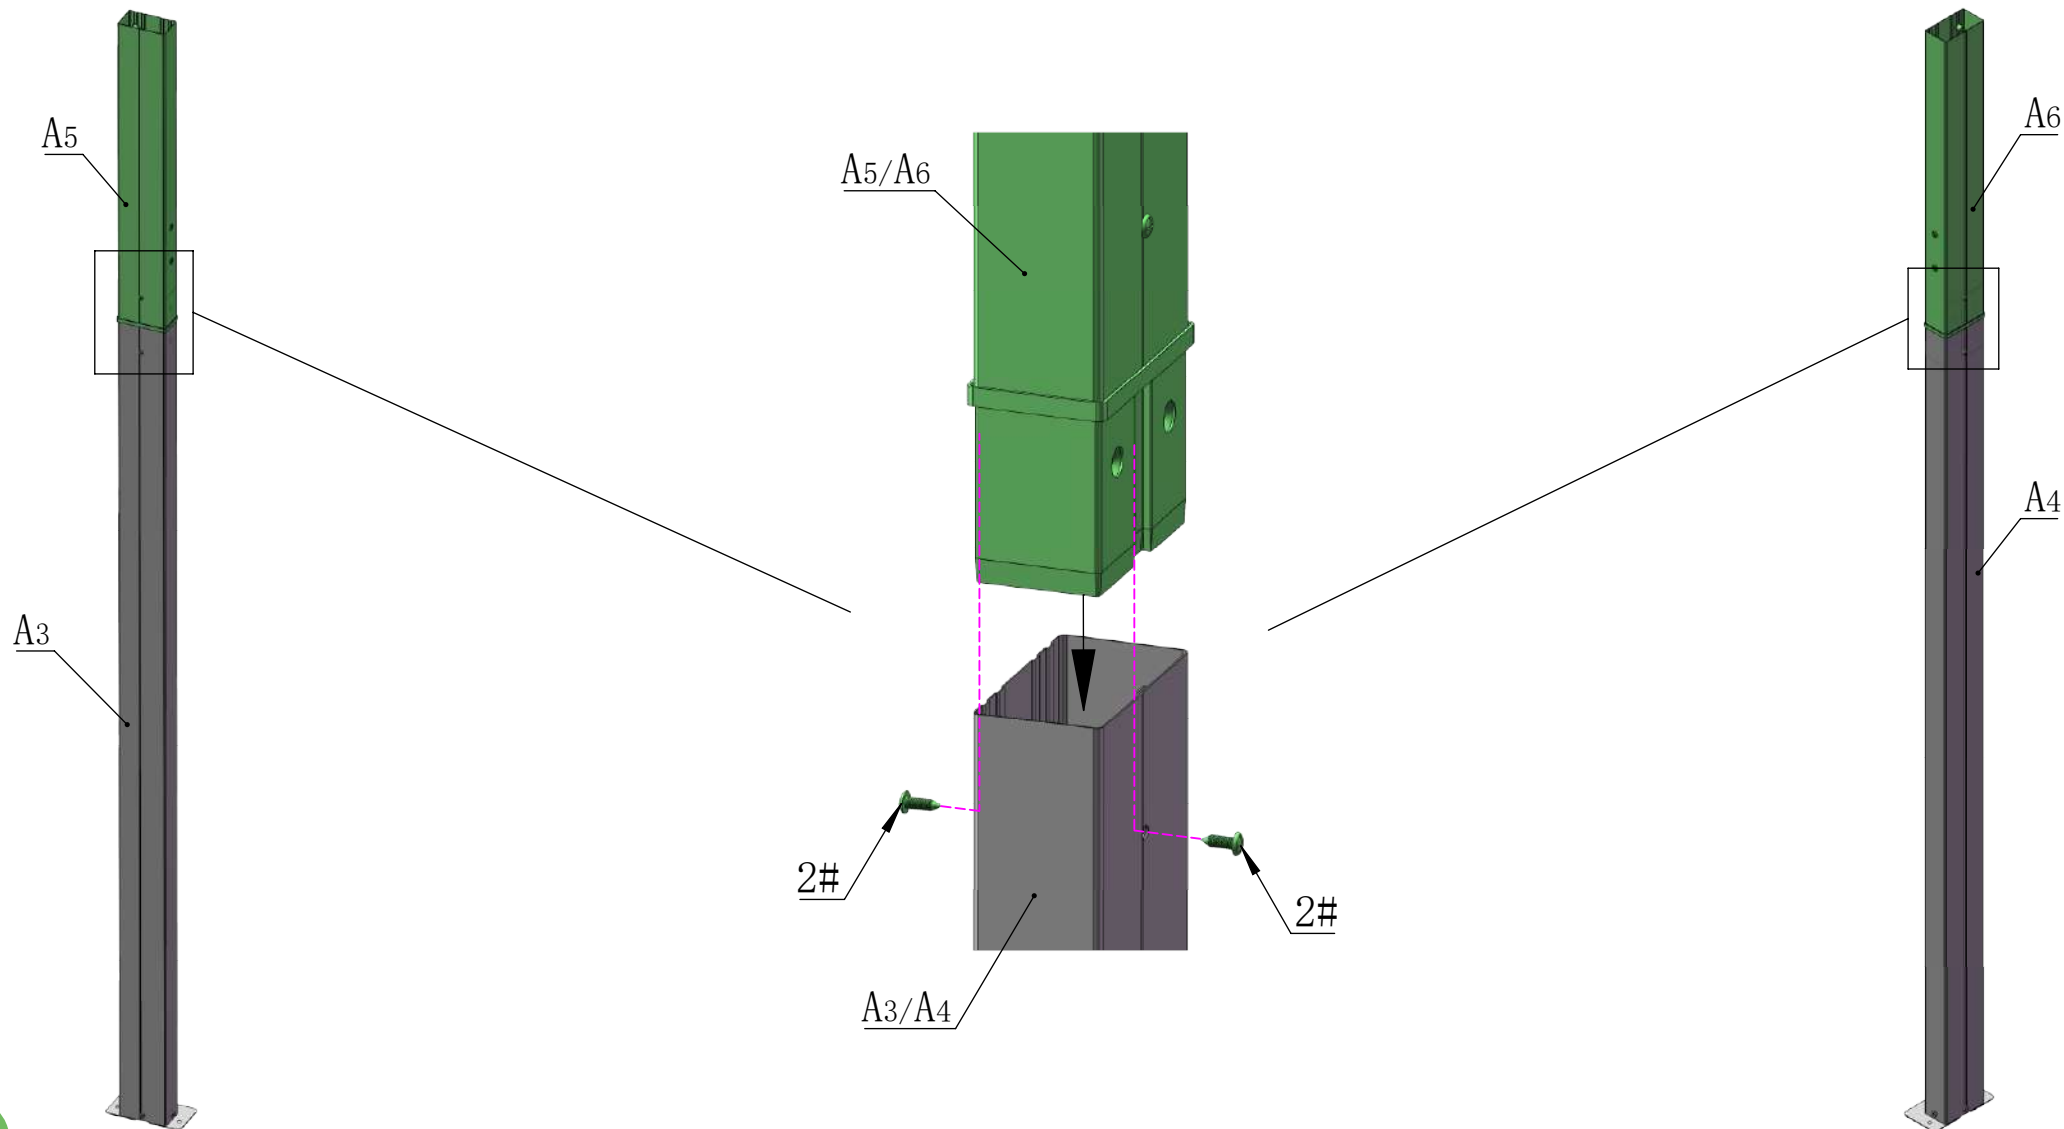


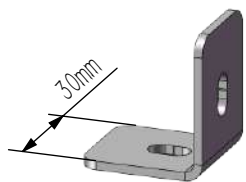

A9 6X

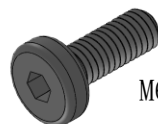



4# 6X

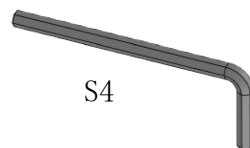


17# 1X

- ▲ (1) If you don't consider fixing it to the wall, you can skip this step.
(This step requires the user to drill holes in the wall for fixation.)
(2) The bracket #A9 is used to fix the post against the wall. You can
assemble only 2 pieces for each post according to the actual installation
situation.

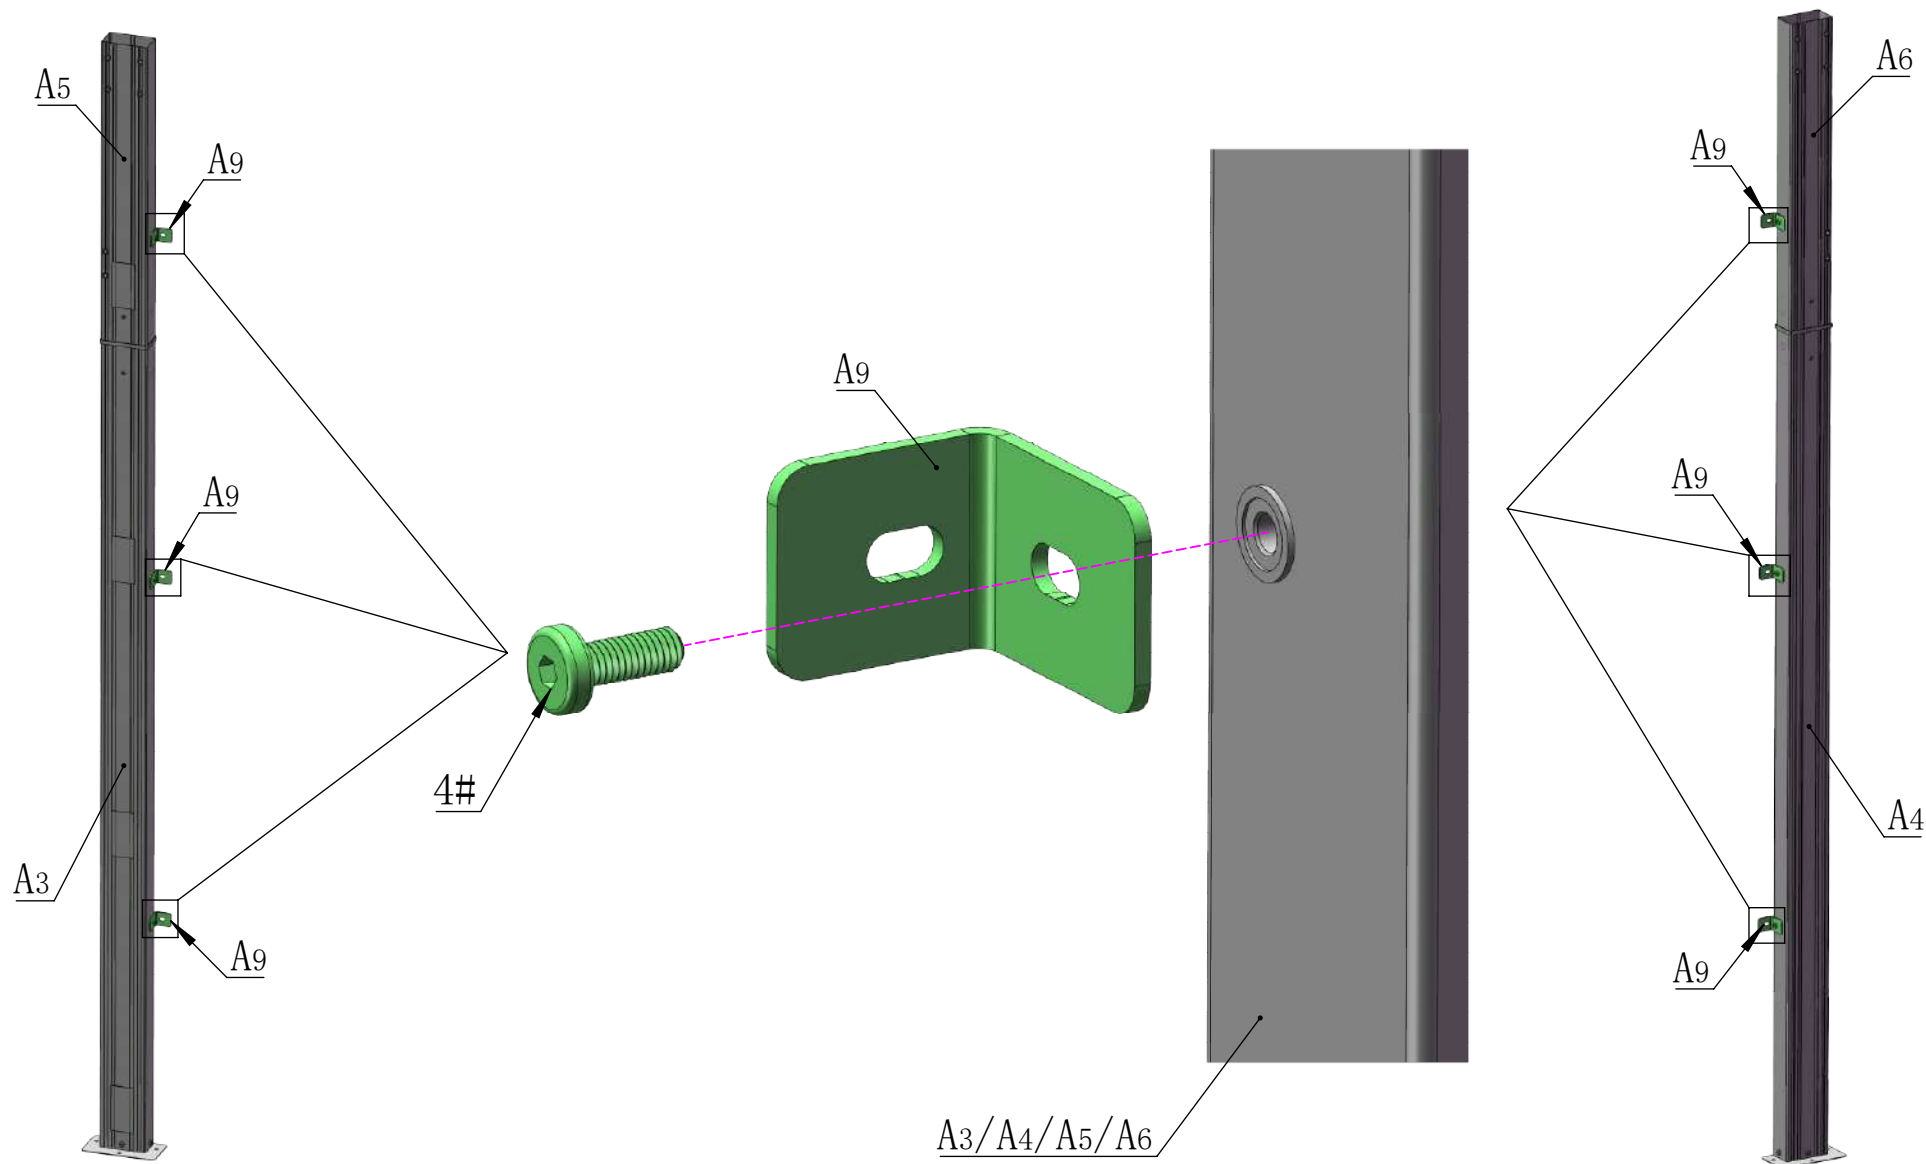


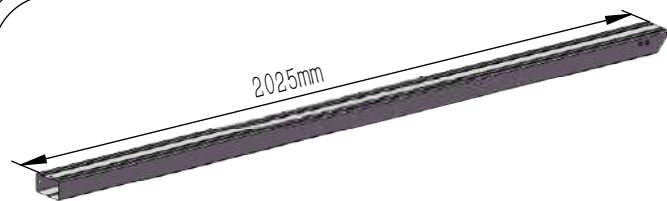


P1 1X

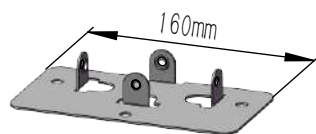

A8 1X

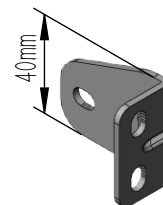


P2 1X

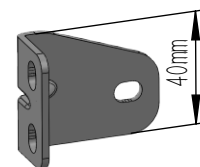



P3 1X




4# 8X


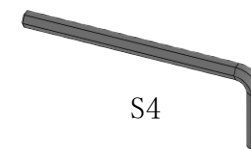


17# 1X

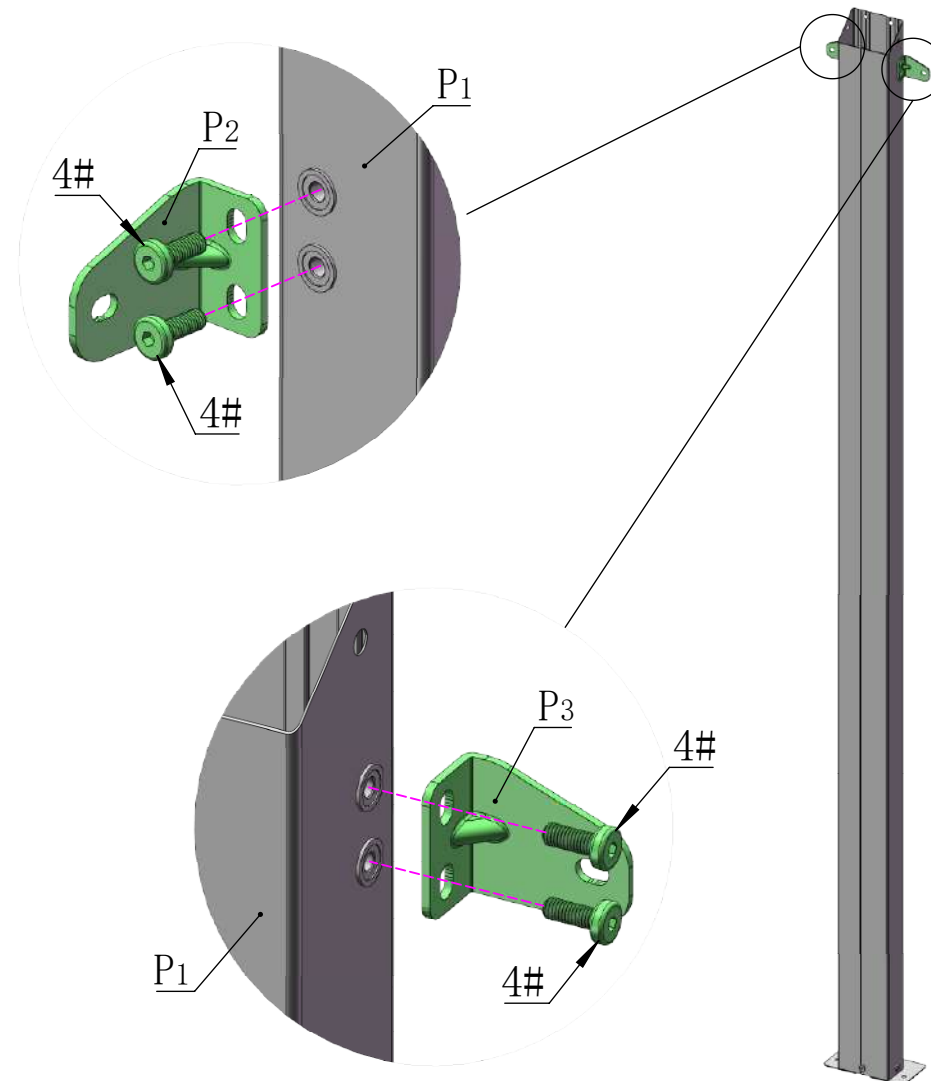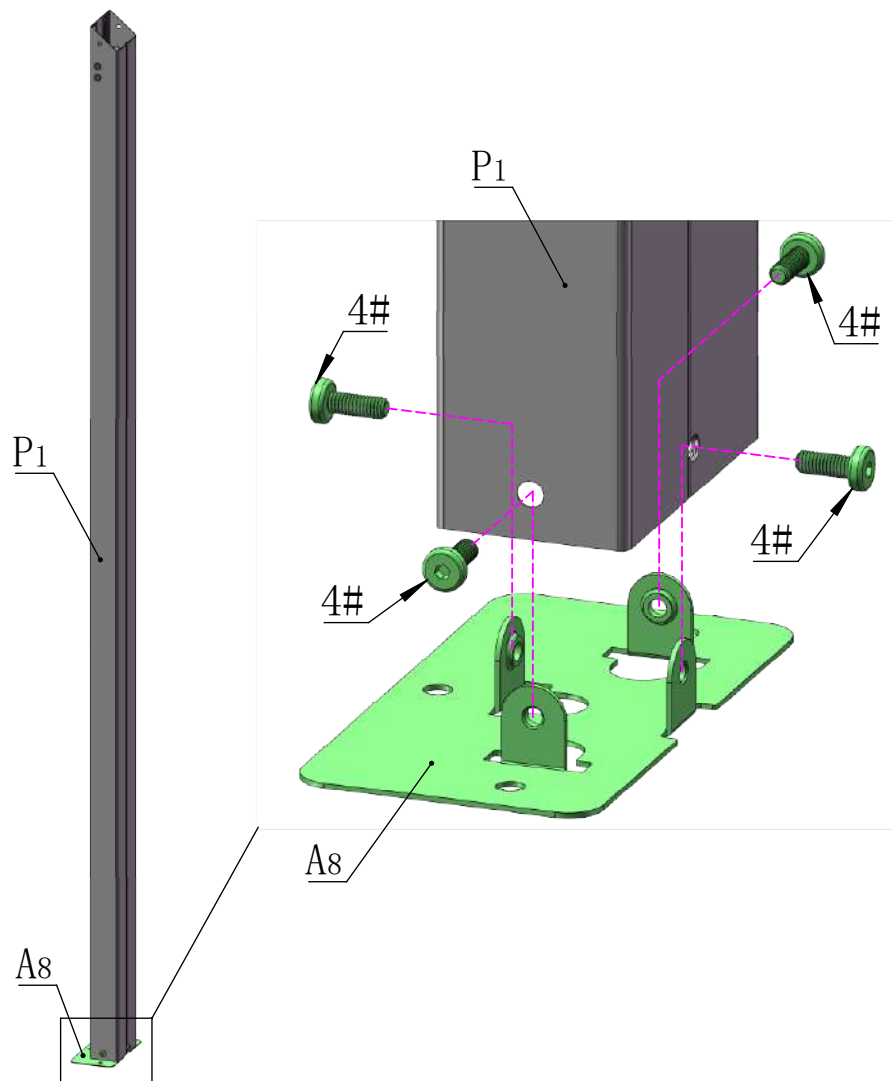


Front Beam Assembly

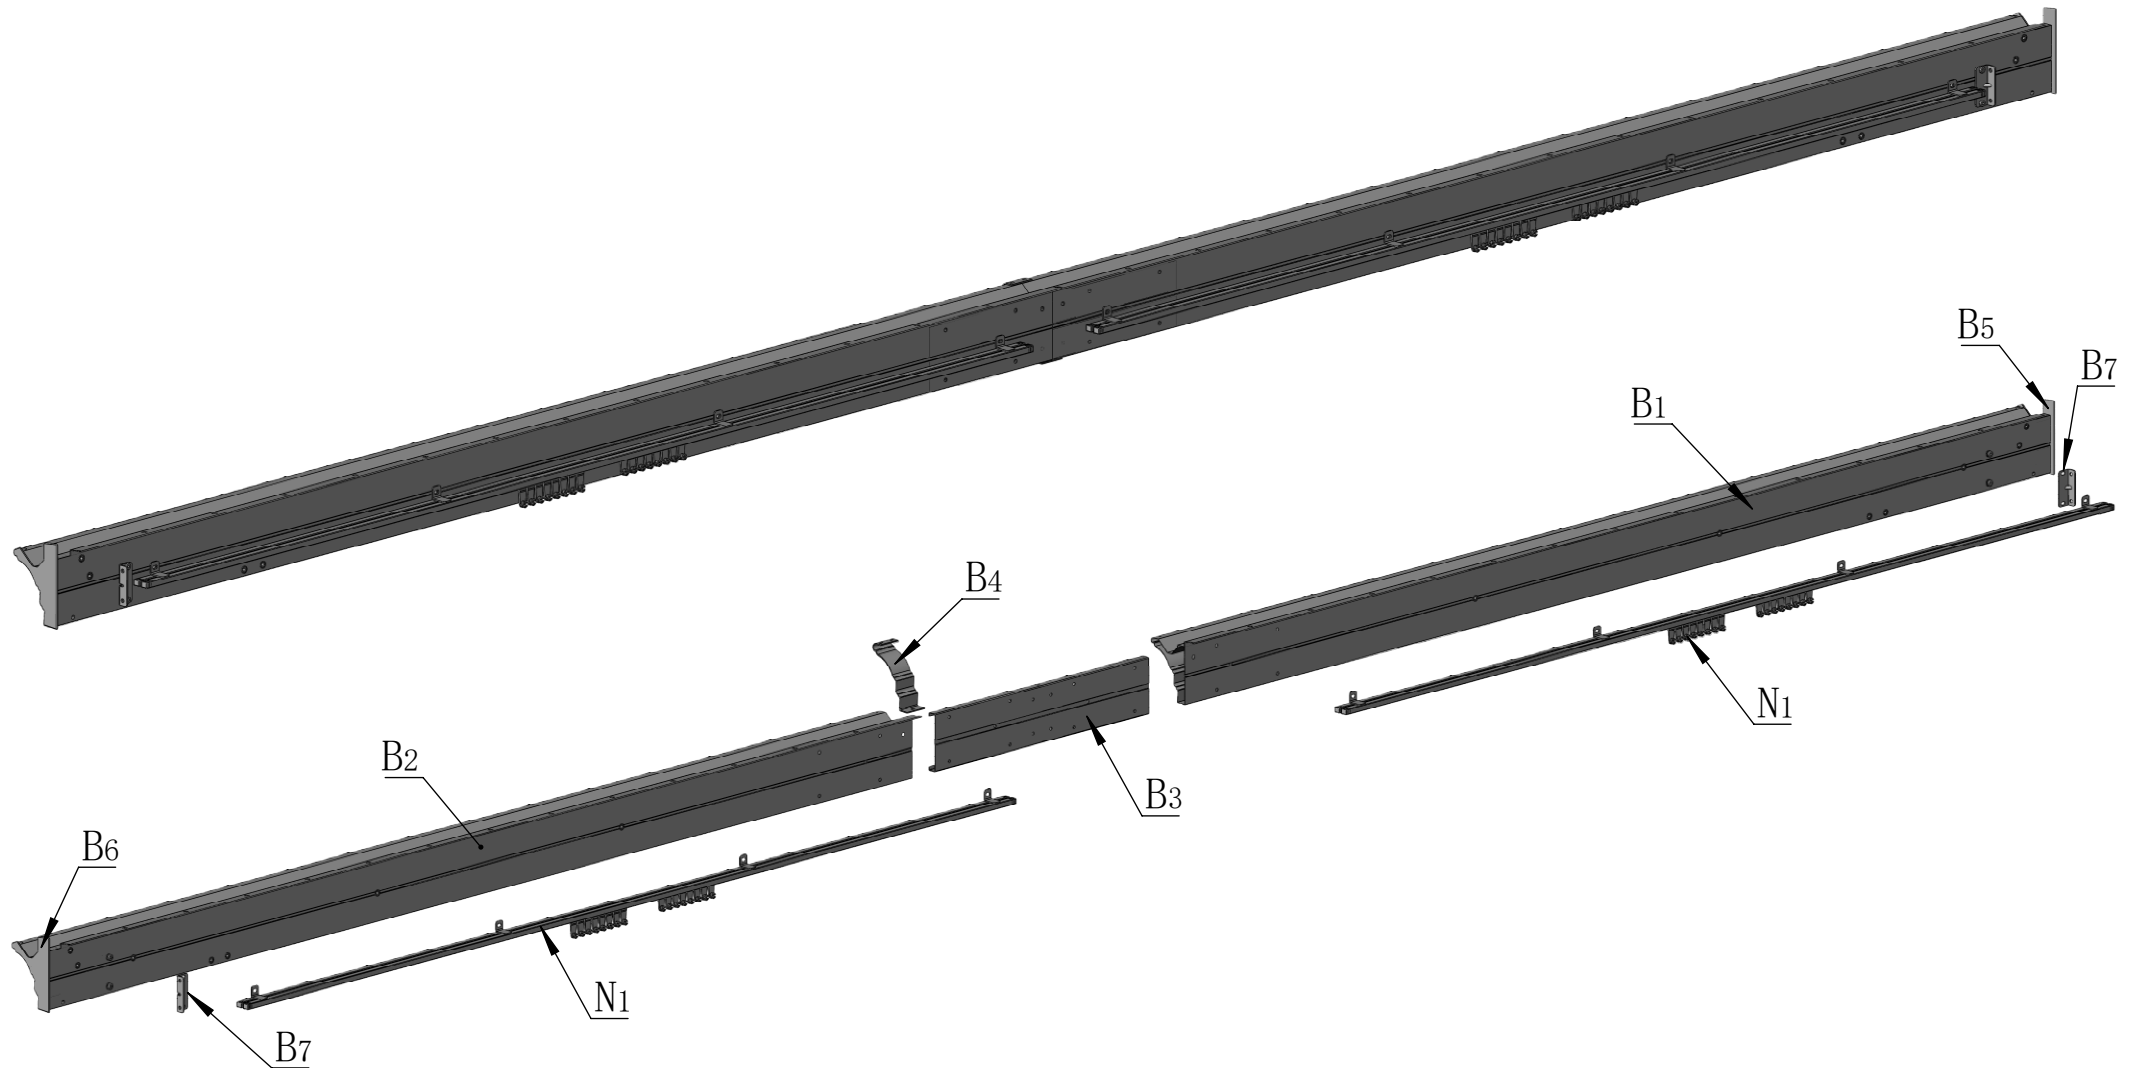


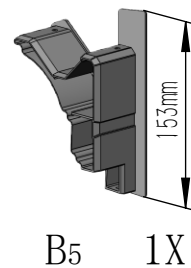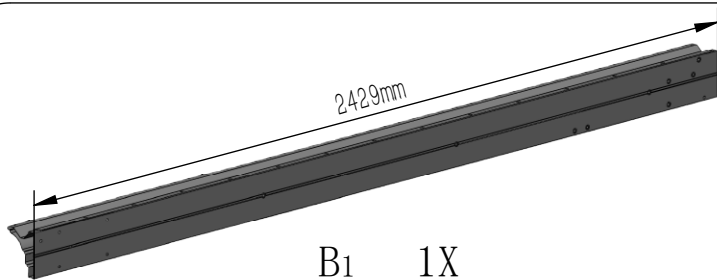

ST4. 8*13

1# 2X

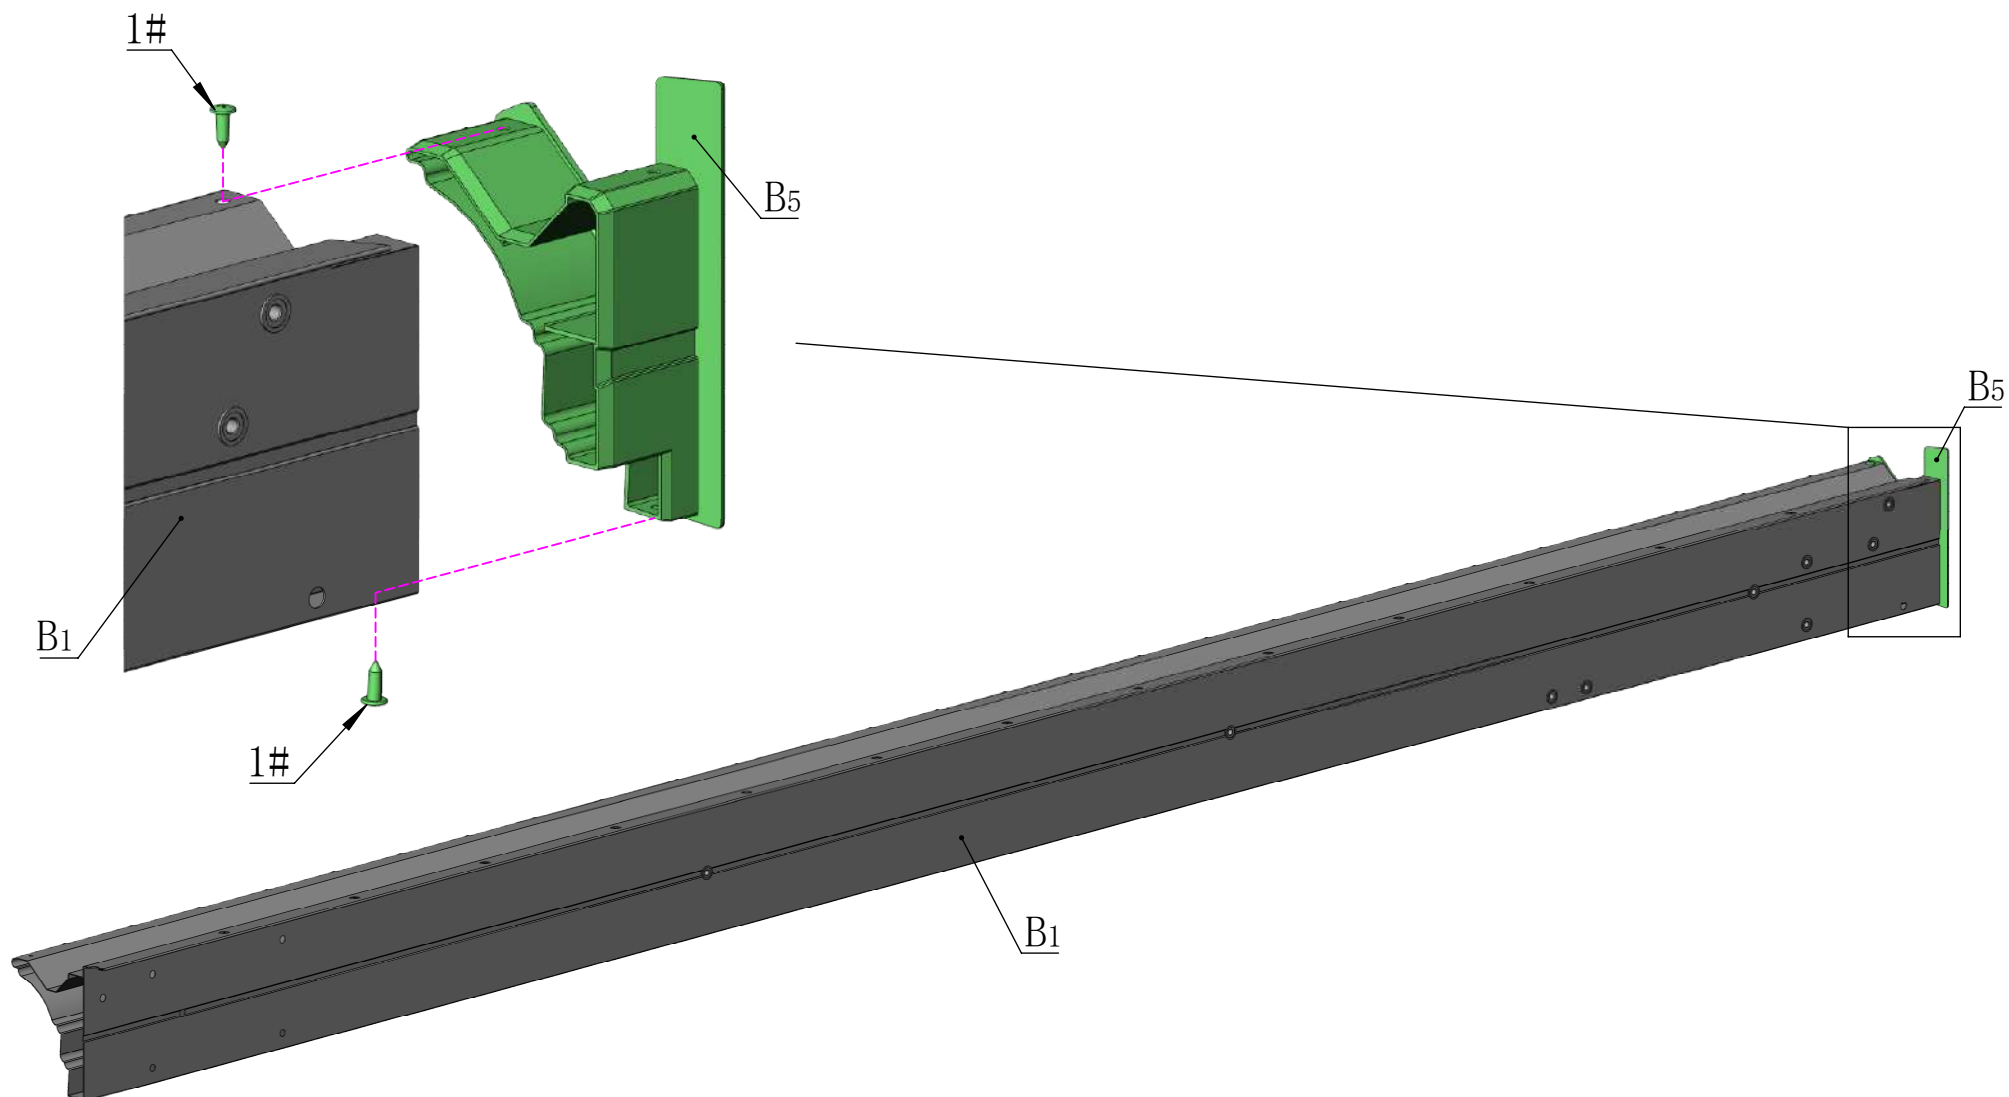

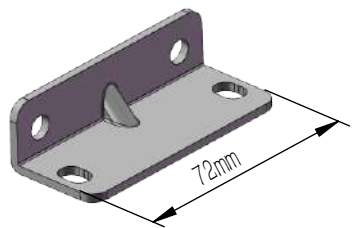


B7 1X




M6*16



4# 2X

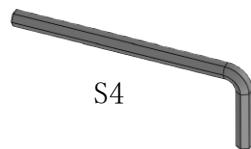

S4


17# 1X

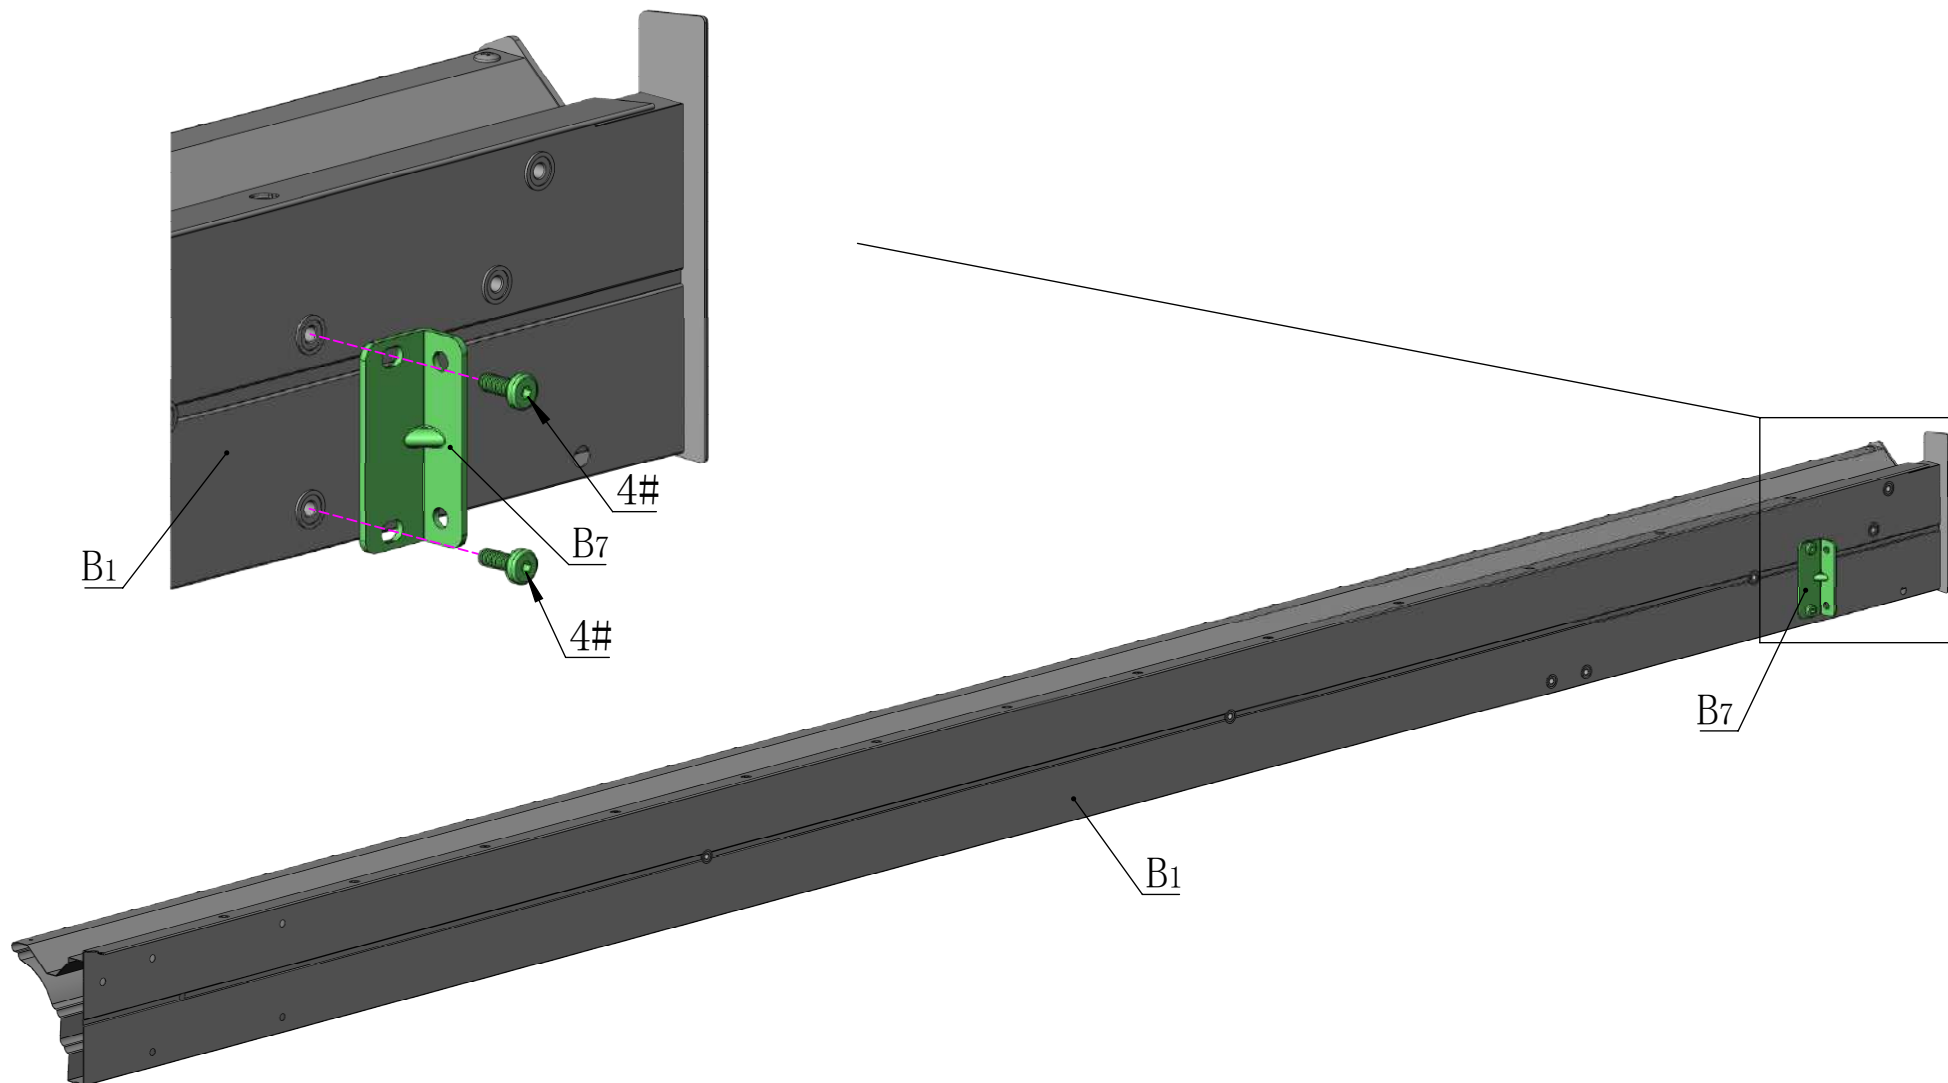


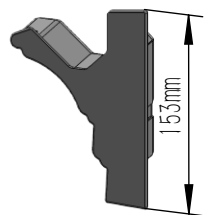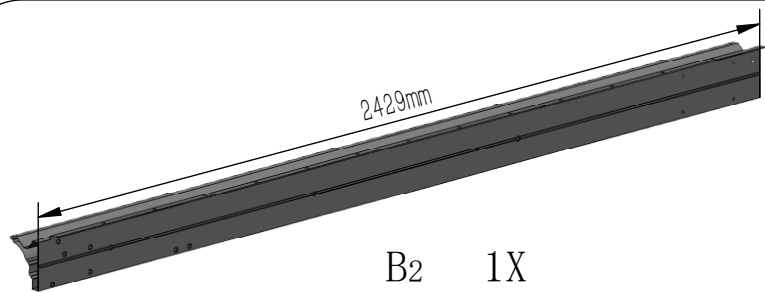

ST4.8*13

1# 2X

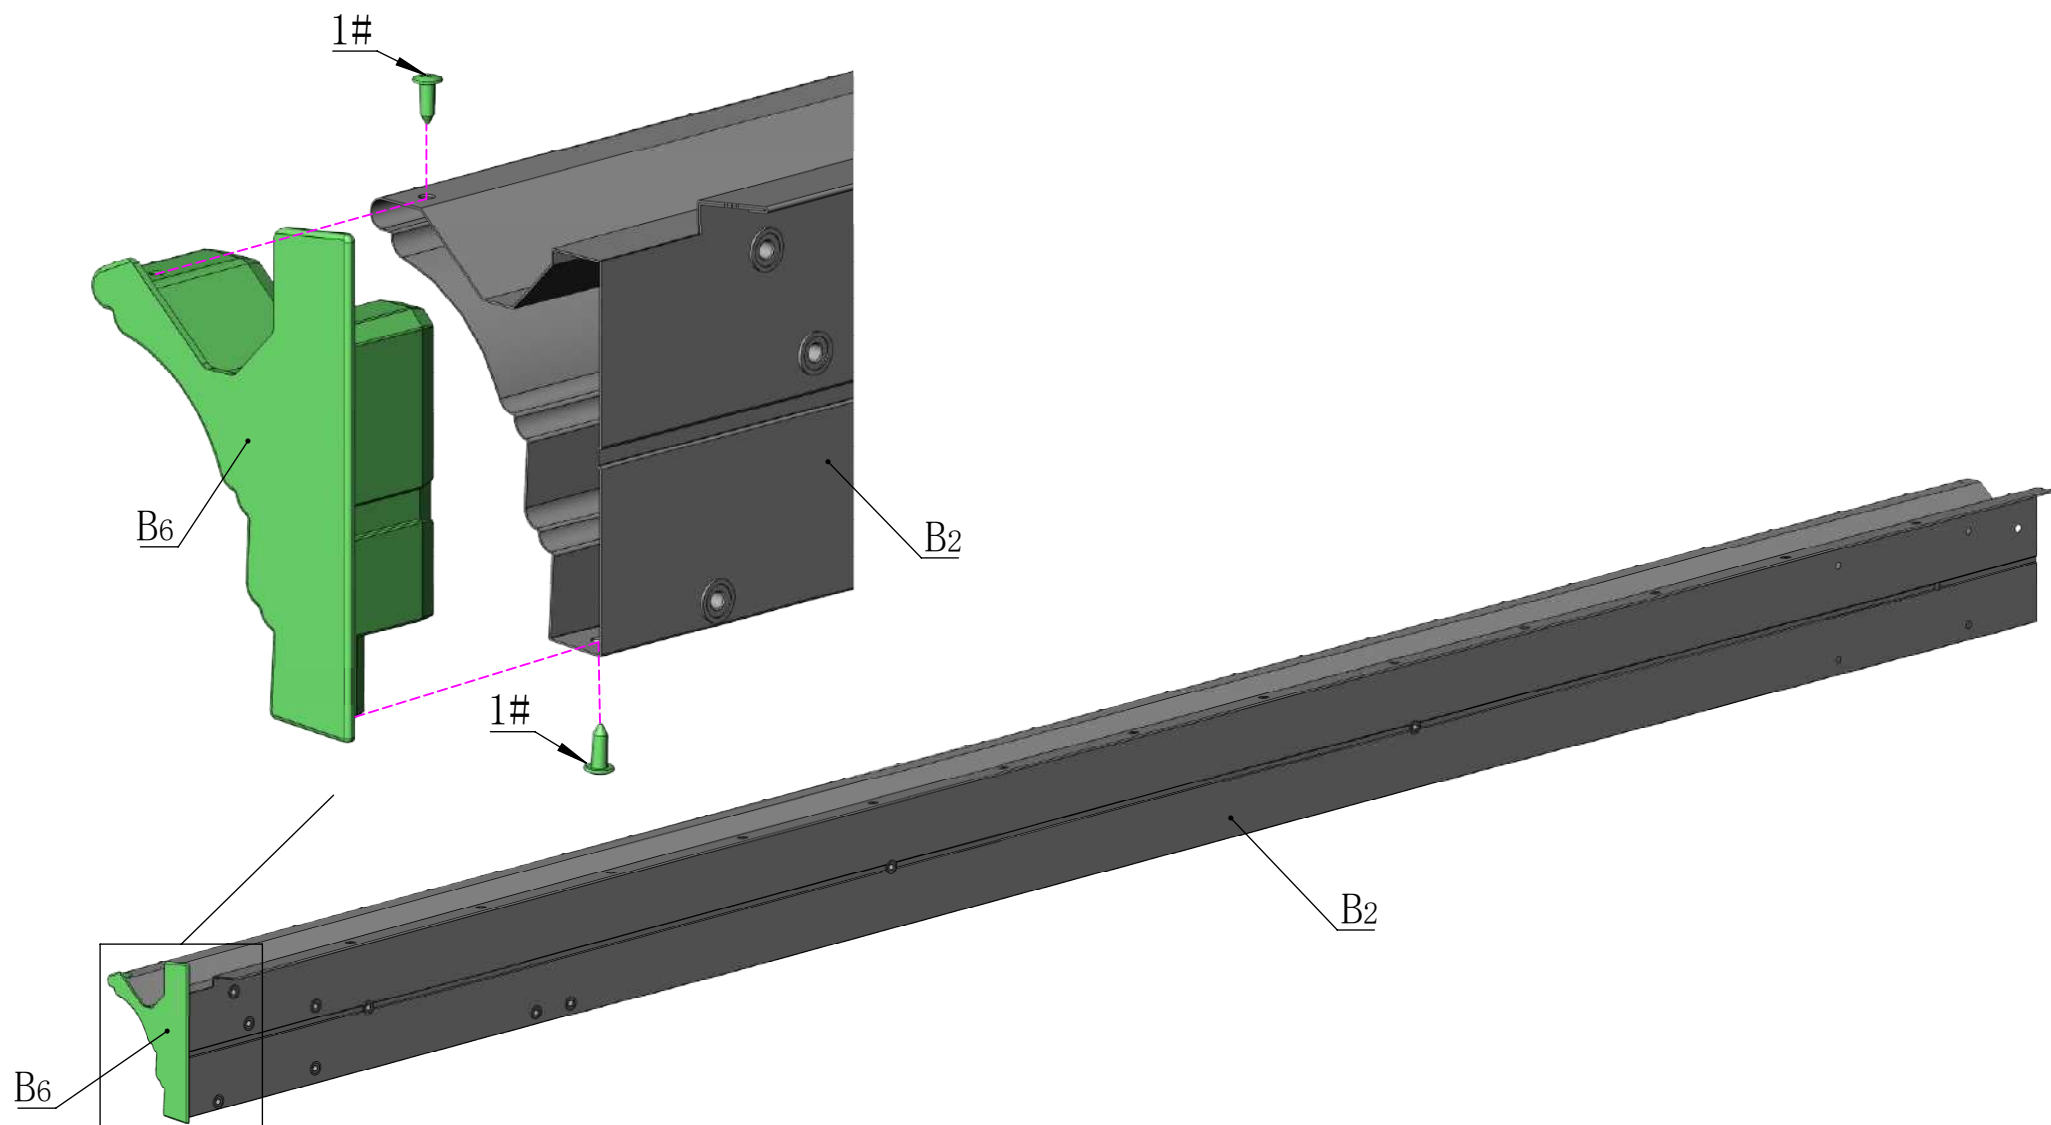

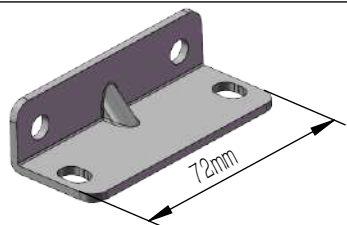


B7 1X




M6*16

4# 2X

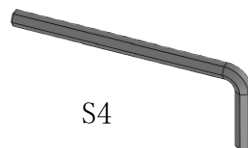

S4

17# 1X

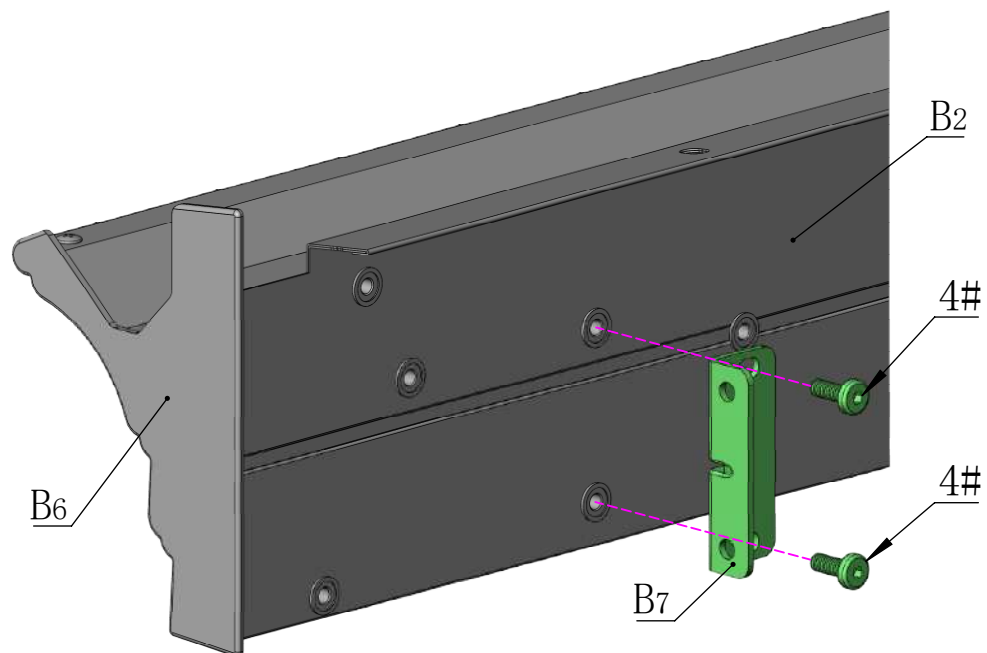


B7

B2

4#

4#


B6

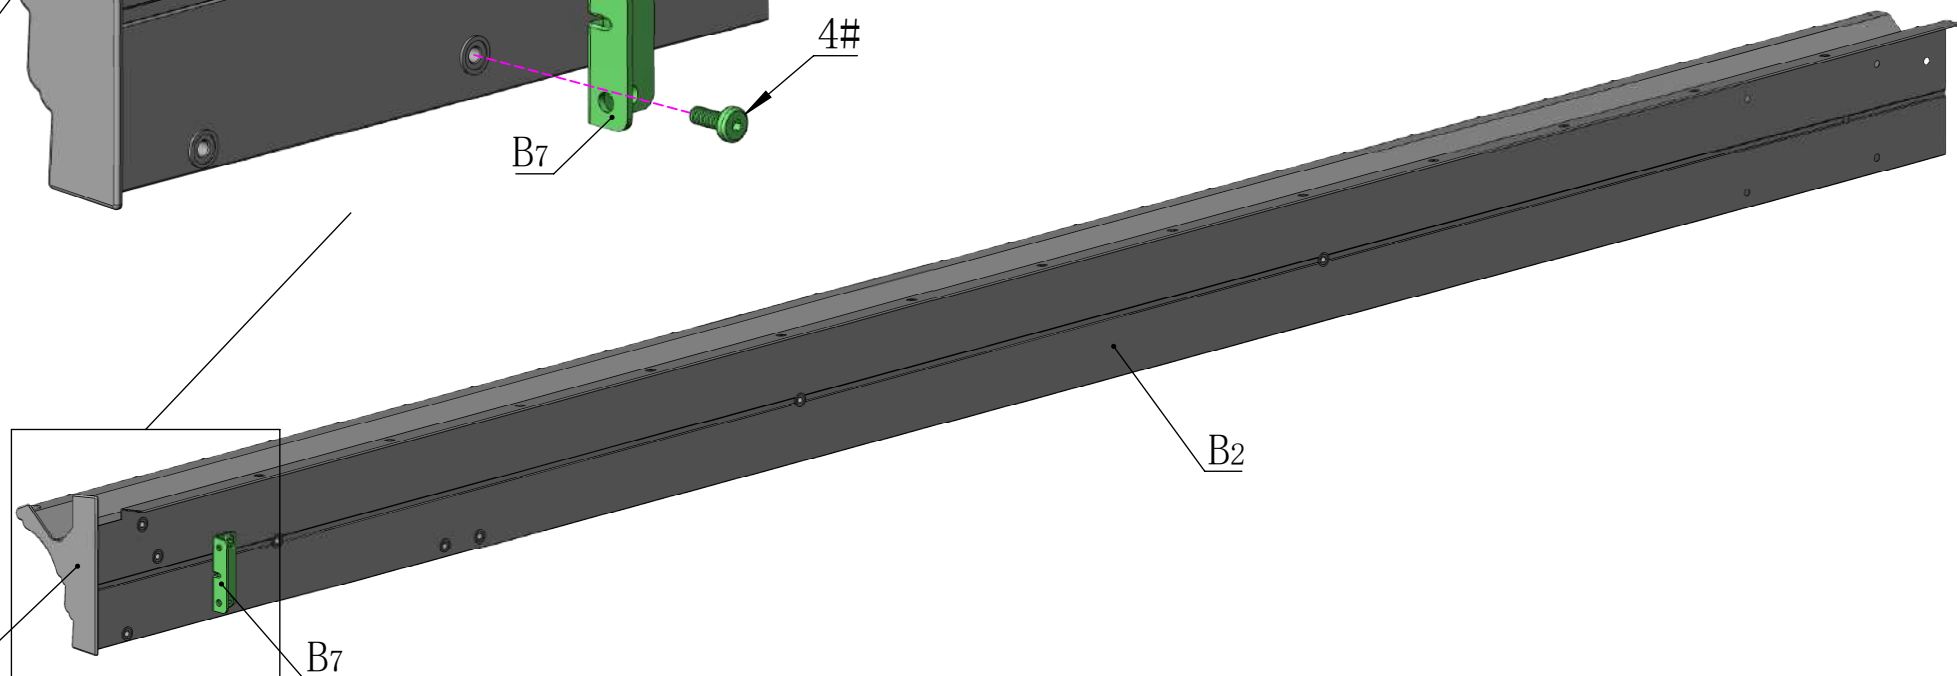

B6

B7

B2

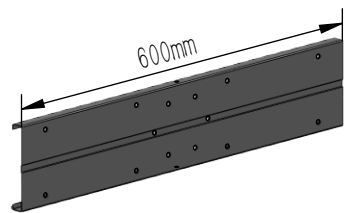


B3 1X




M6*16


4# 6X

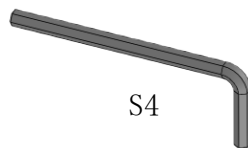


S4

17# 1X

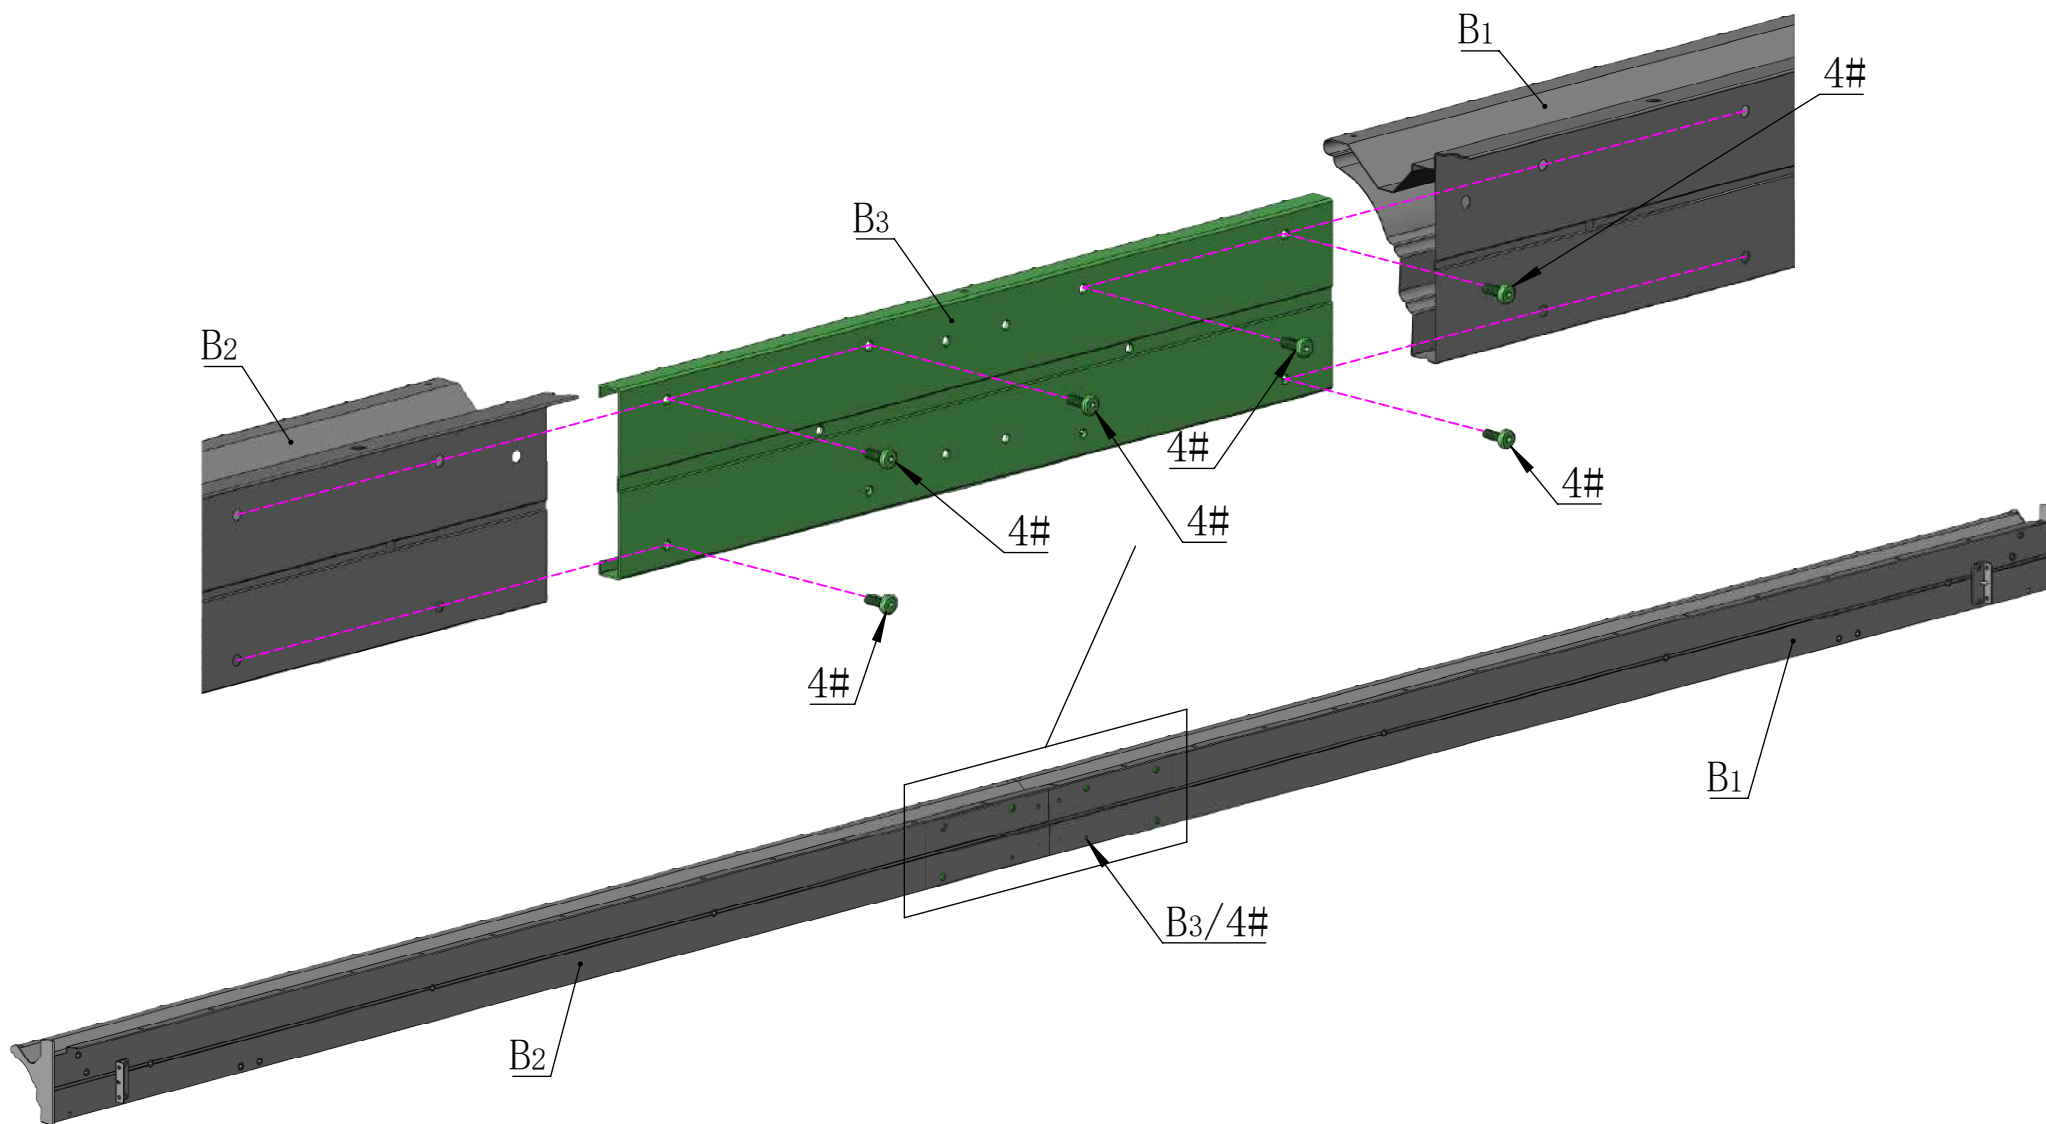

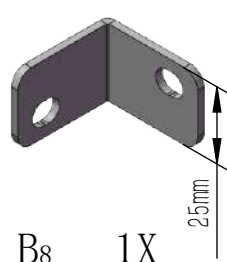

B8 1X

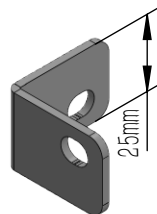


B9 1X




M6*16

4# 2X




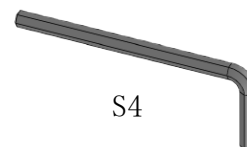


S4

17# 1X

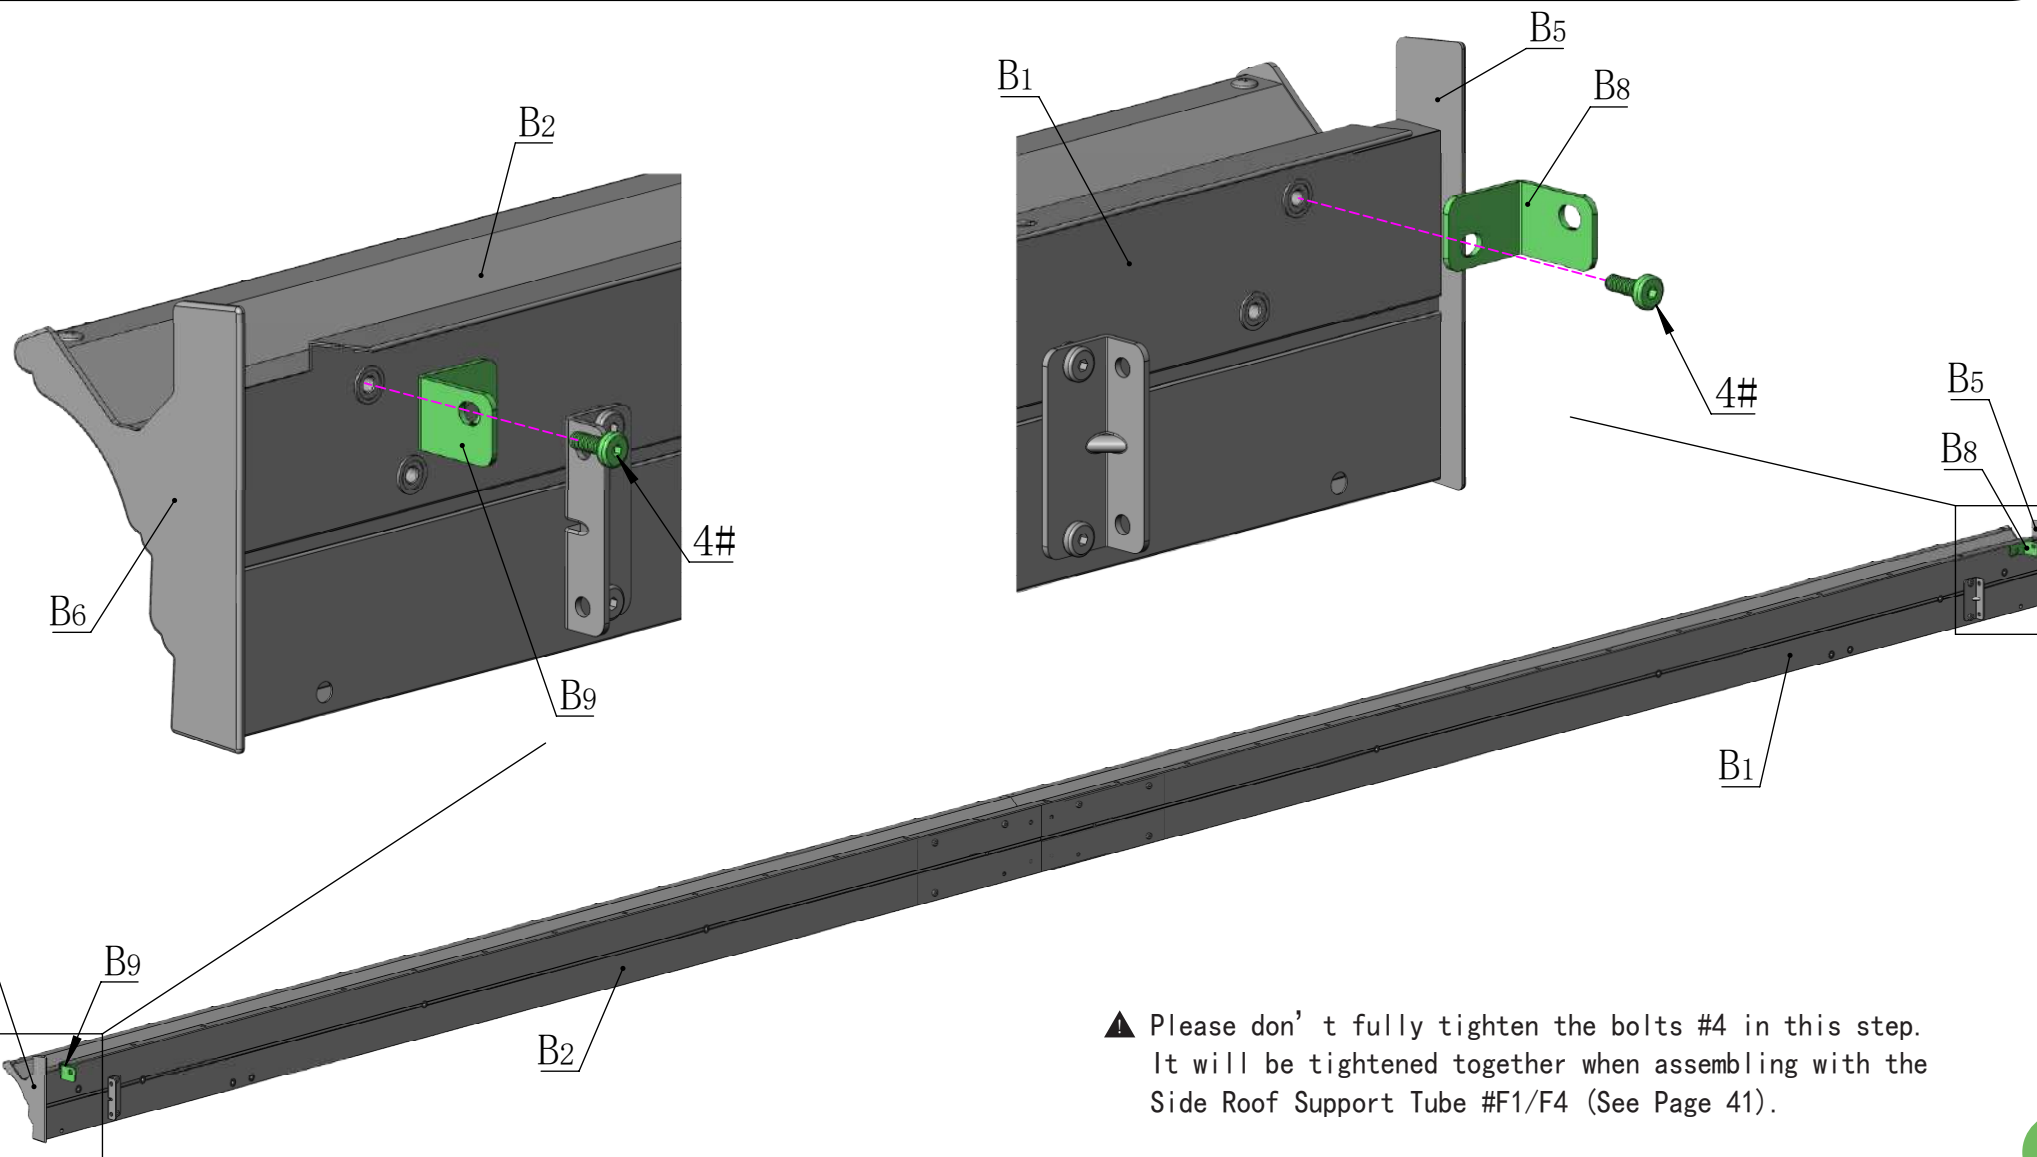

▲ Please don't fully tighten the bolts #4 in this step. It will be tightened together when assembling with the Side Roof Support Tube #F1/F4 (See Page 41).

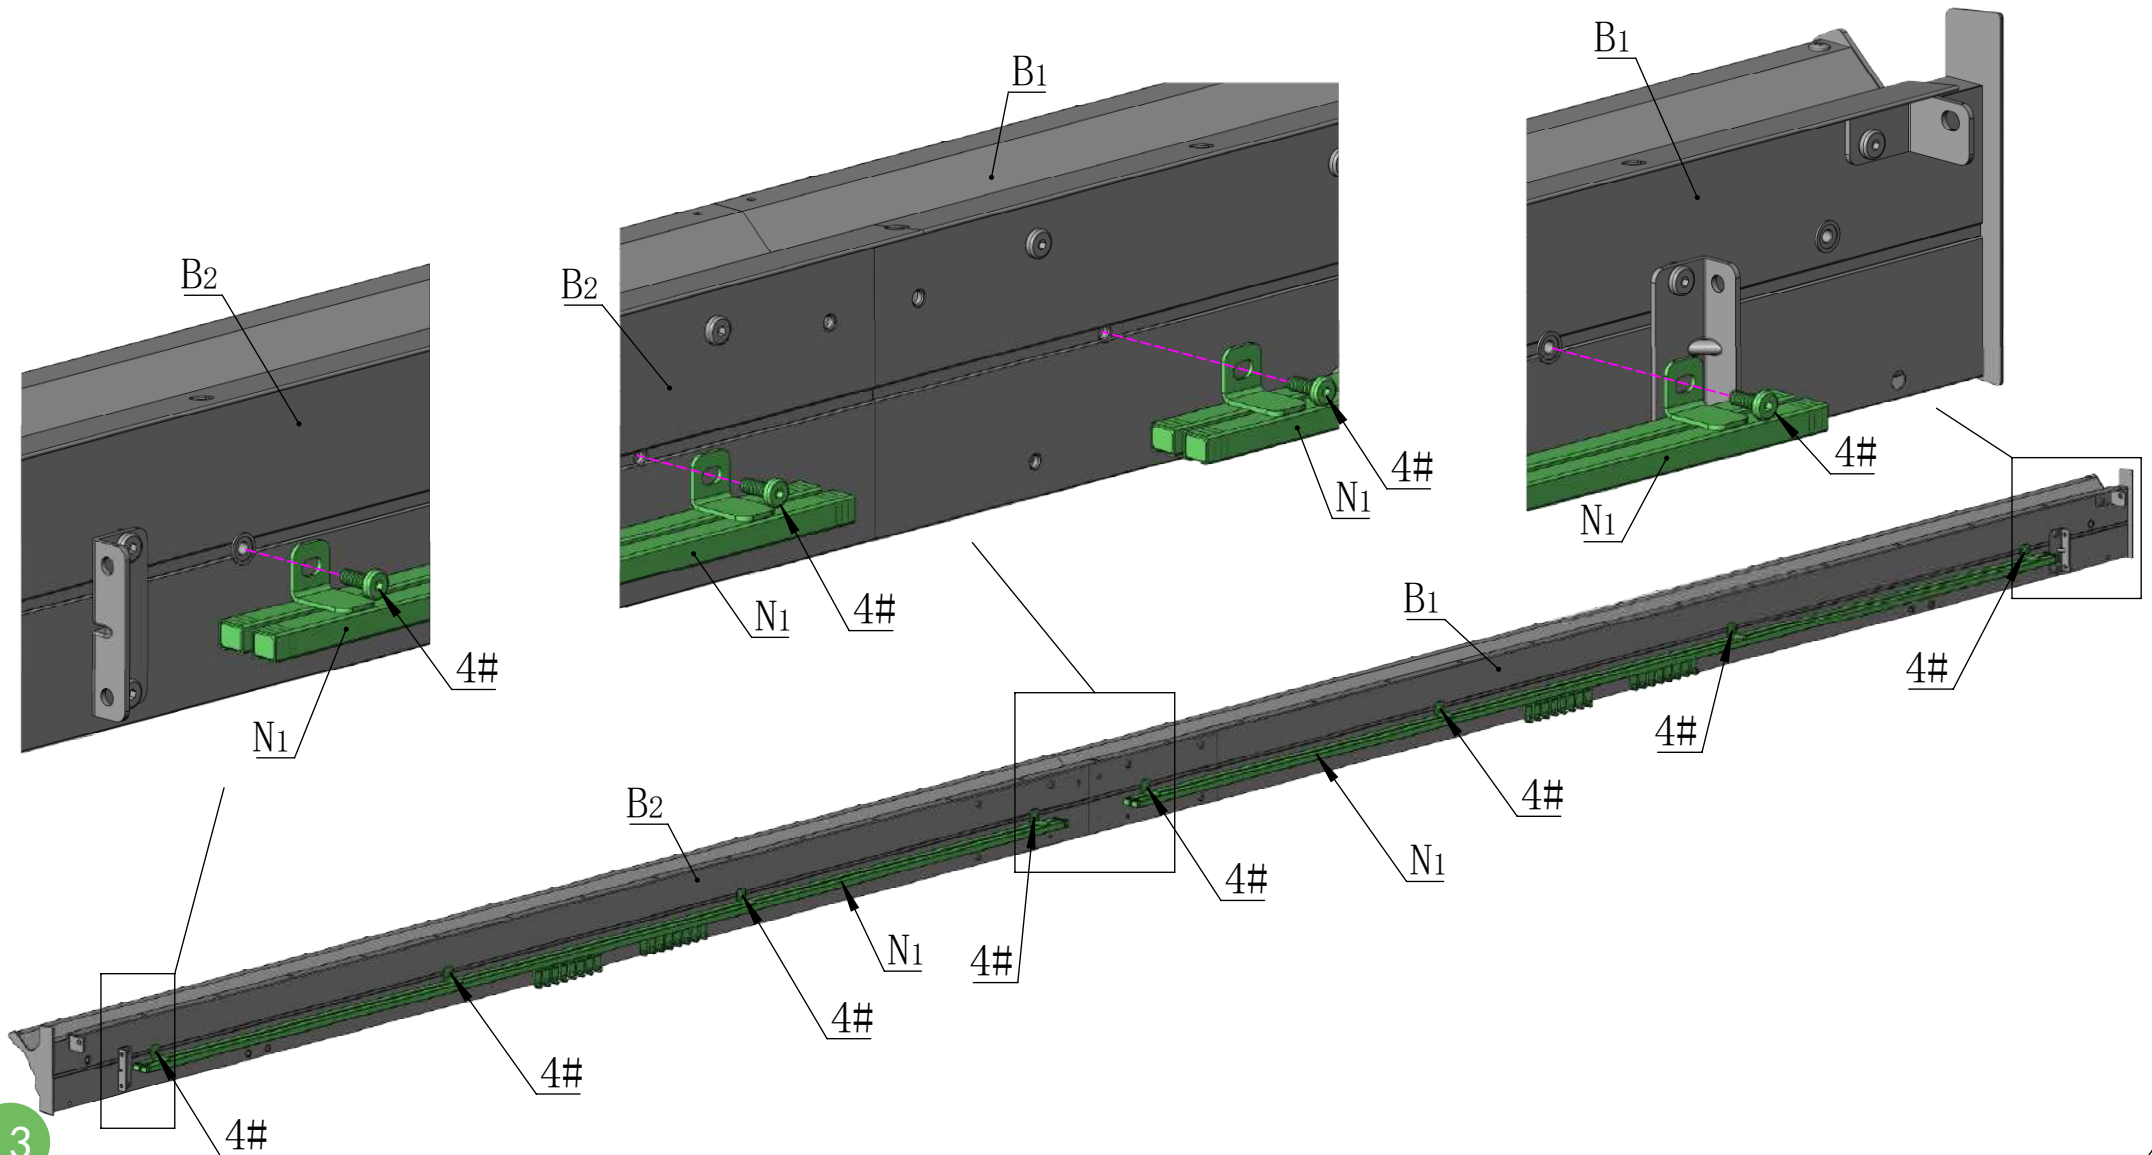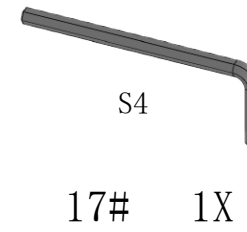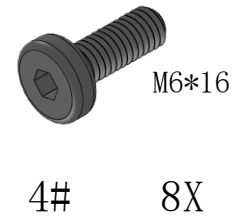
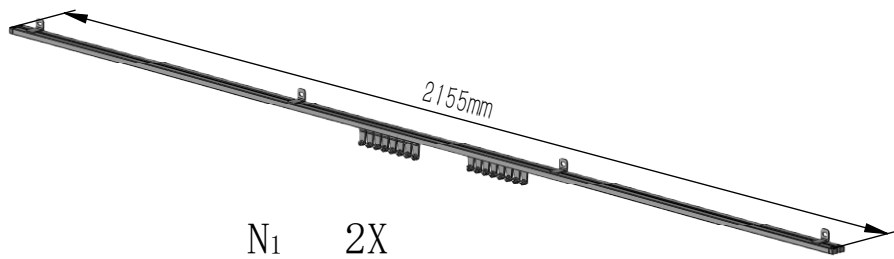









Use silicone sealant (part #19) to affix the gap between the two beams.


19#




1X

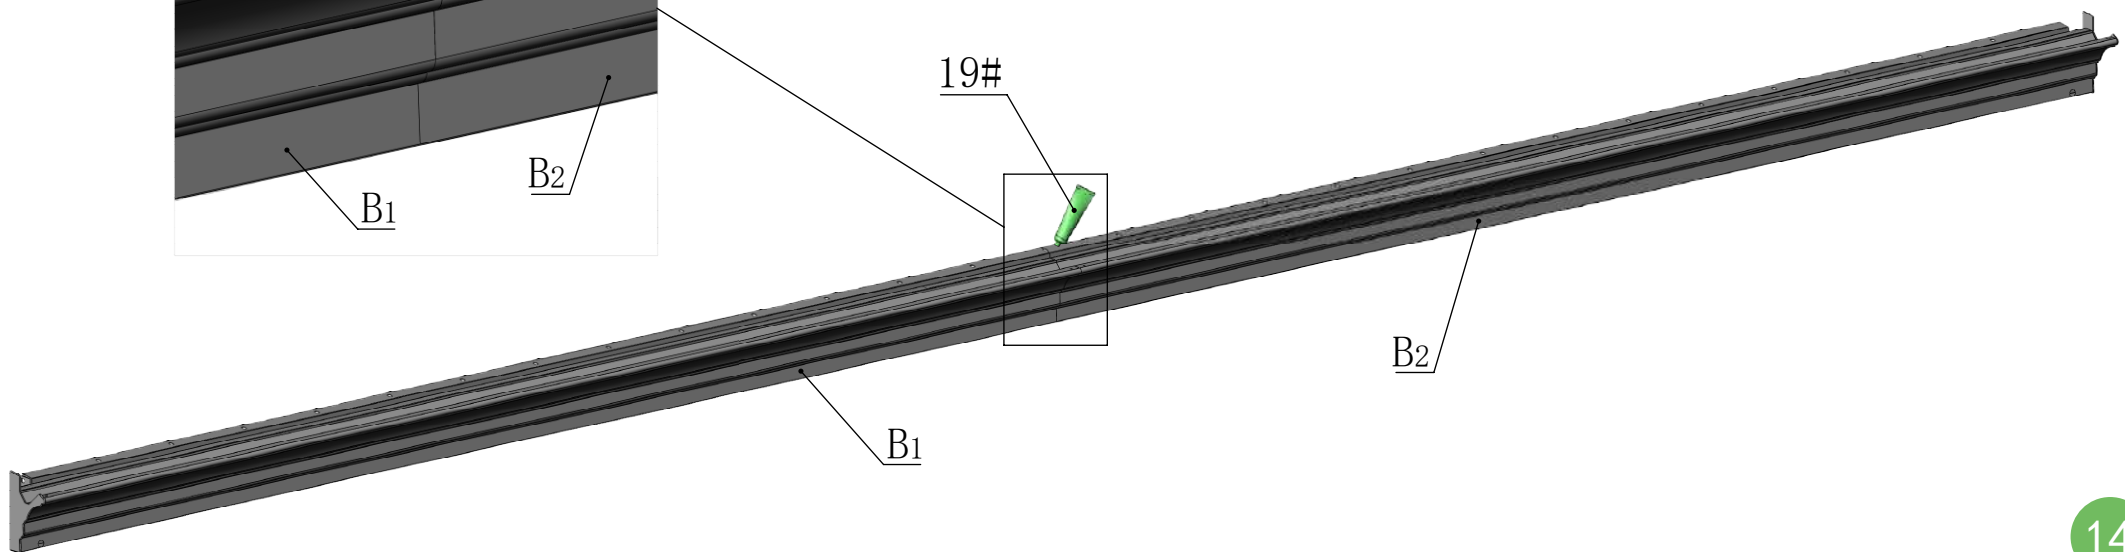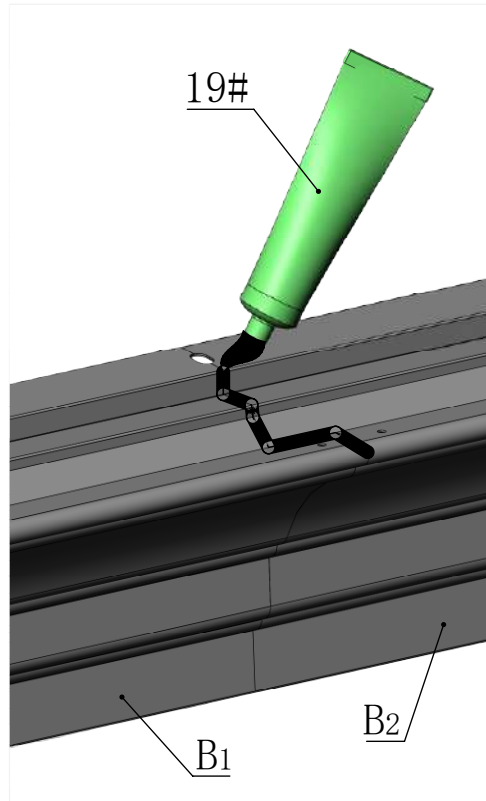


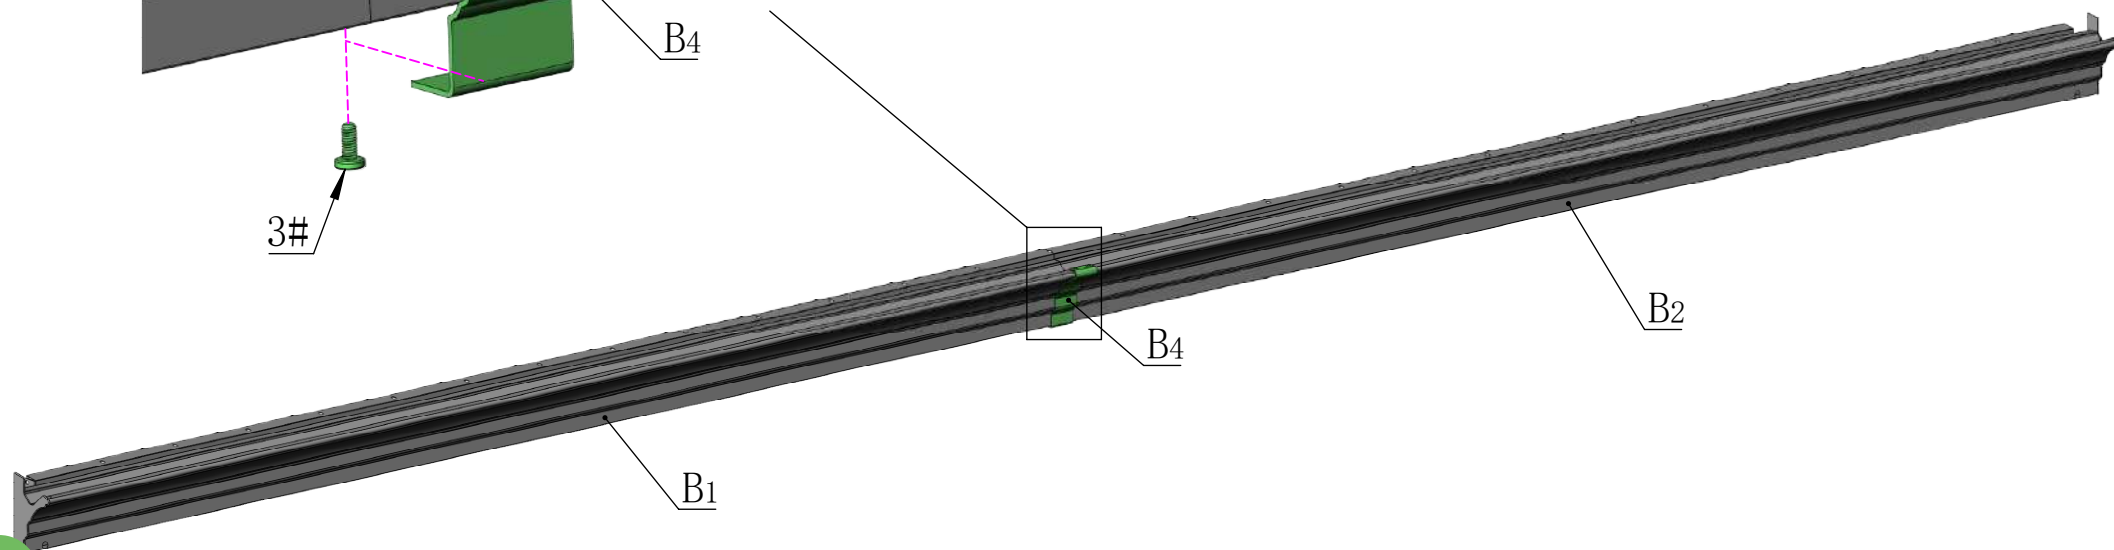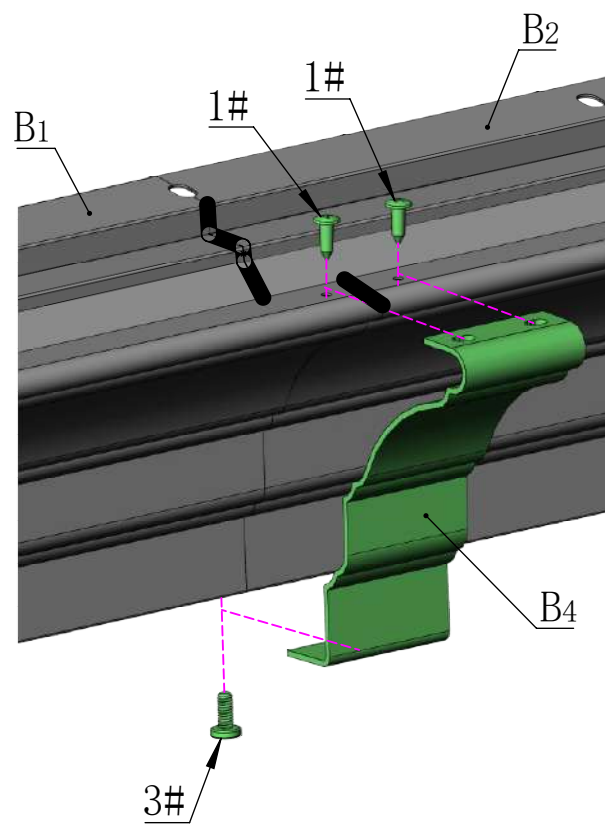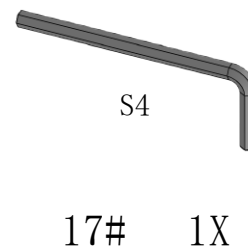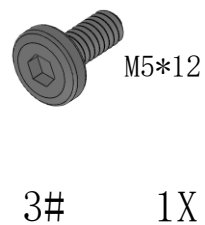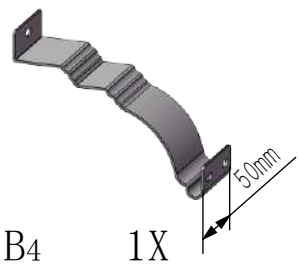


Side Beam Assembly

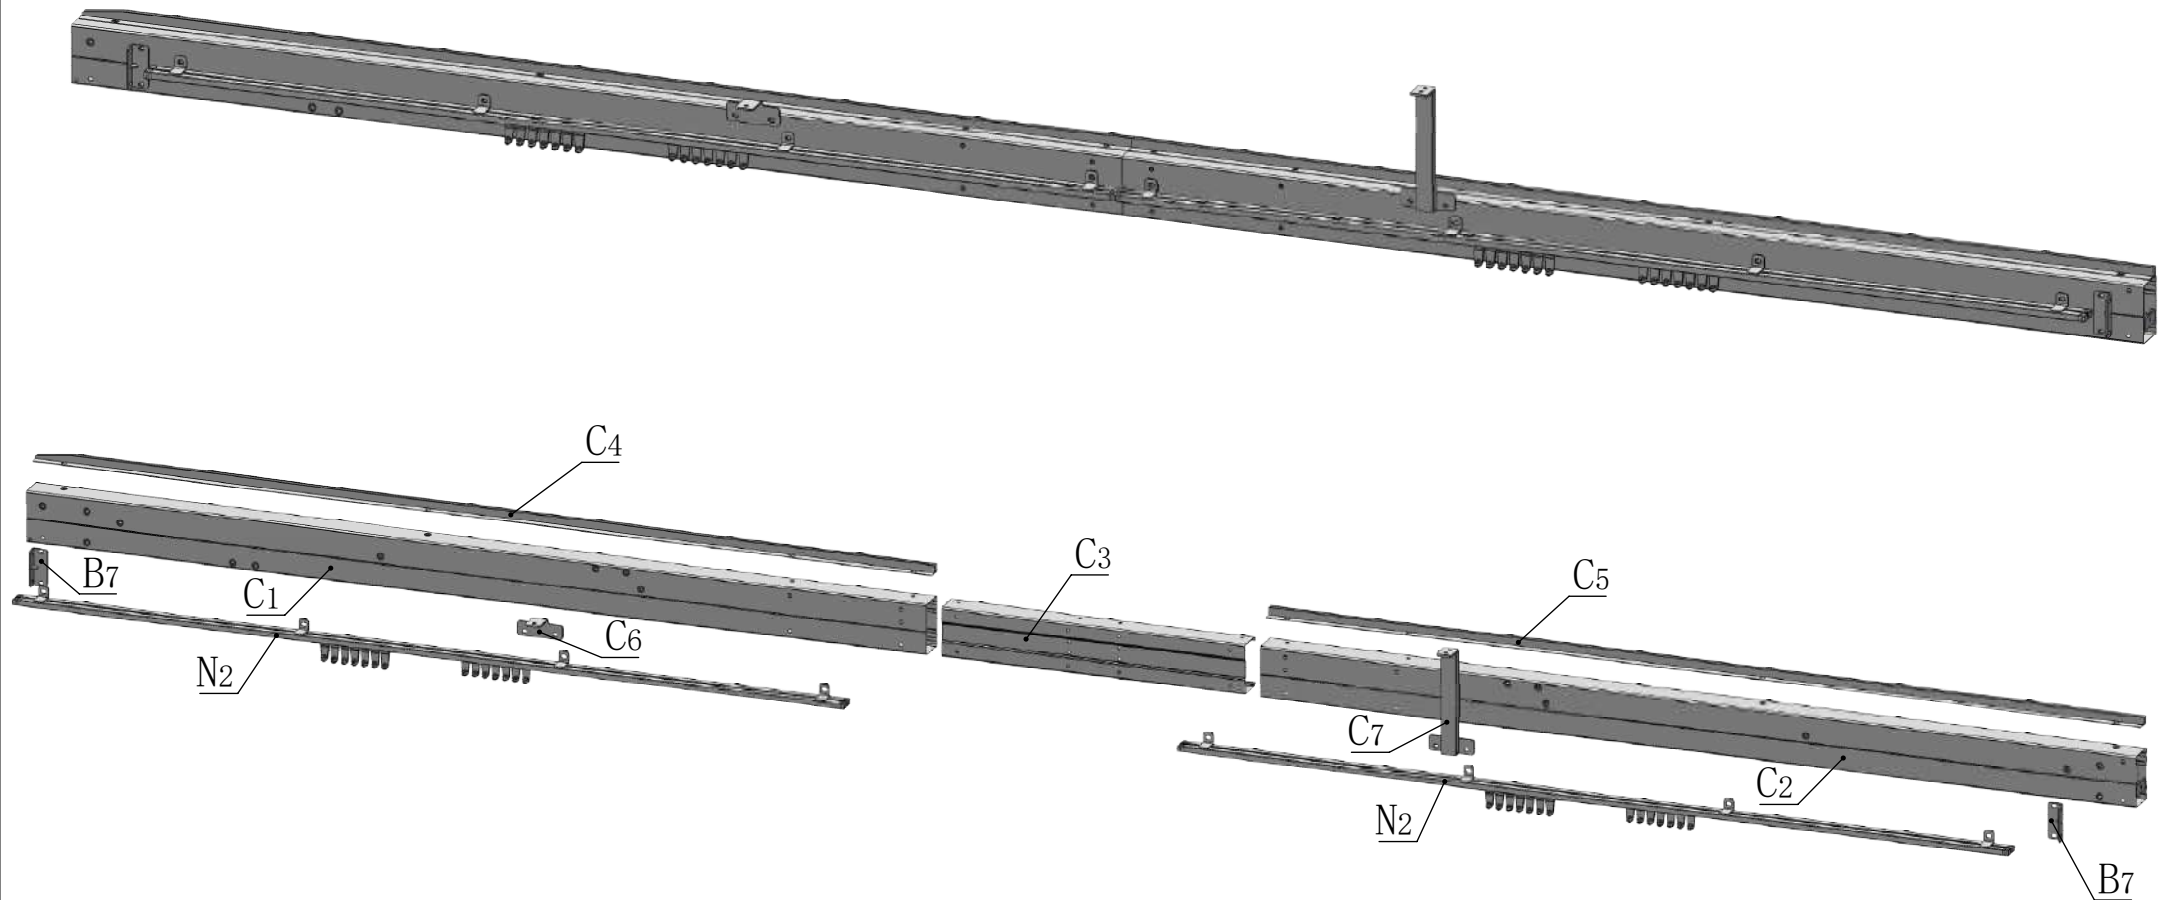

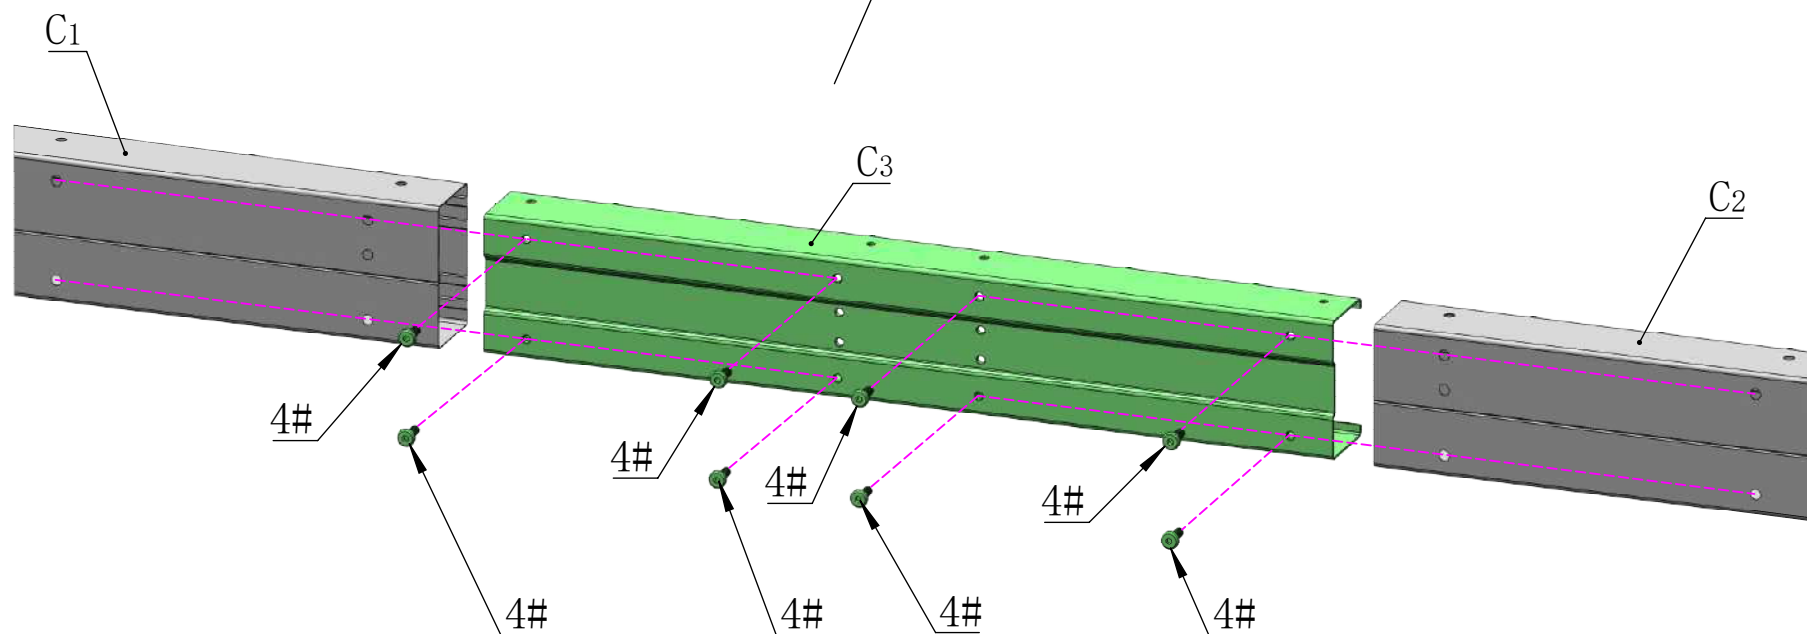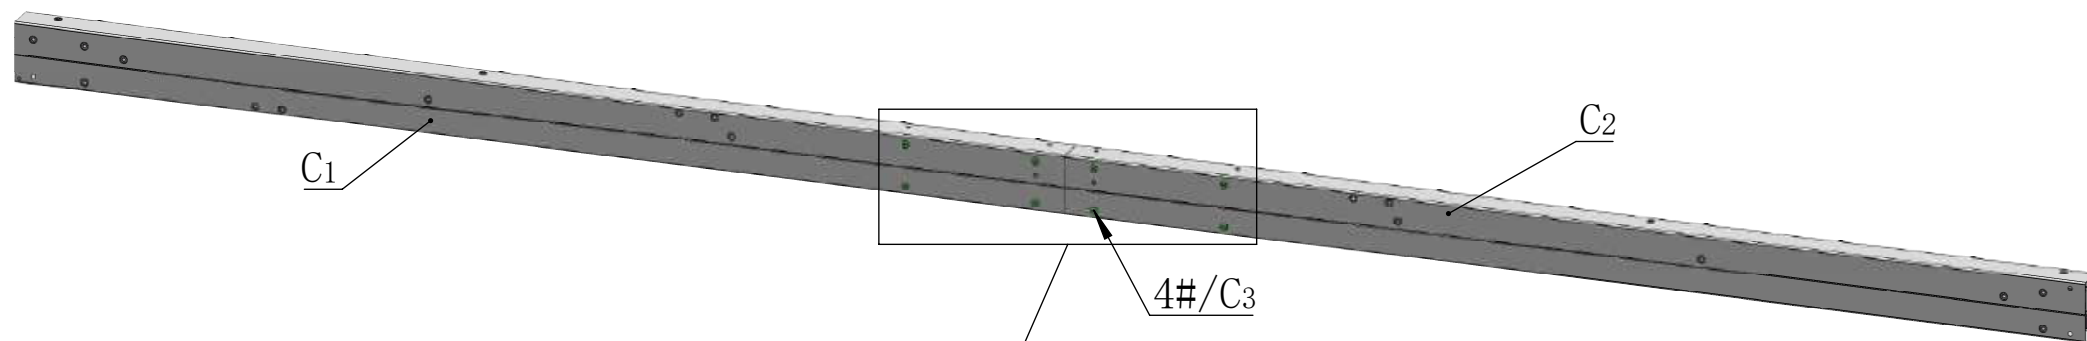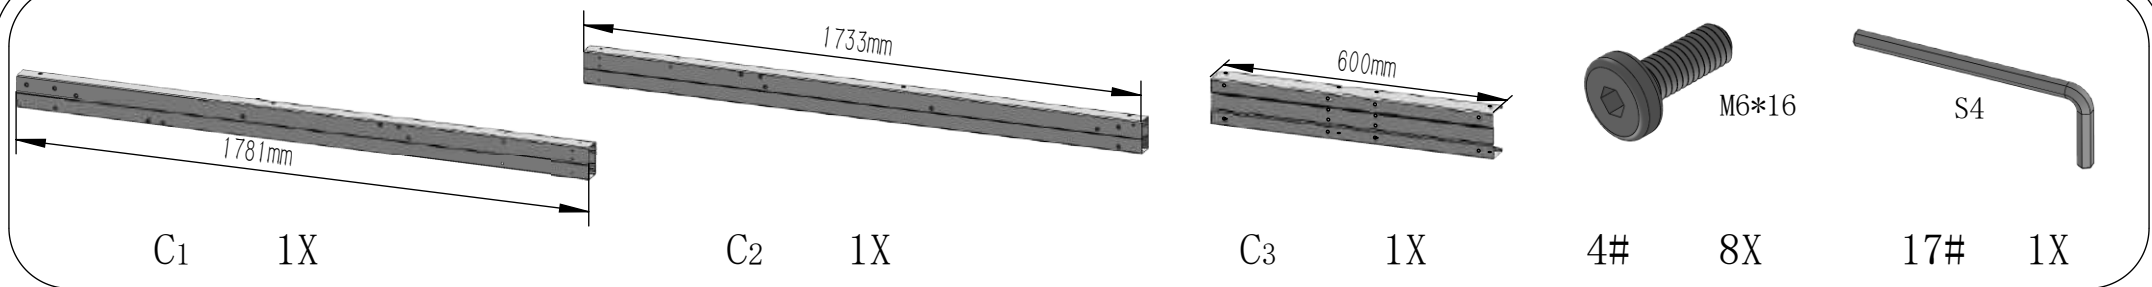

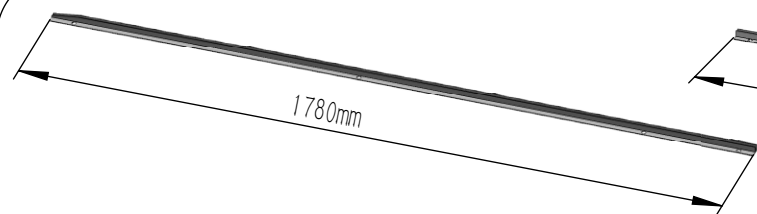


C4 1X

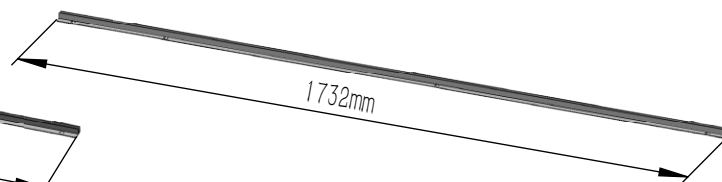





C5 1X




4# 8X

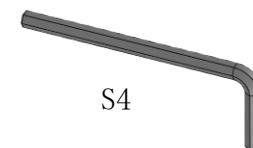


17# 1X

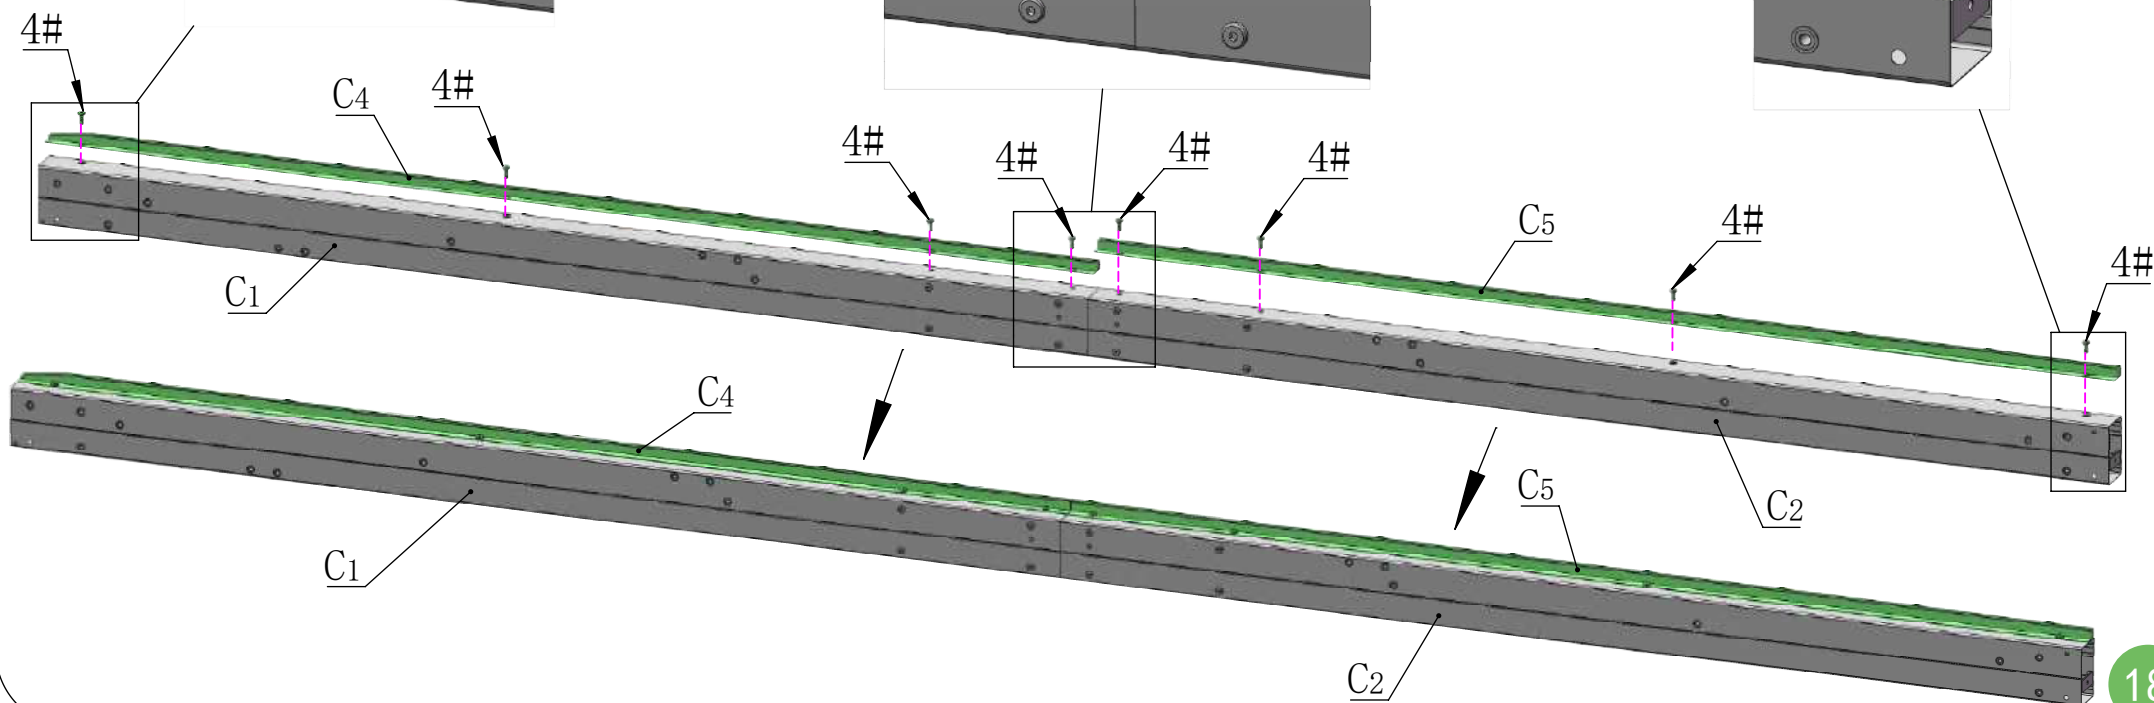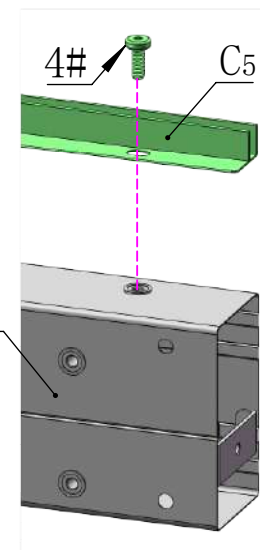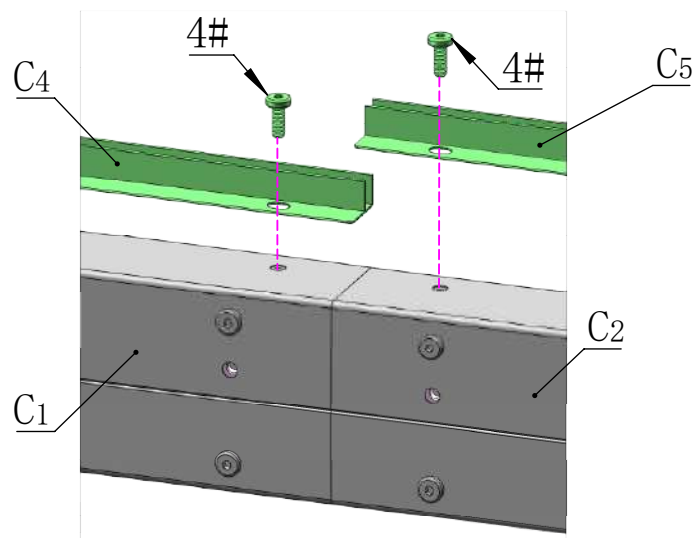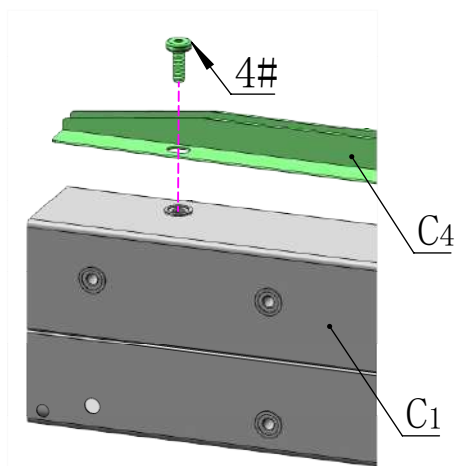


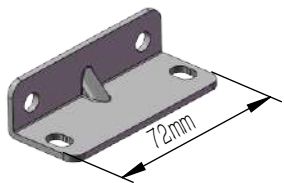


B7 2X

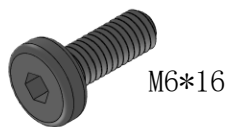


4# 4X

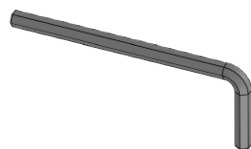


17# 1X

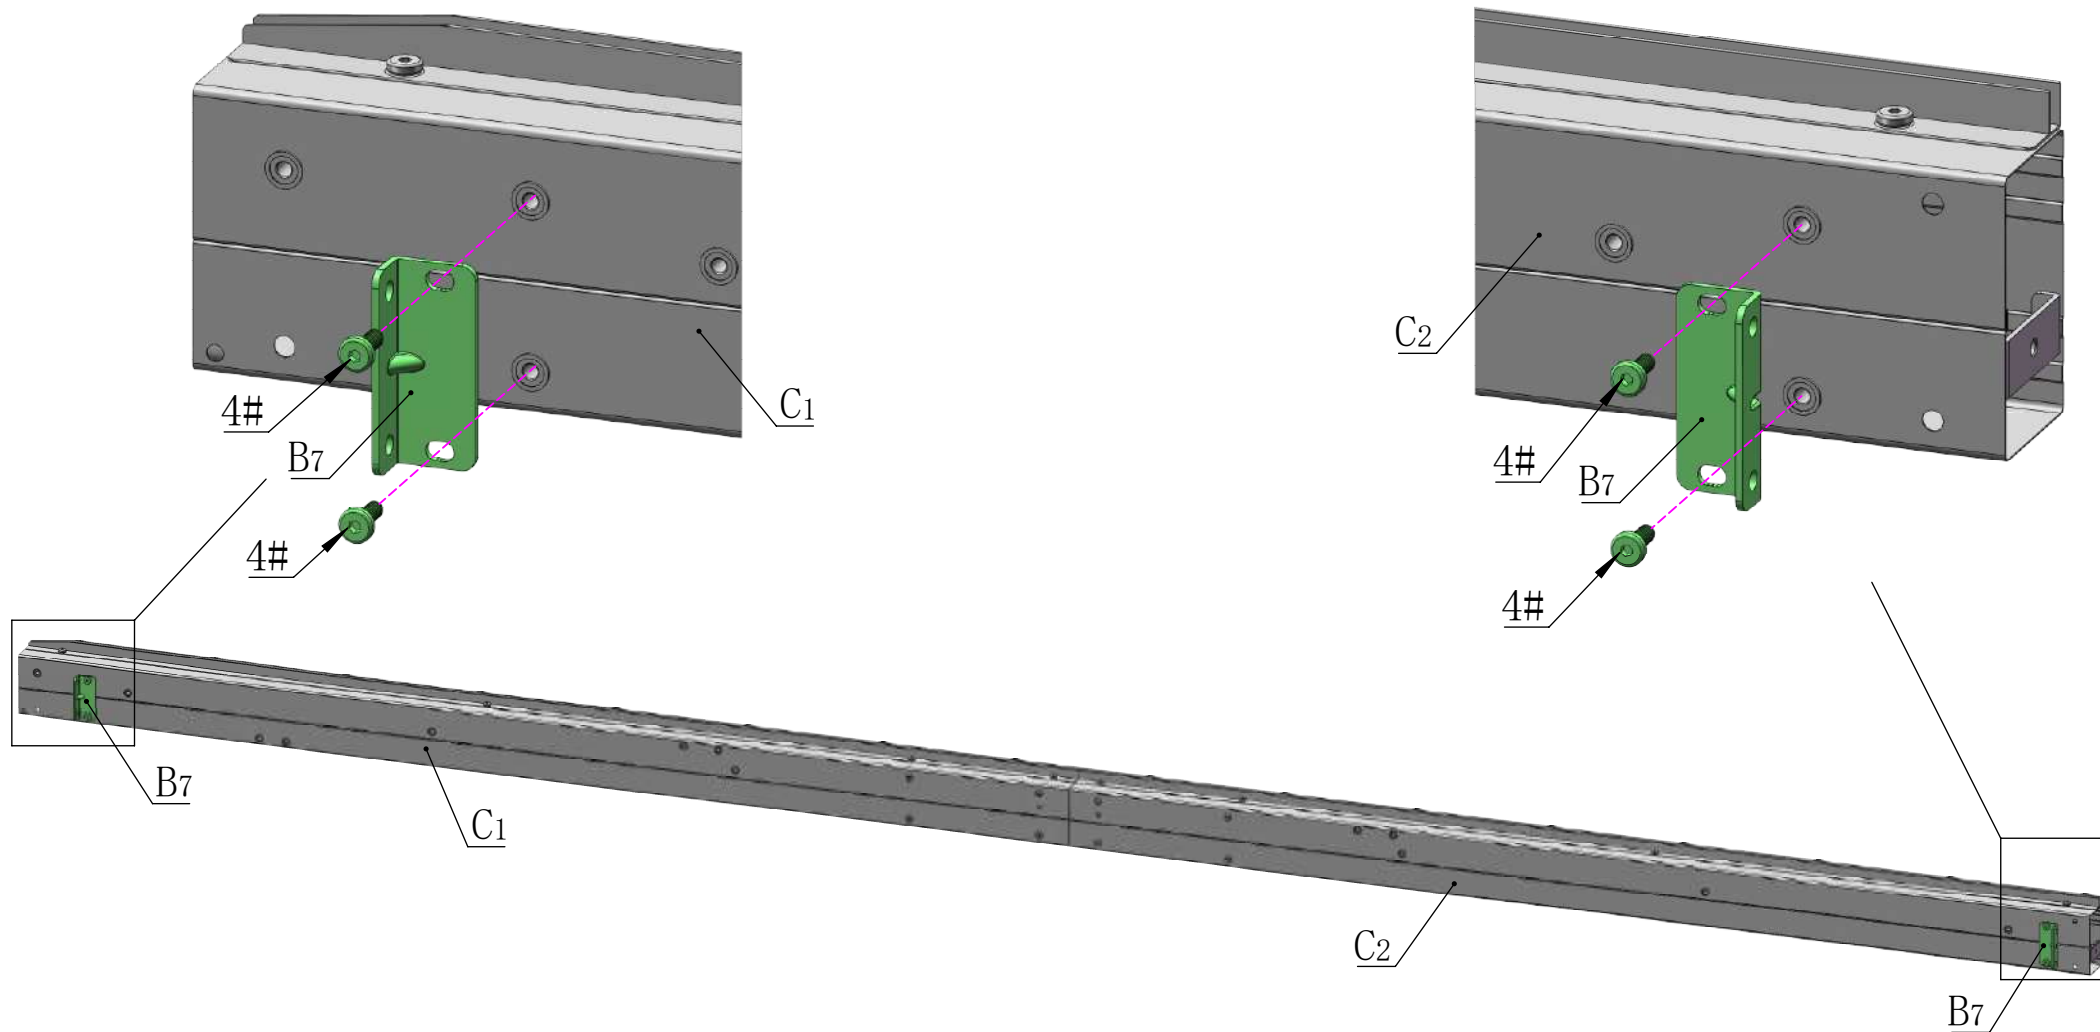

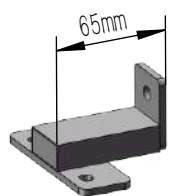

C6 1X

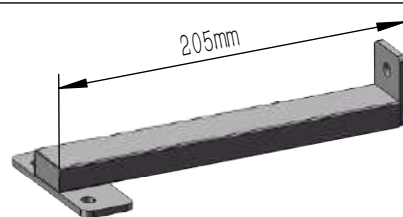

C7 1X






M6*16


4# 4X



S4

17# 1X

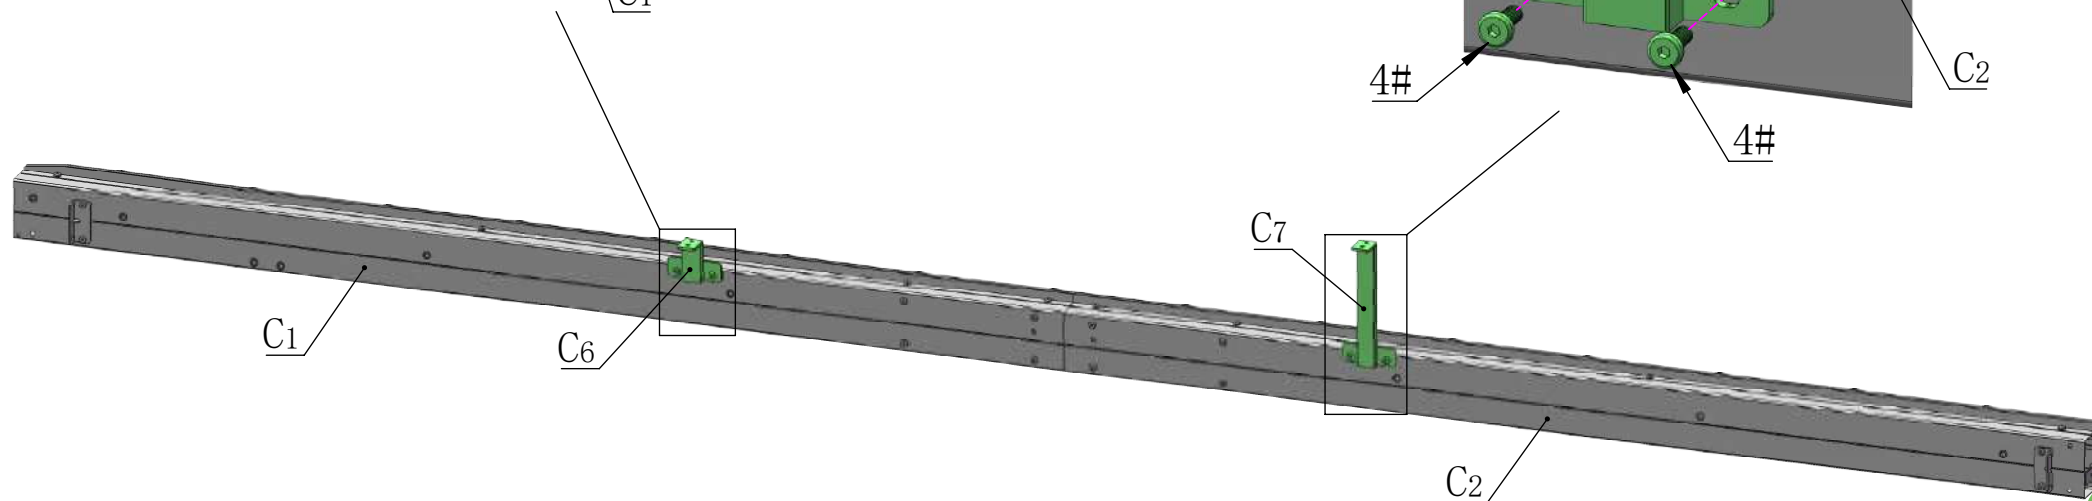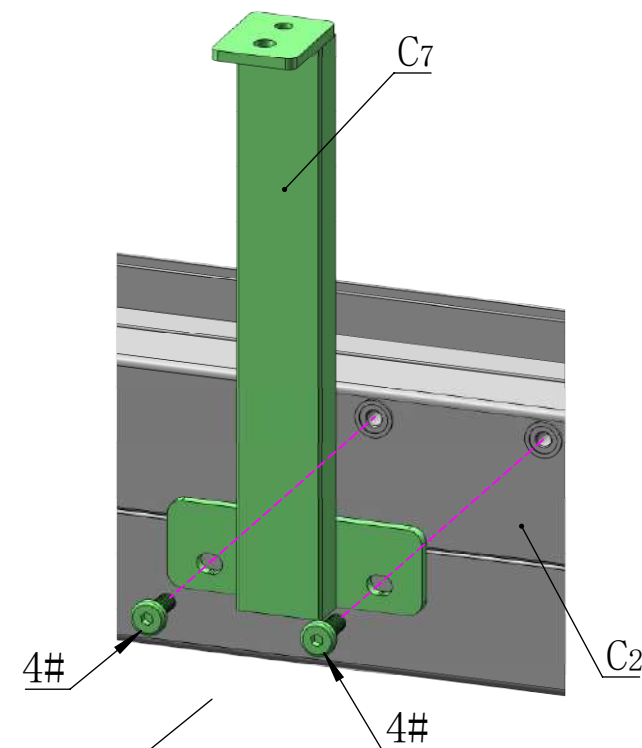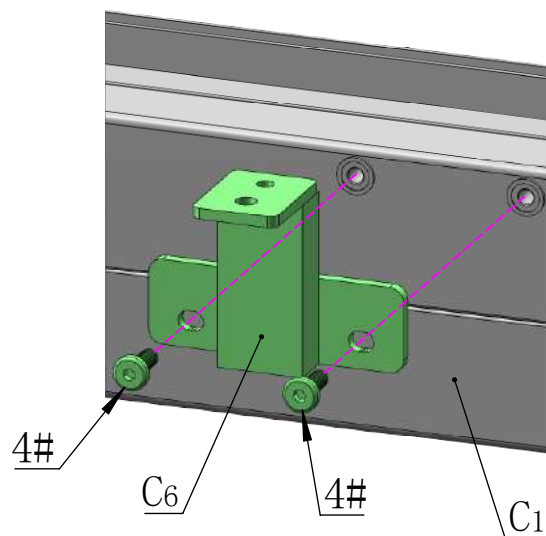

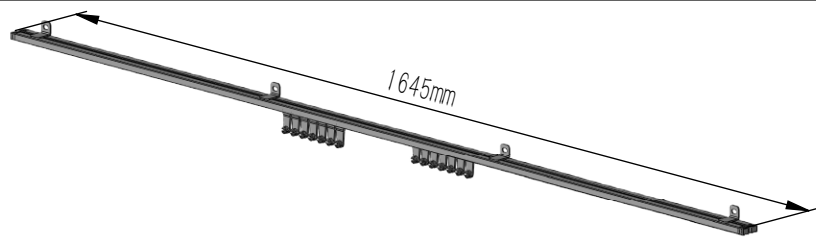

N2 2X







M6*16

4# 8X






S4



17# 1X

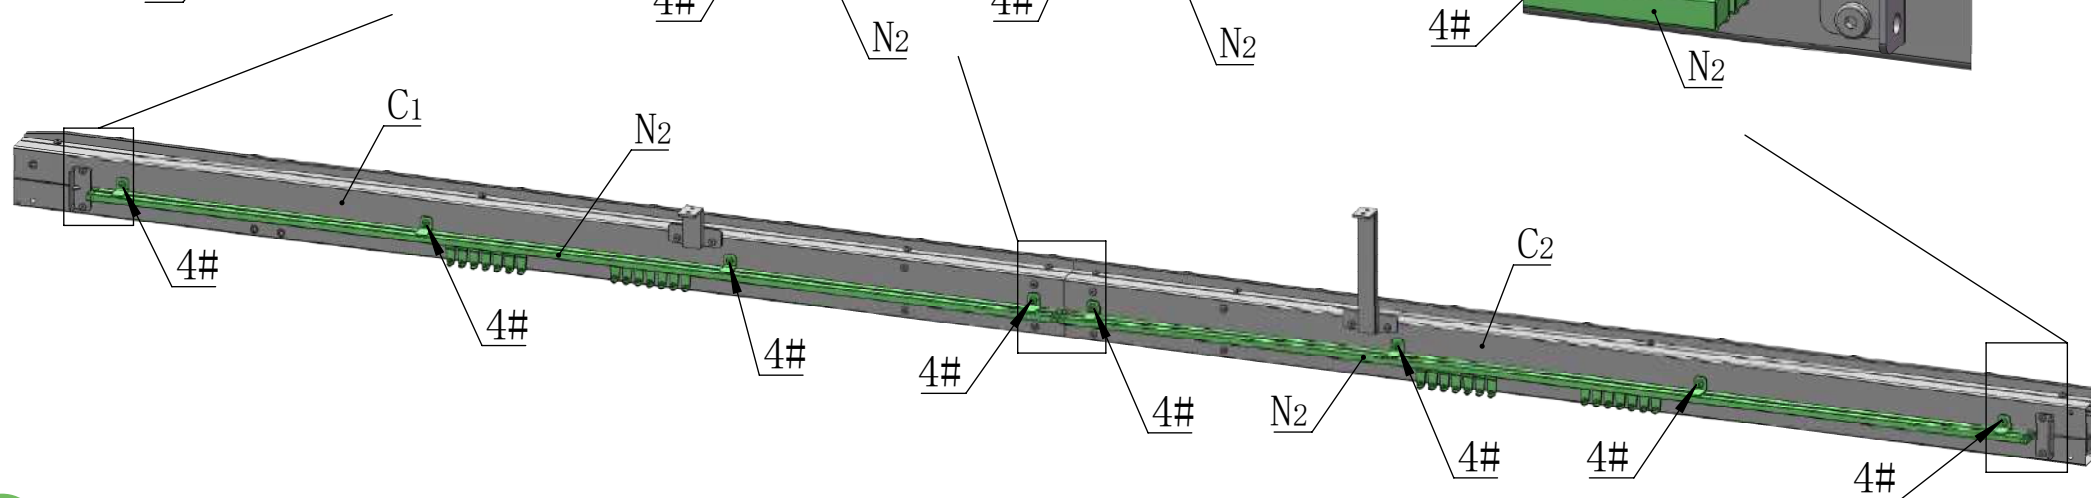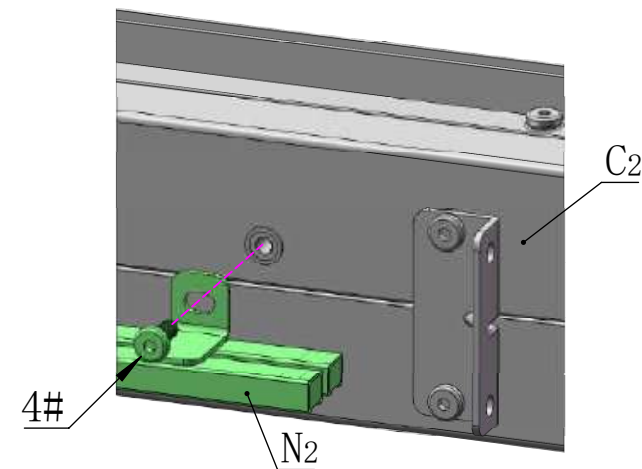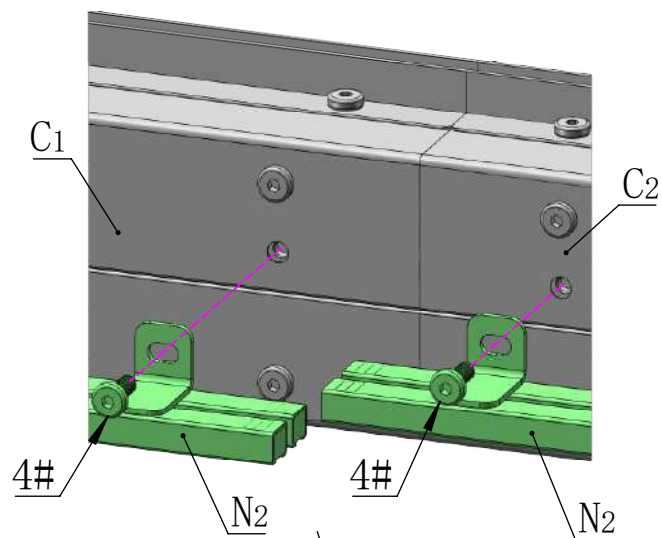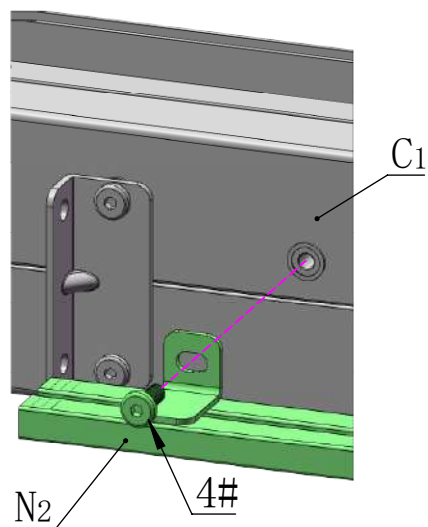


Side Beam Assembly

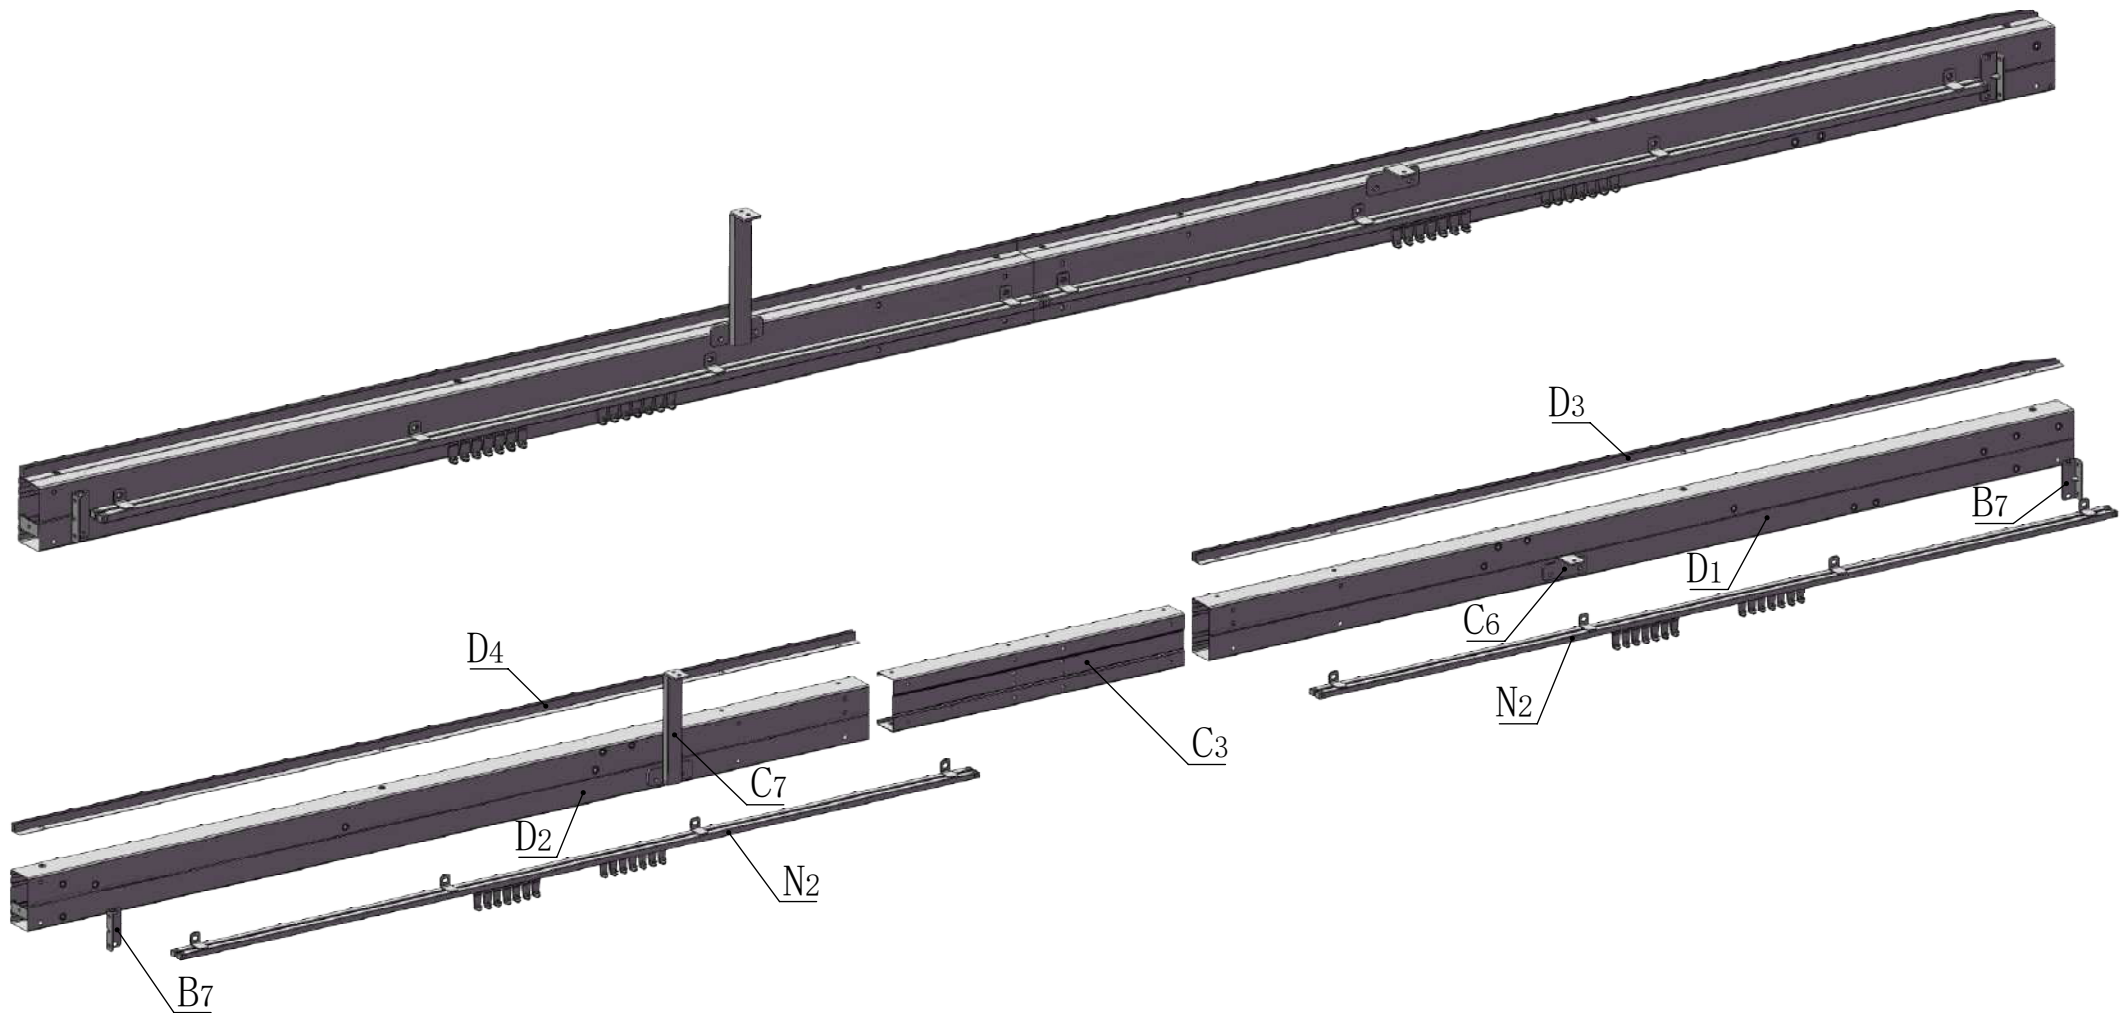


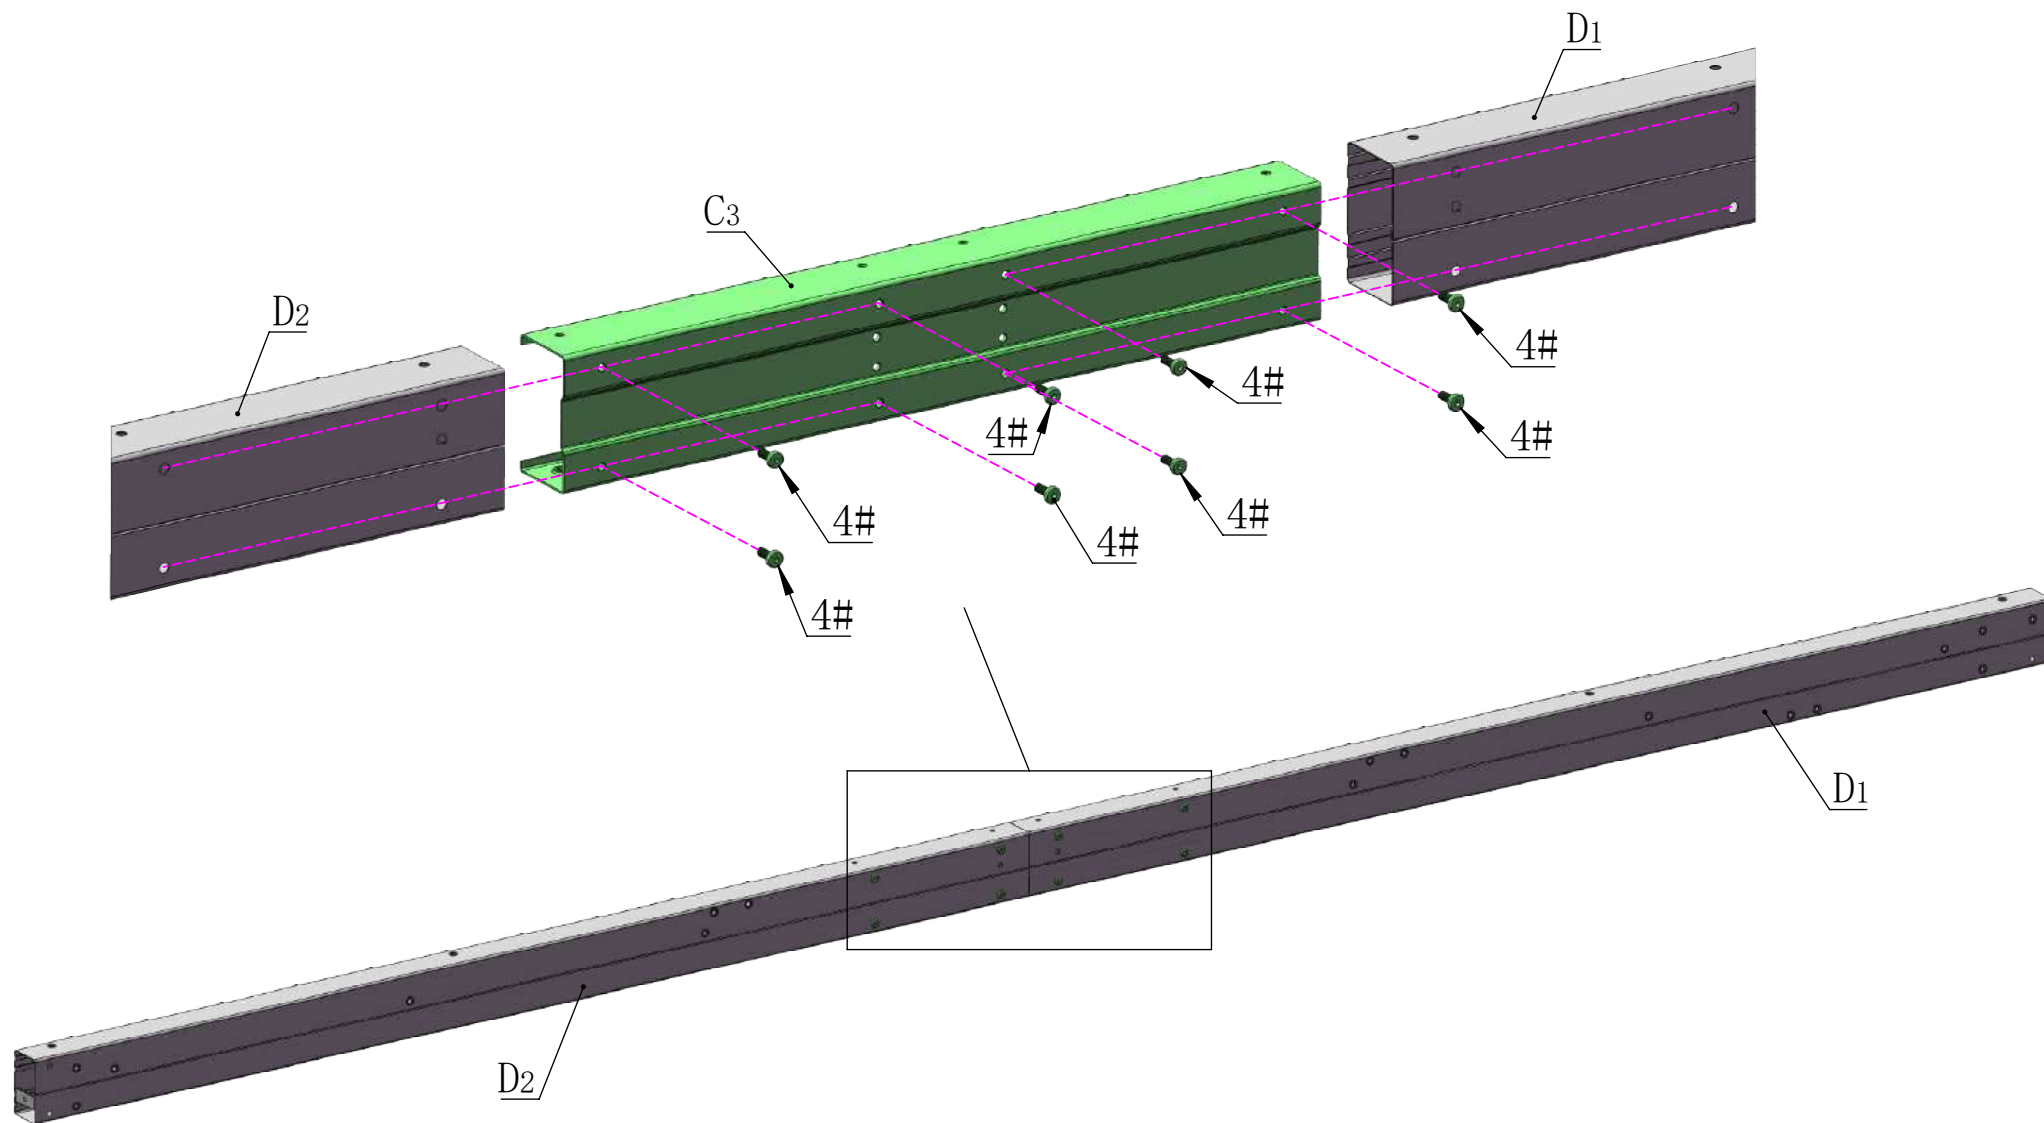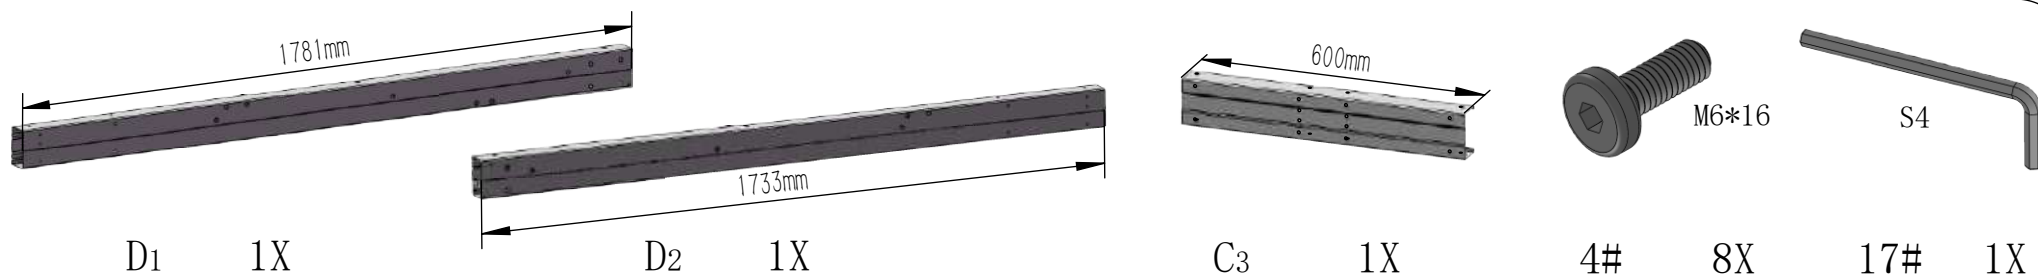

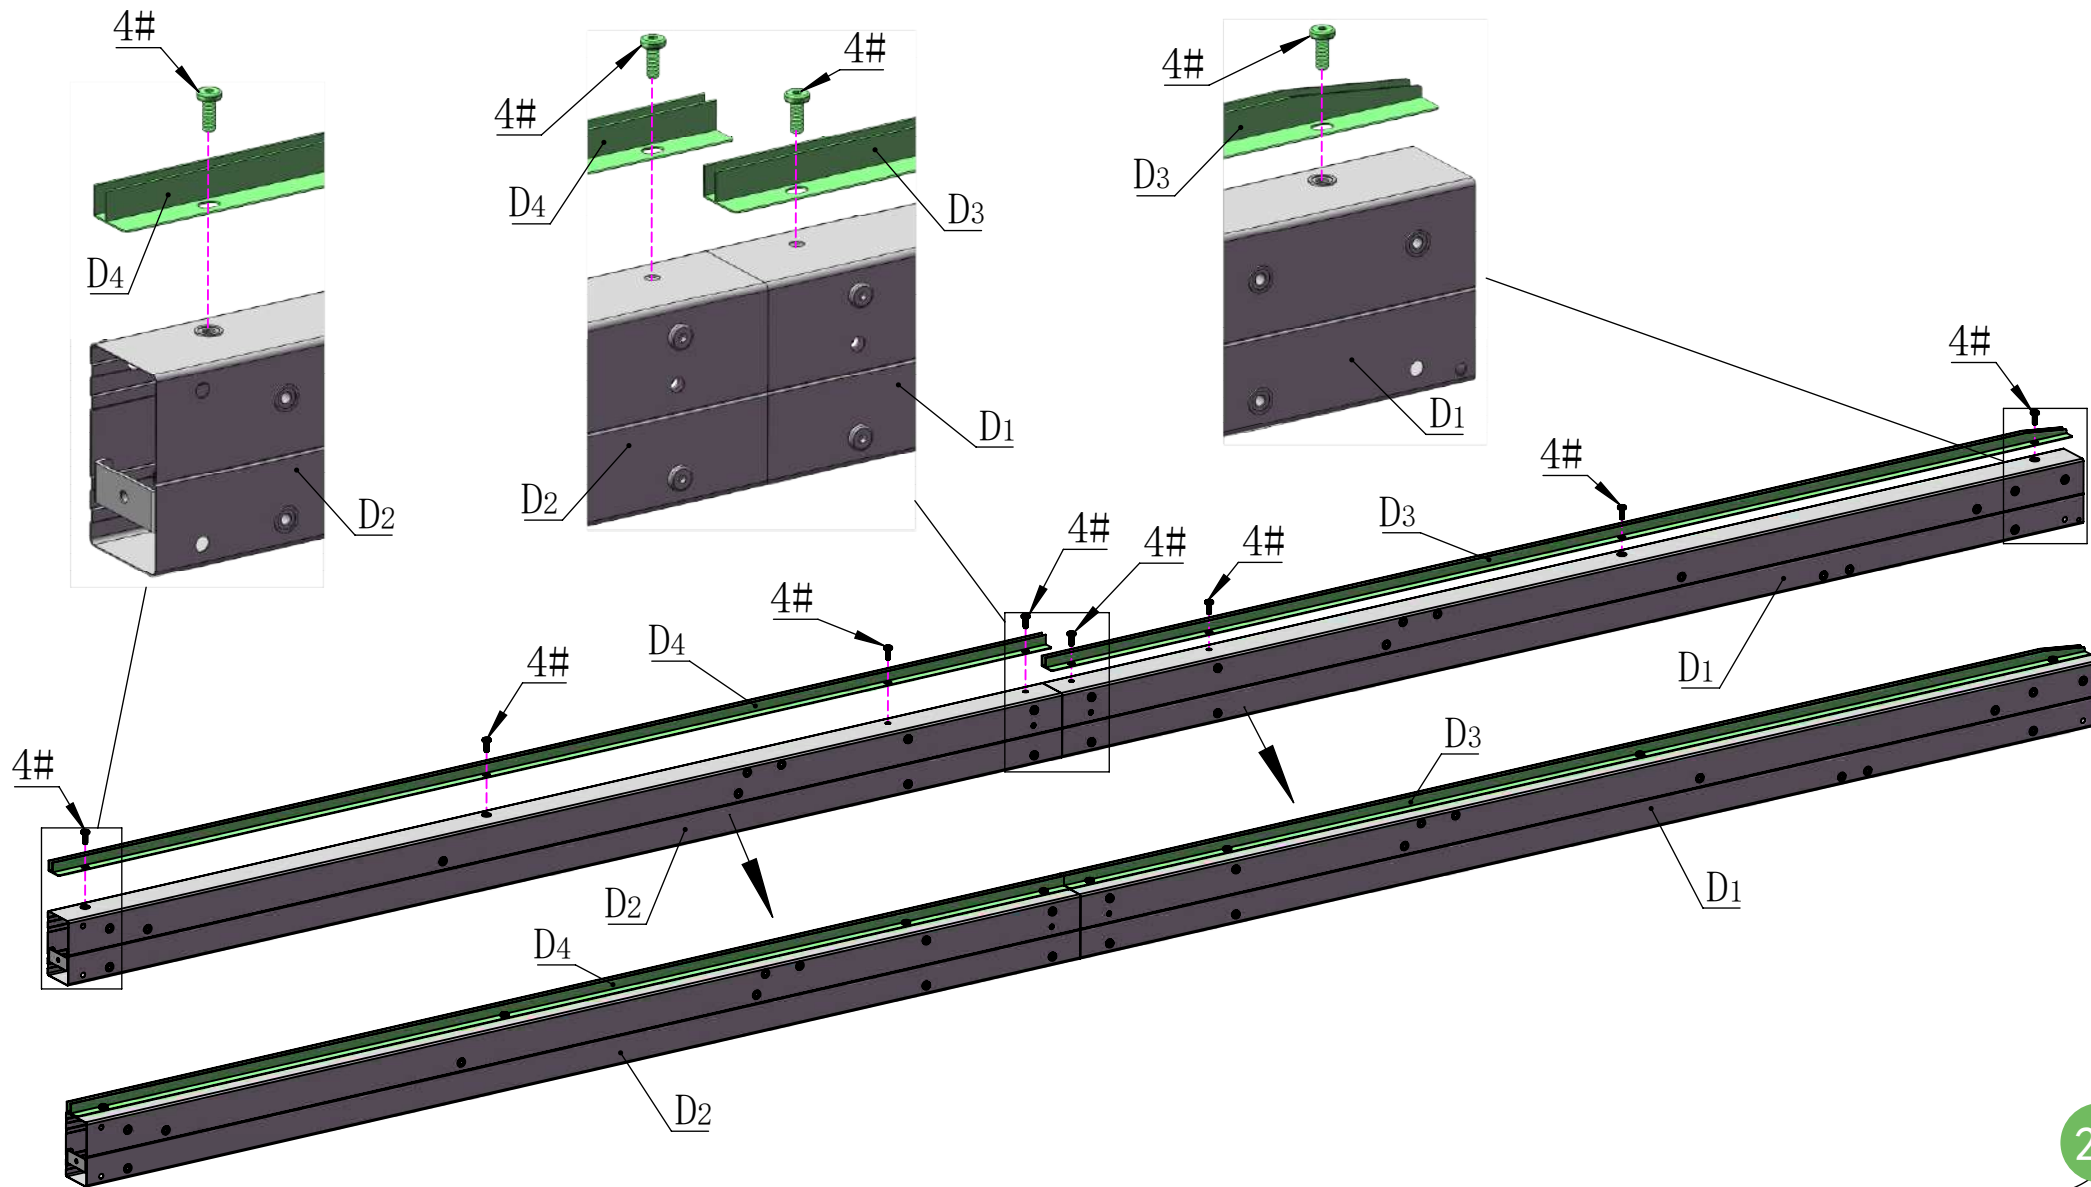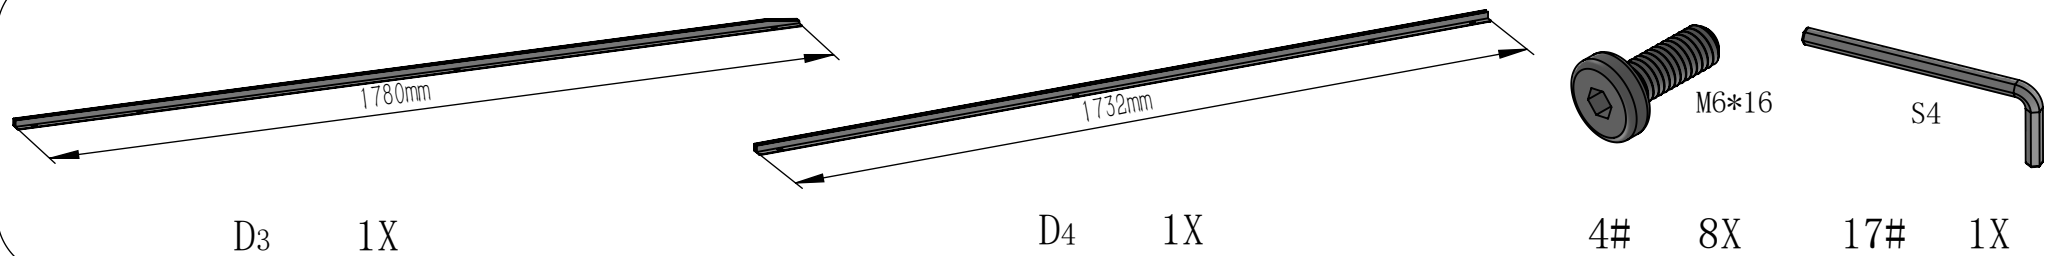


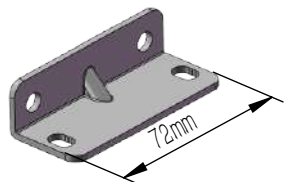




B7 2X

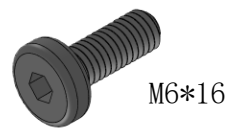


4# 4X

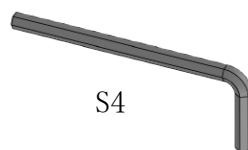


17# 1X

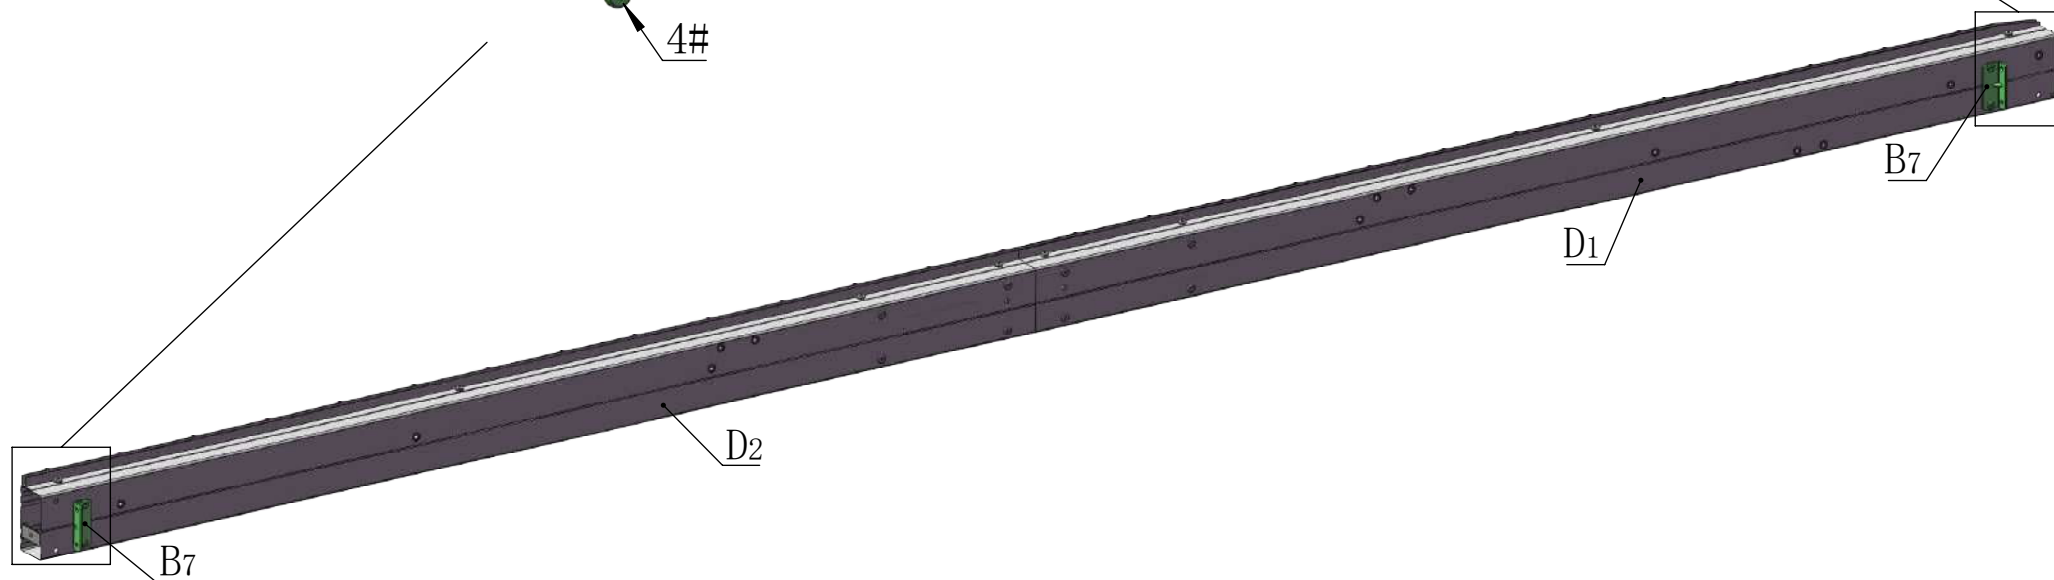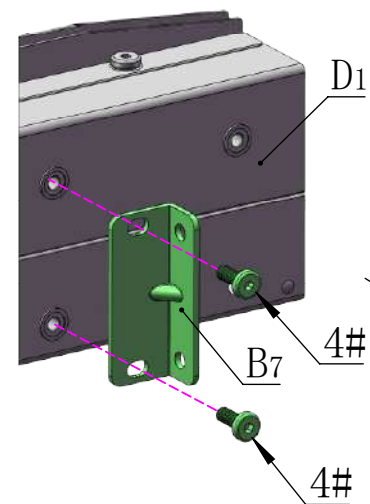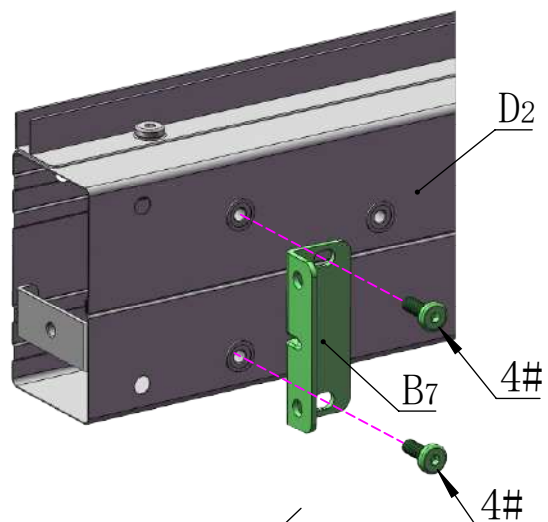

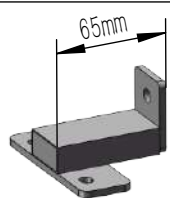


C6 1X

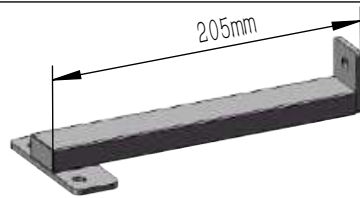


C7 1X




4# 4X

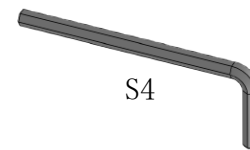


17# 1X

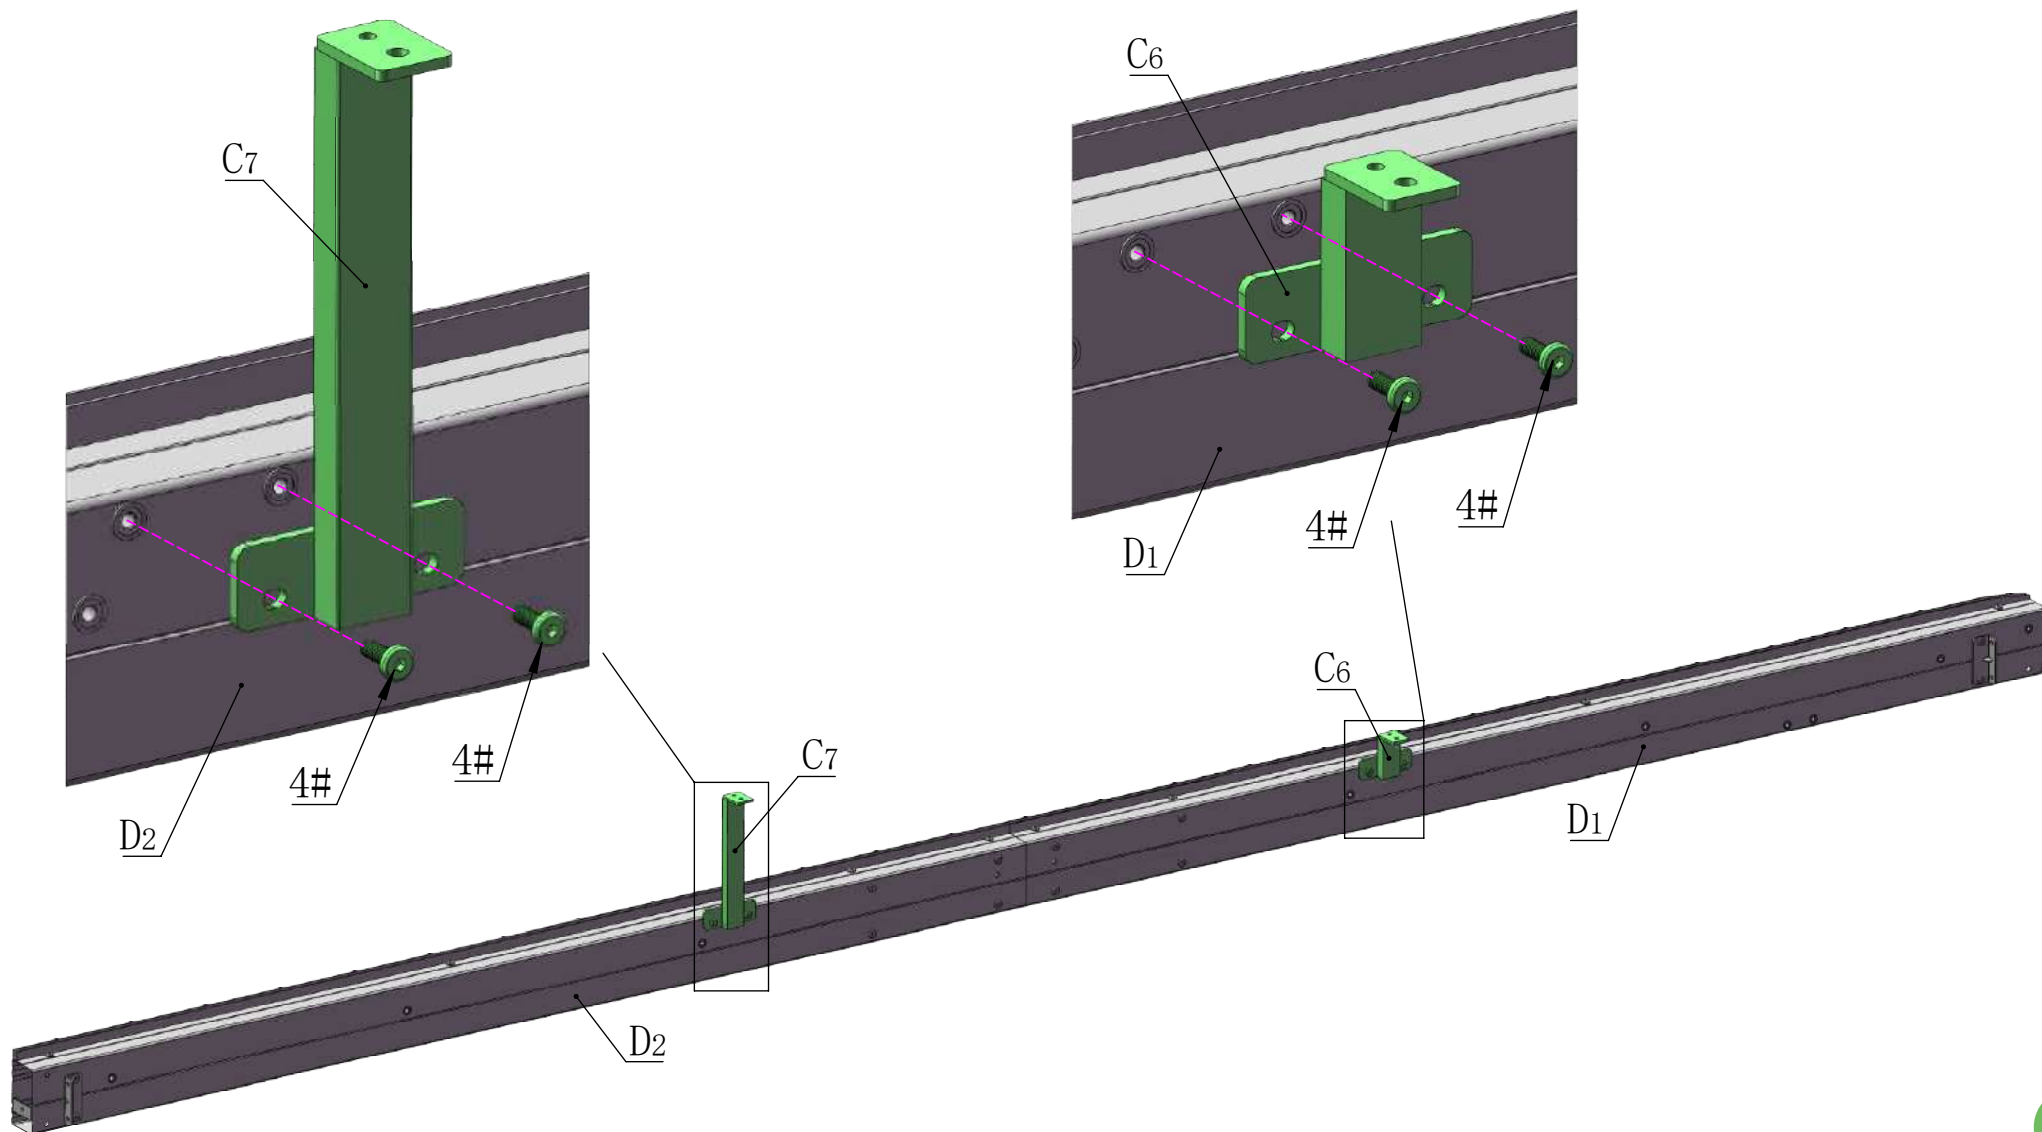


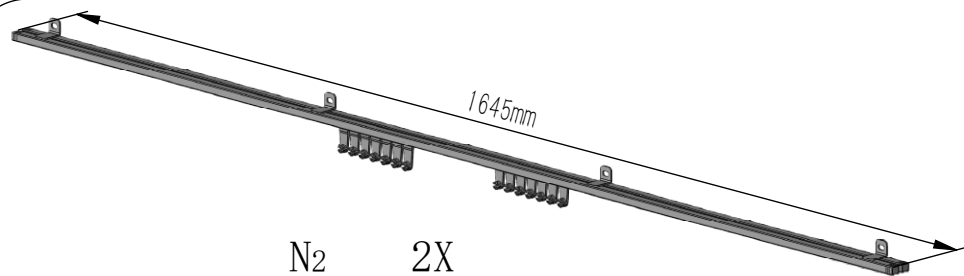


4# 8X


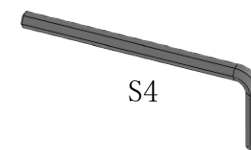



17# 1X

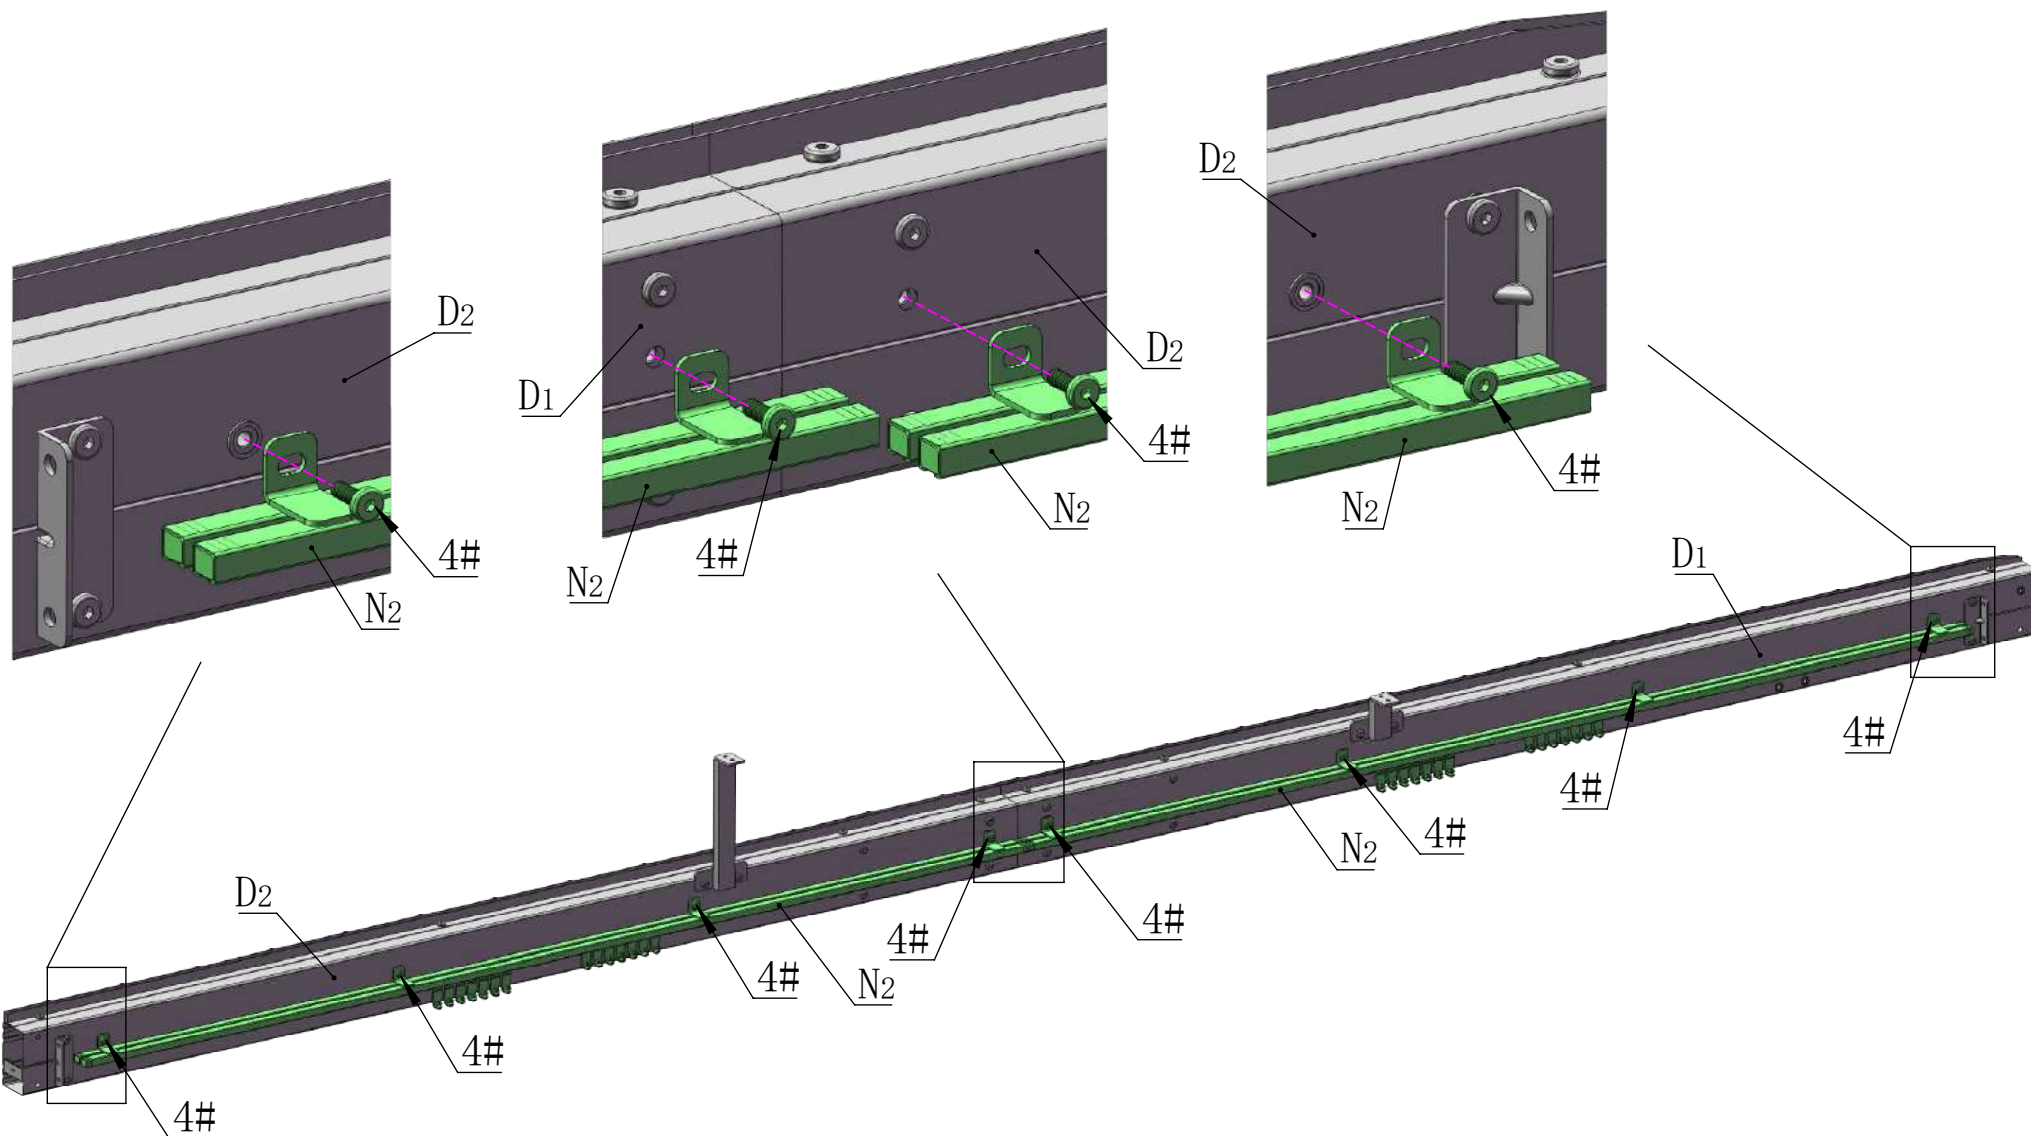

Rear Beam Assembly

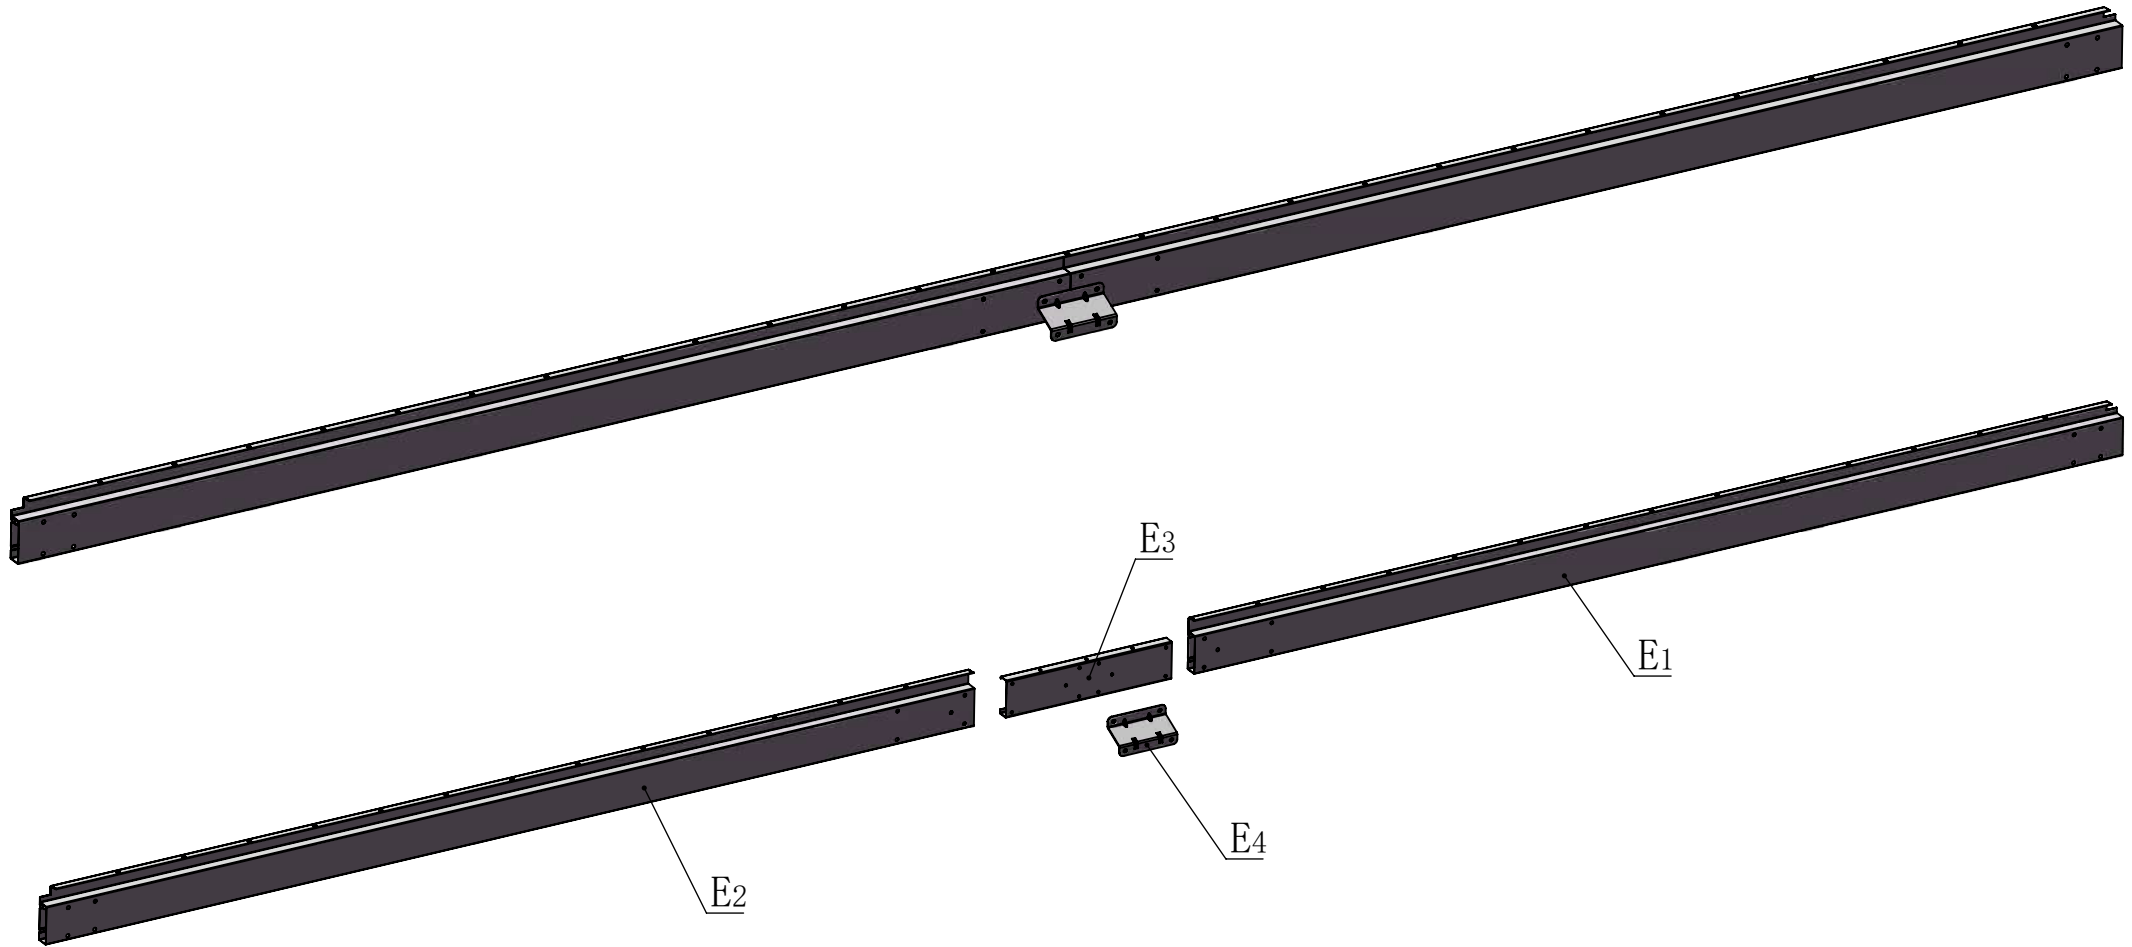

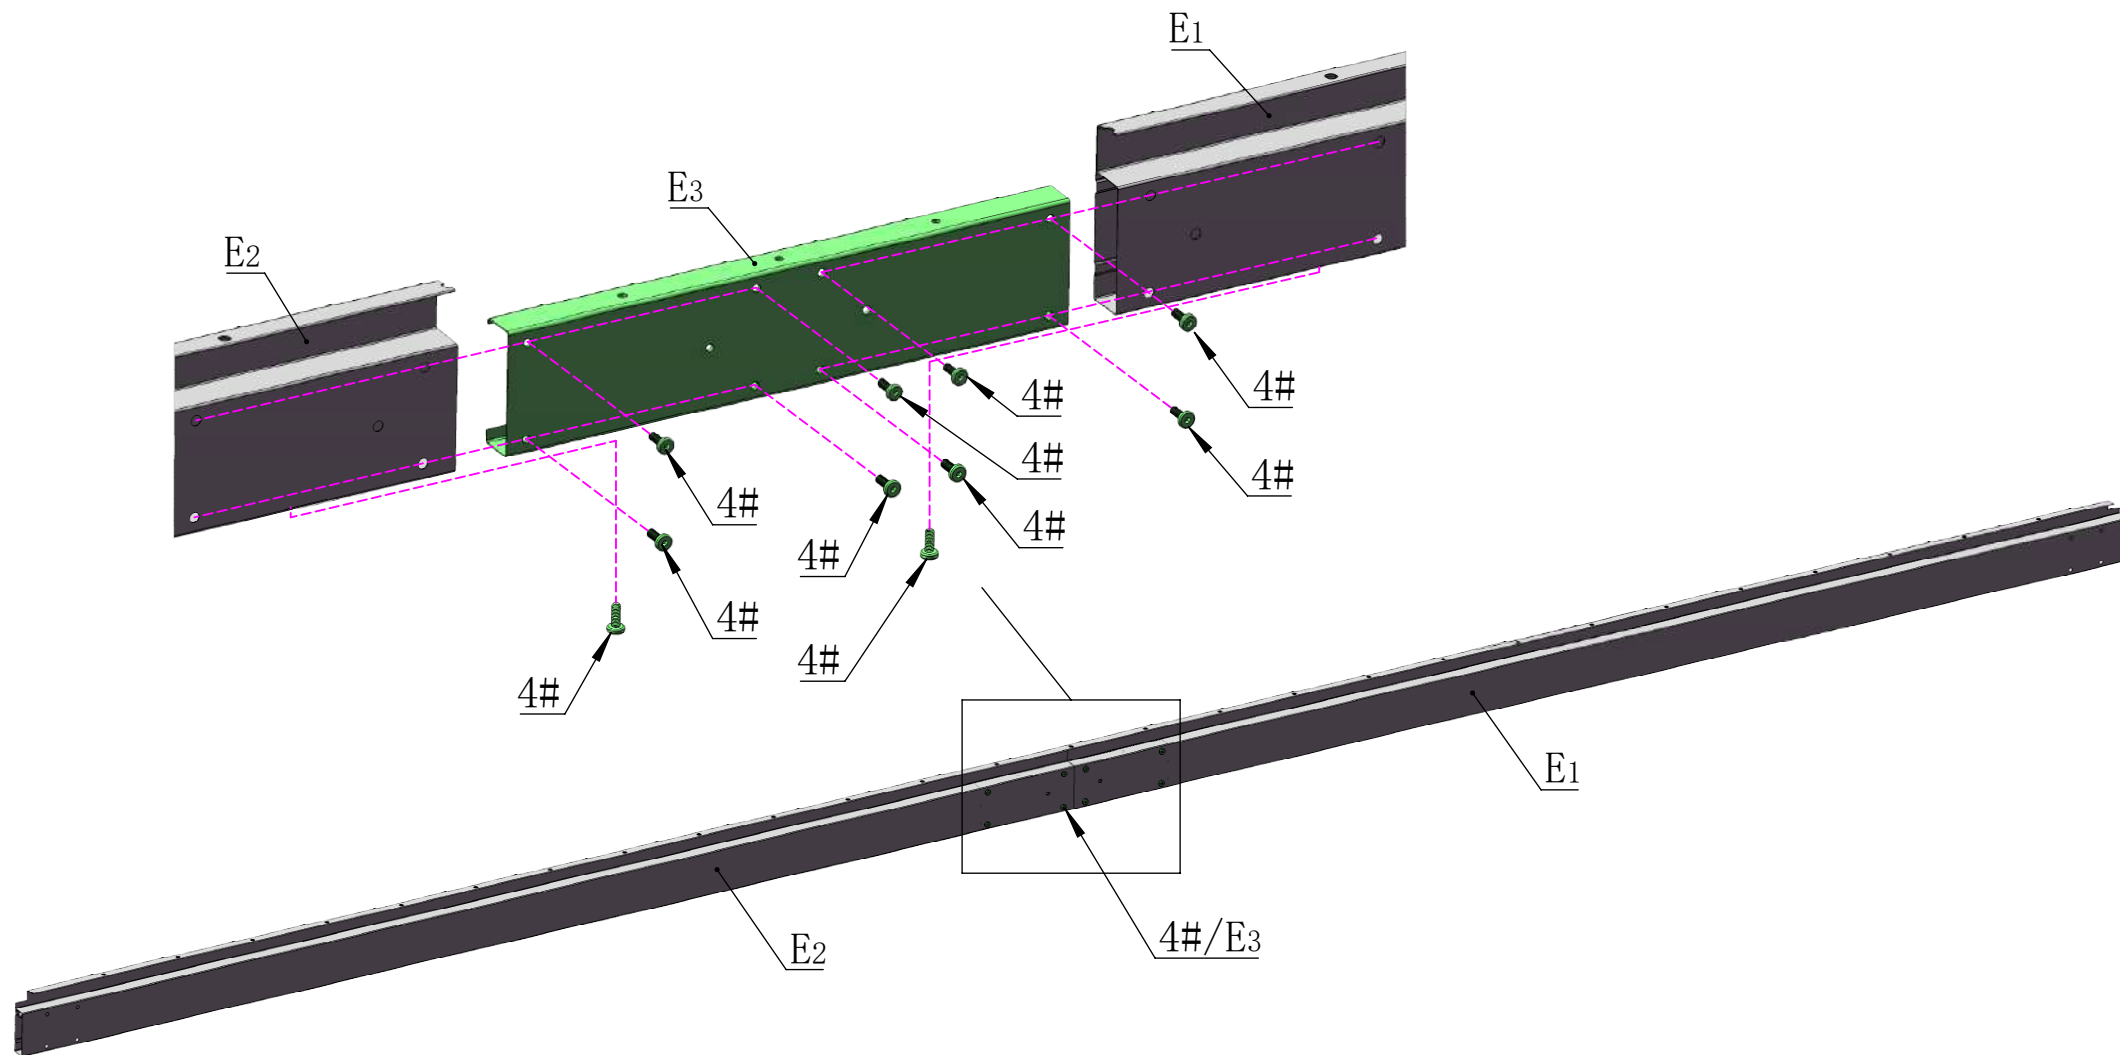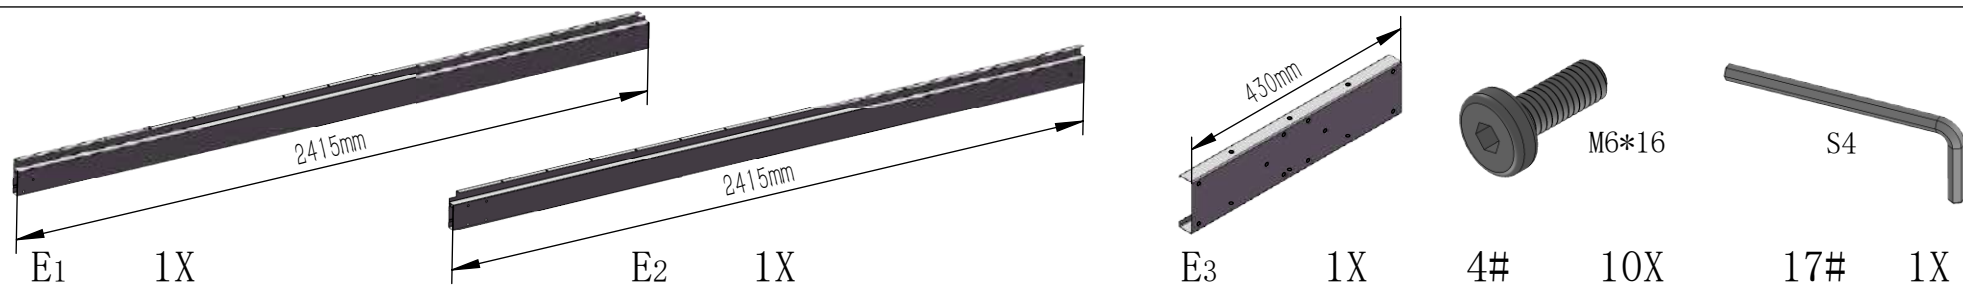

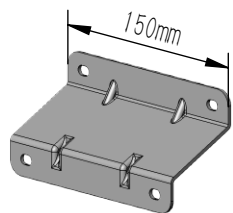

E4


1X



M6*16

4#


2X

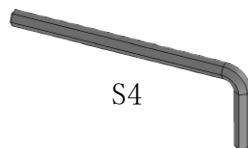


S4

17#

1X

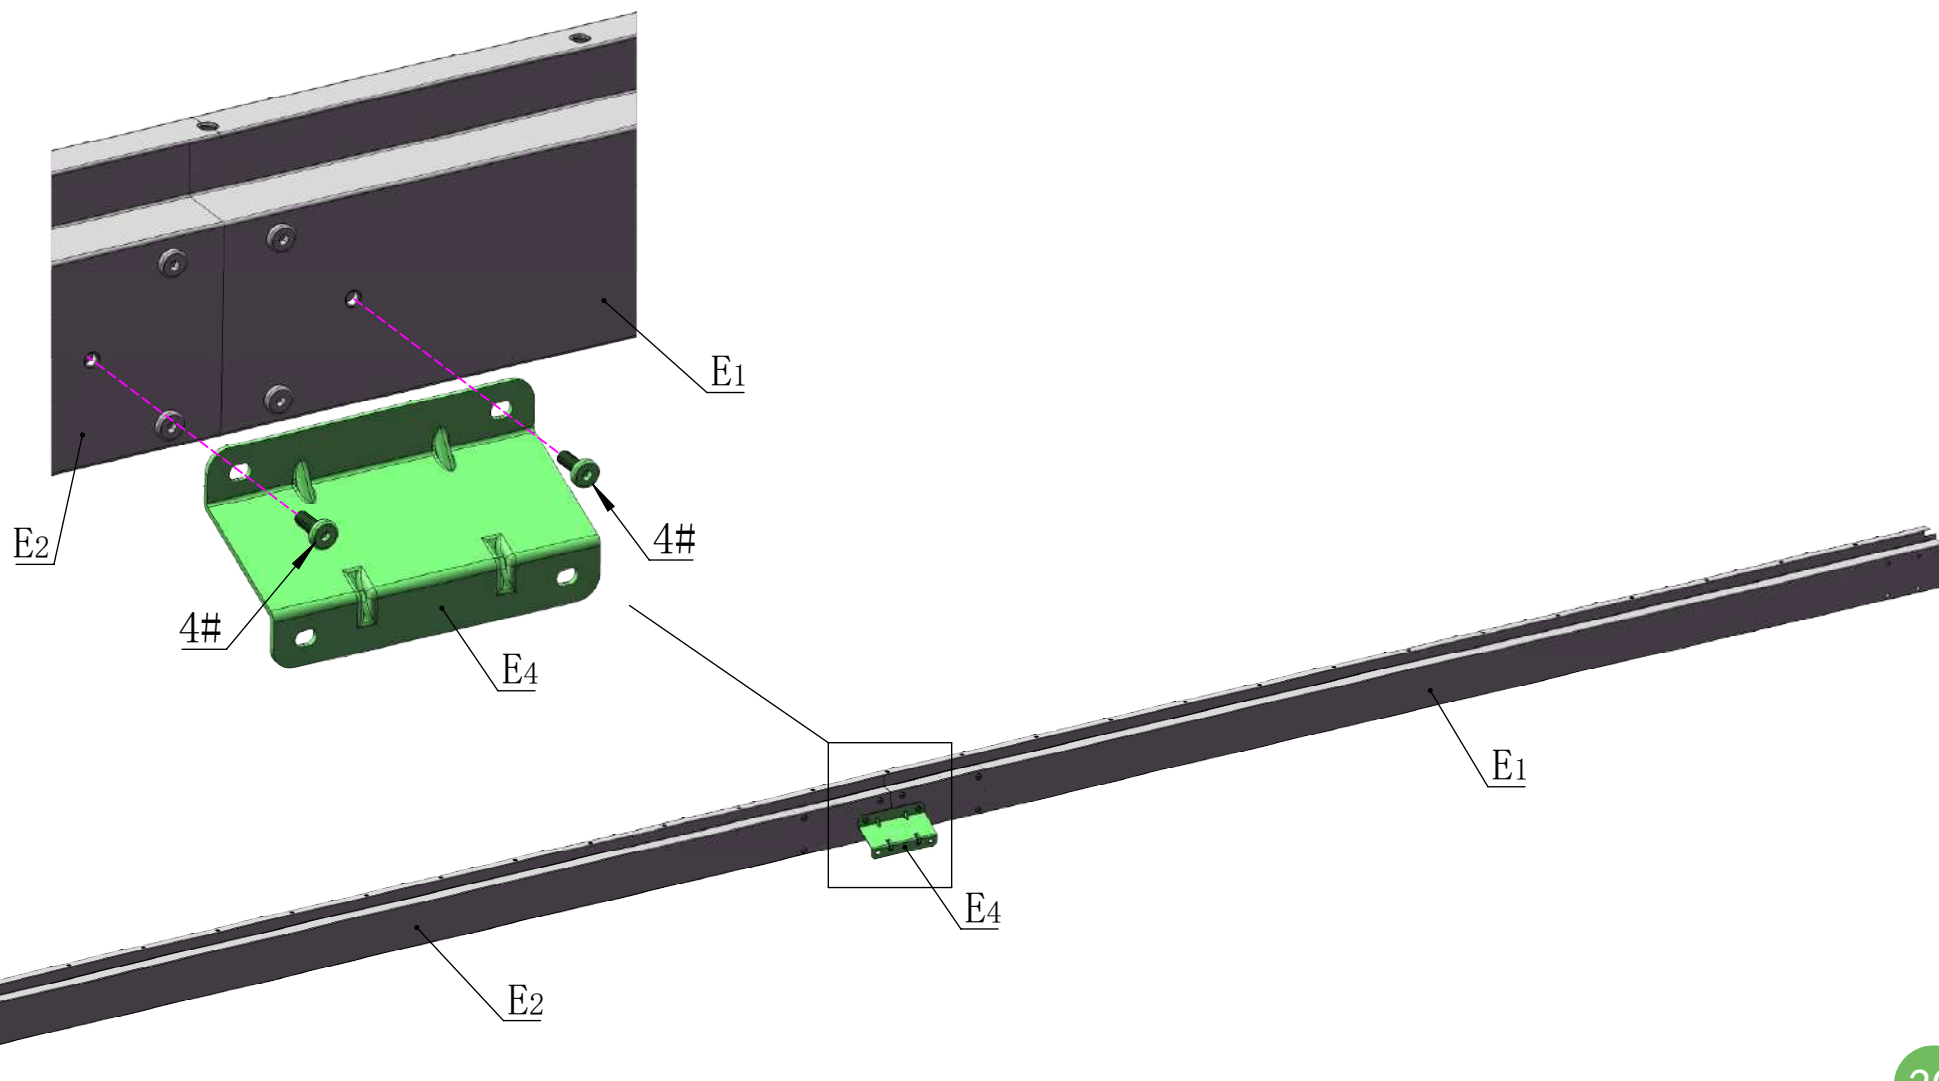


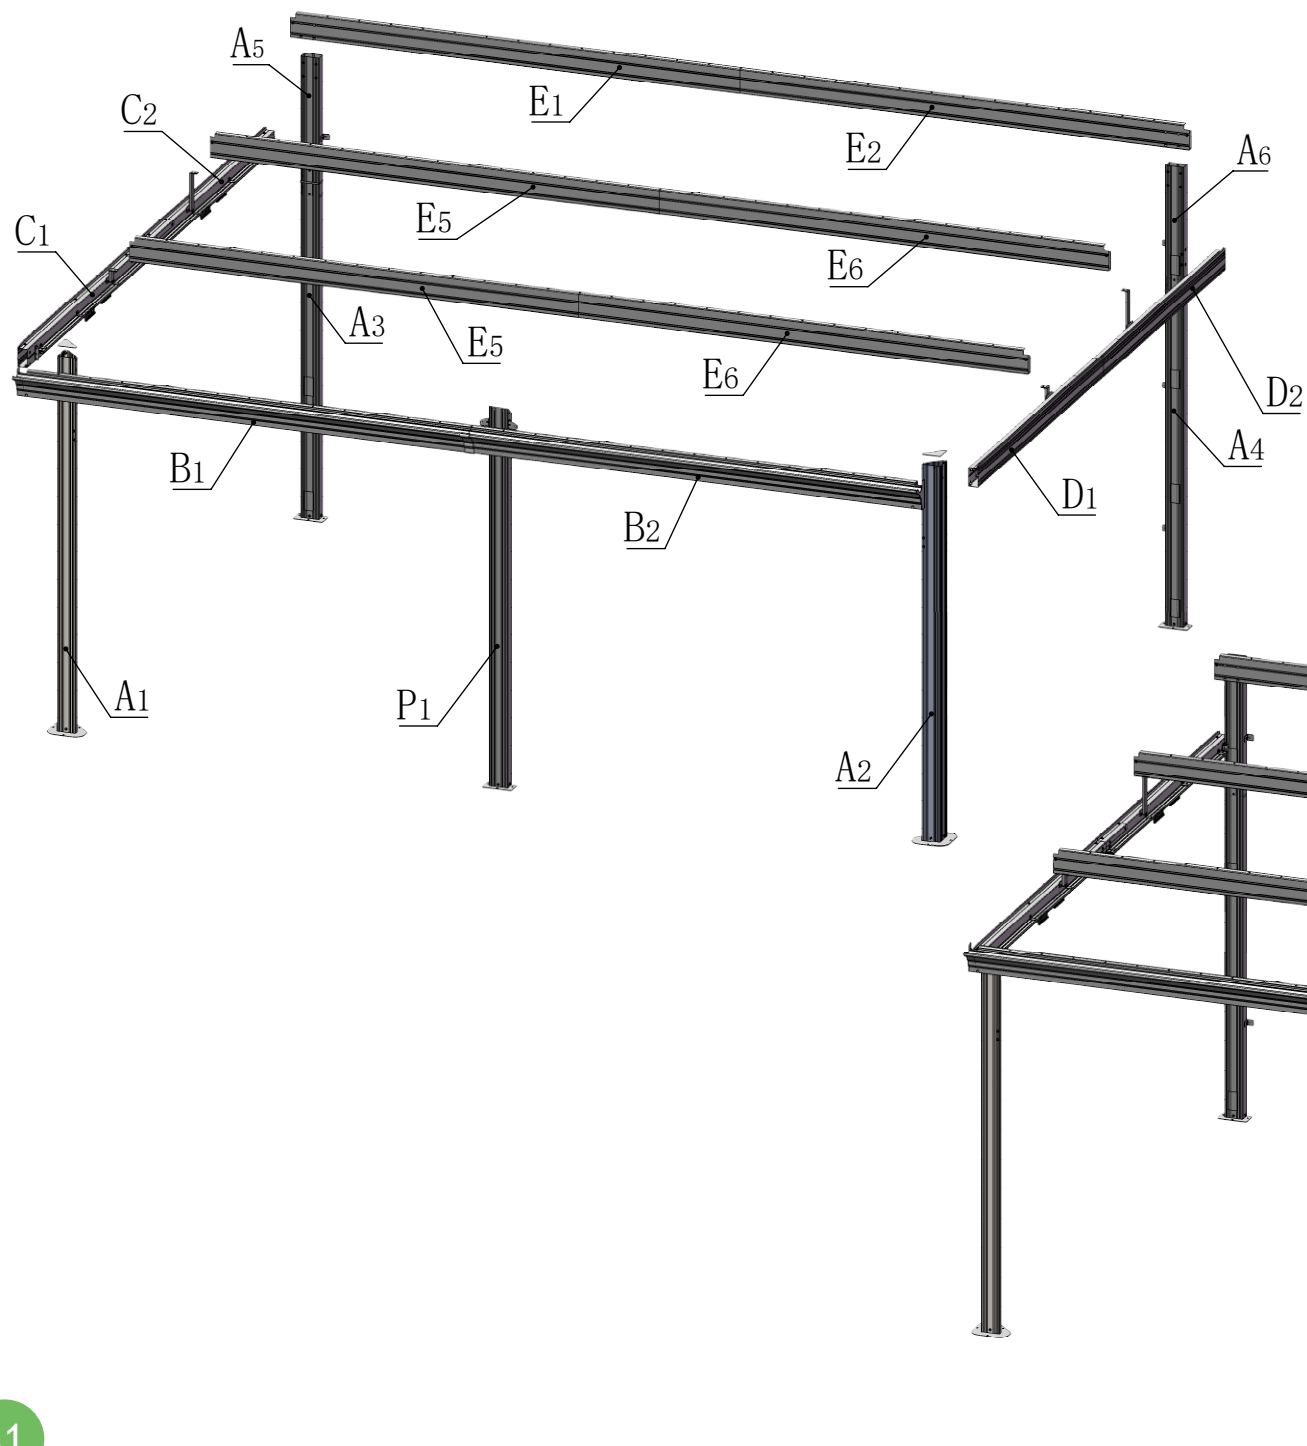

Frame Assembly



M6*16

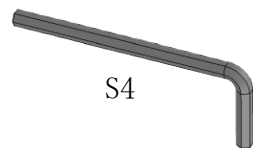


S4

4#

6X

17#

1X

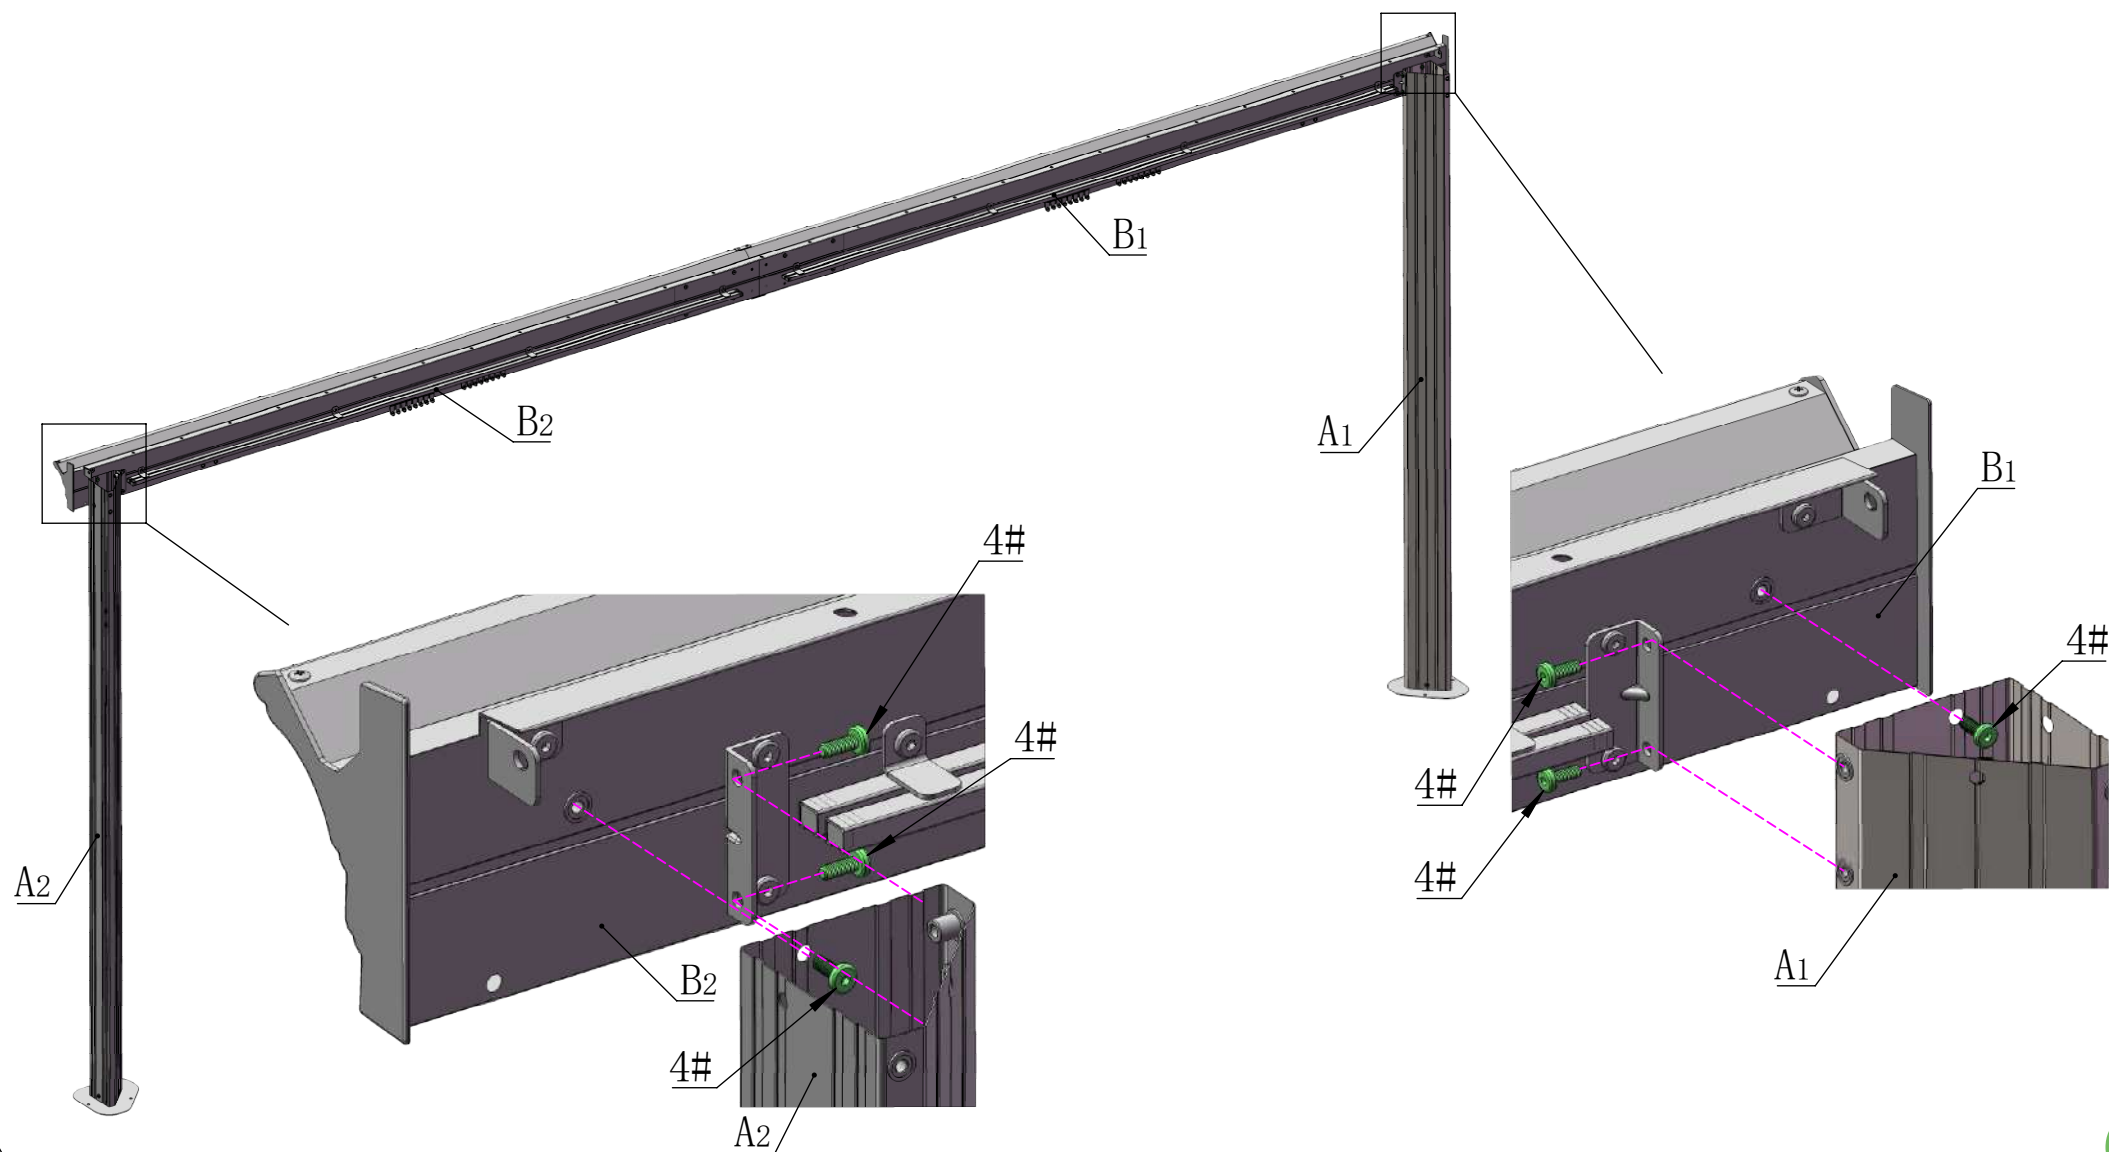




M6*16

4#



4X

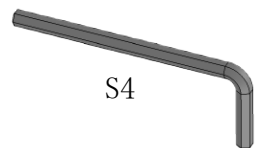

S4

17#

1X

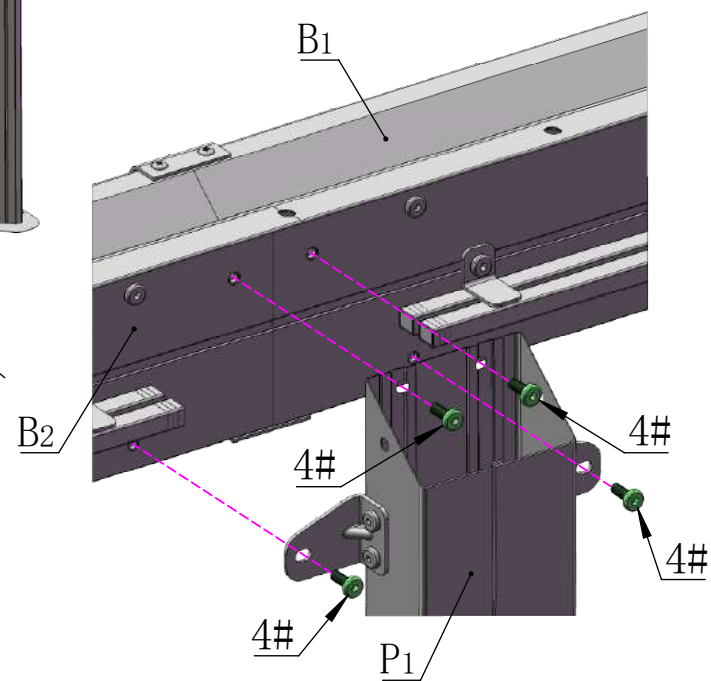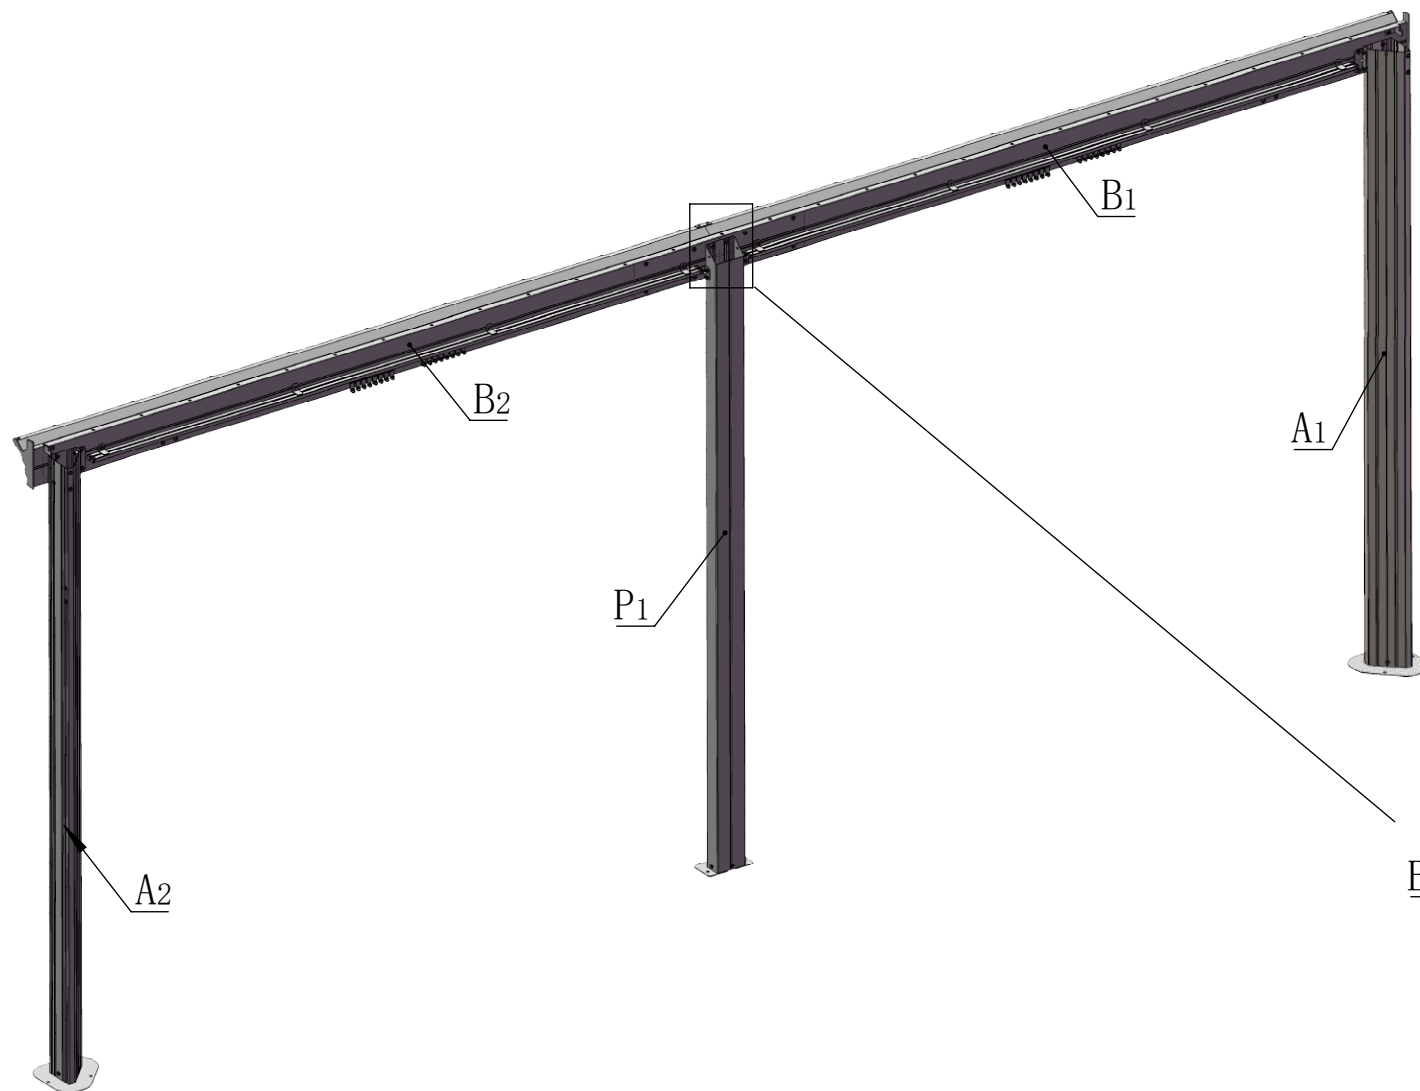



M6*16

4#


10X



M6*30

7#

2X

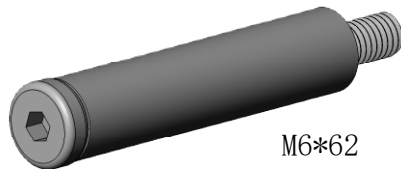

M6*62

9#


6X




S4


17#

1X

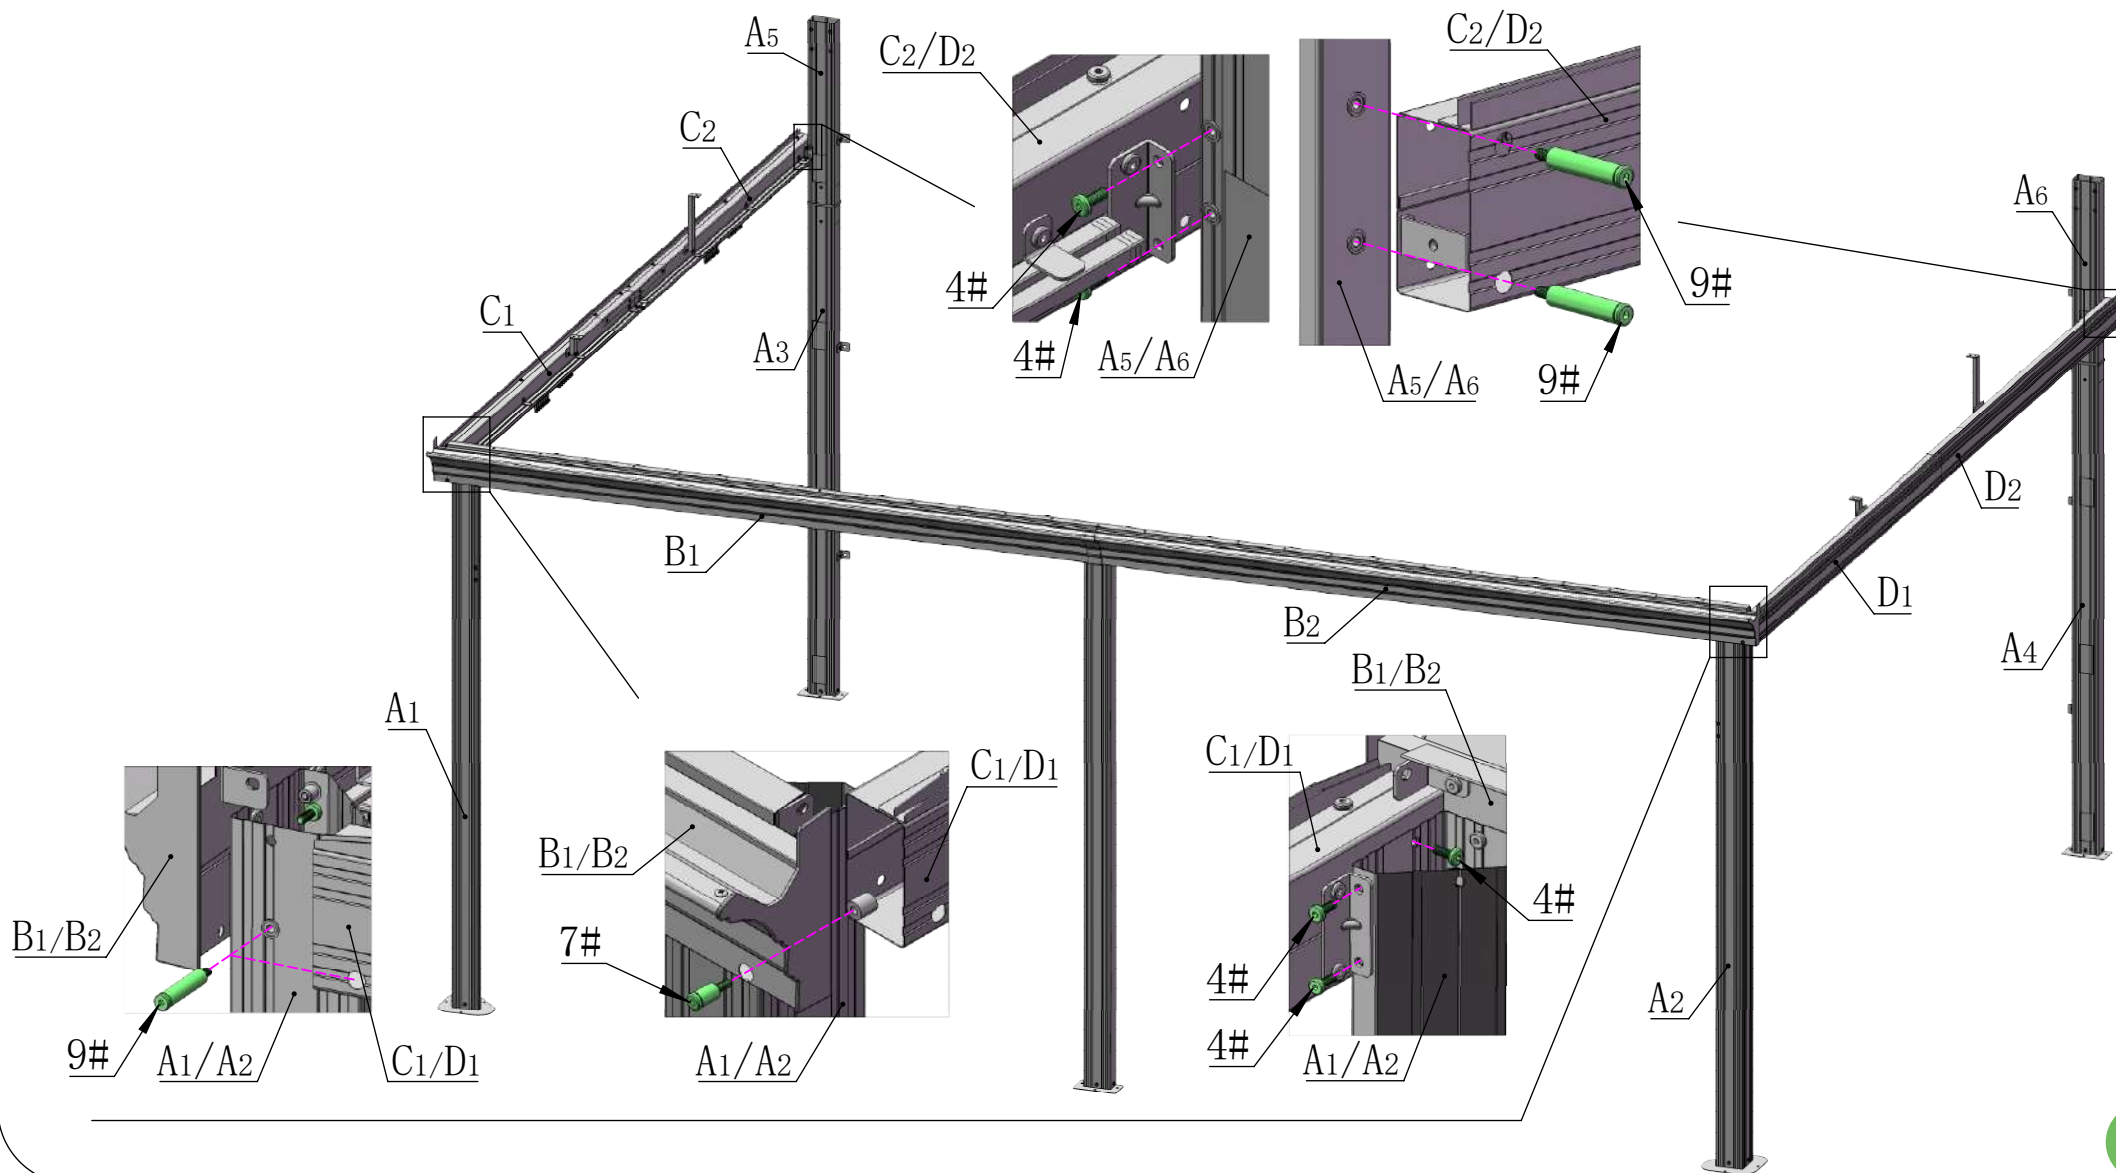

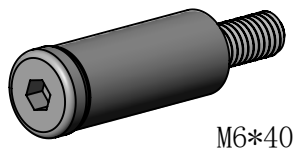

M6*40

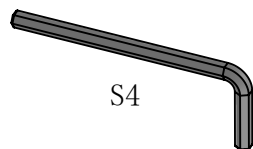


S4


8#

8X

17#

1X

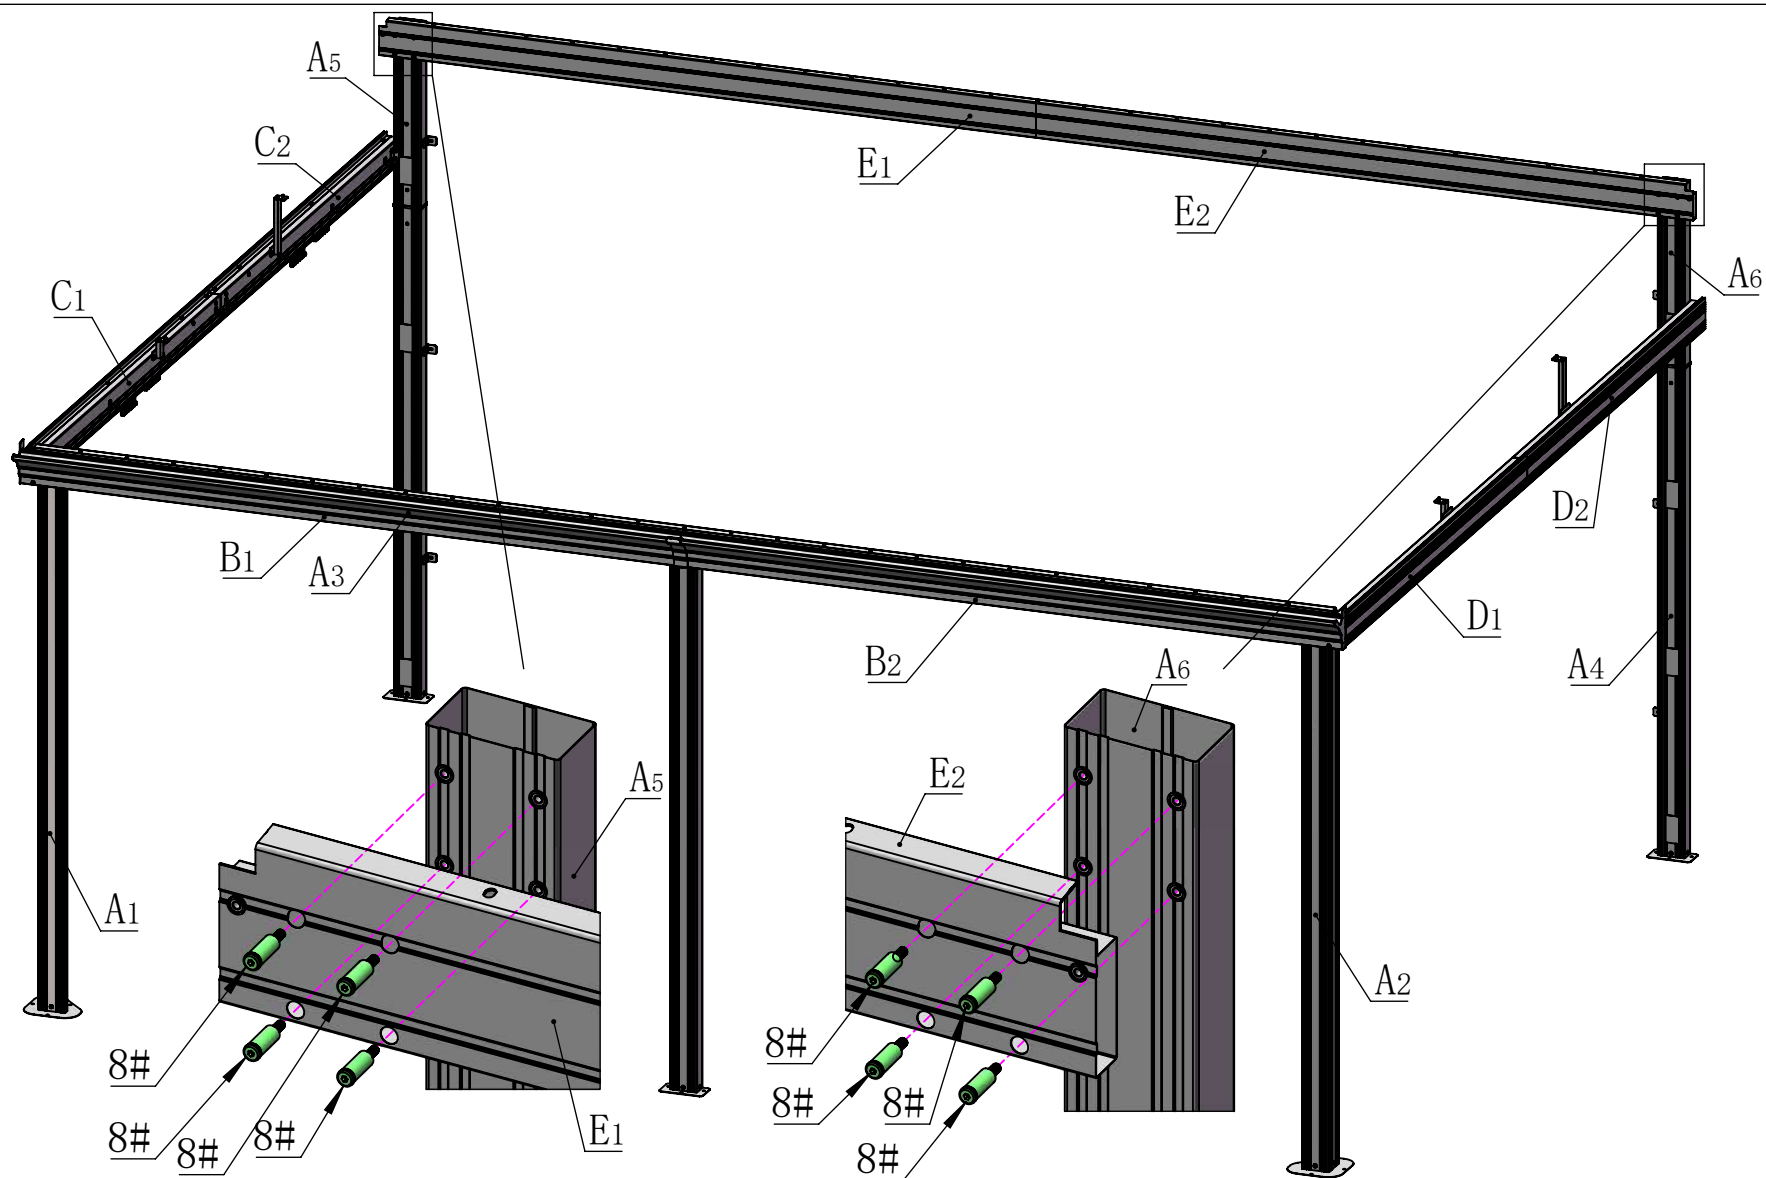

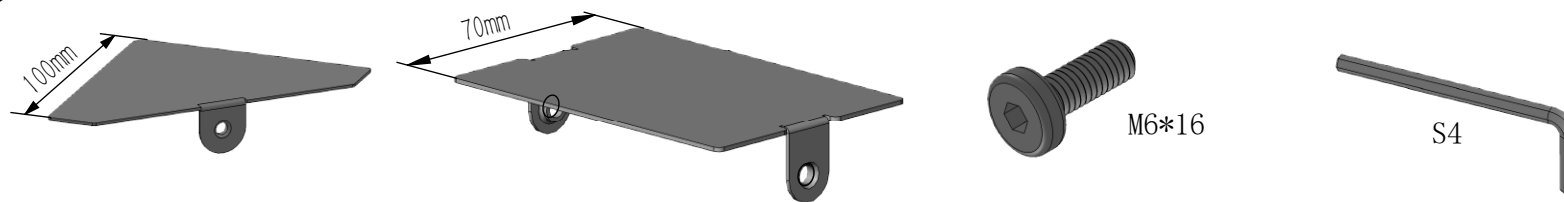




I1 2X


P4 1X

4# 4X


17# 1X

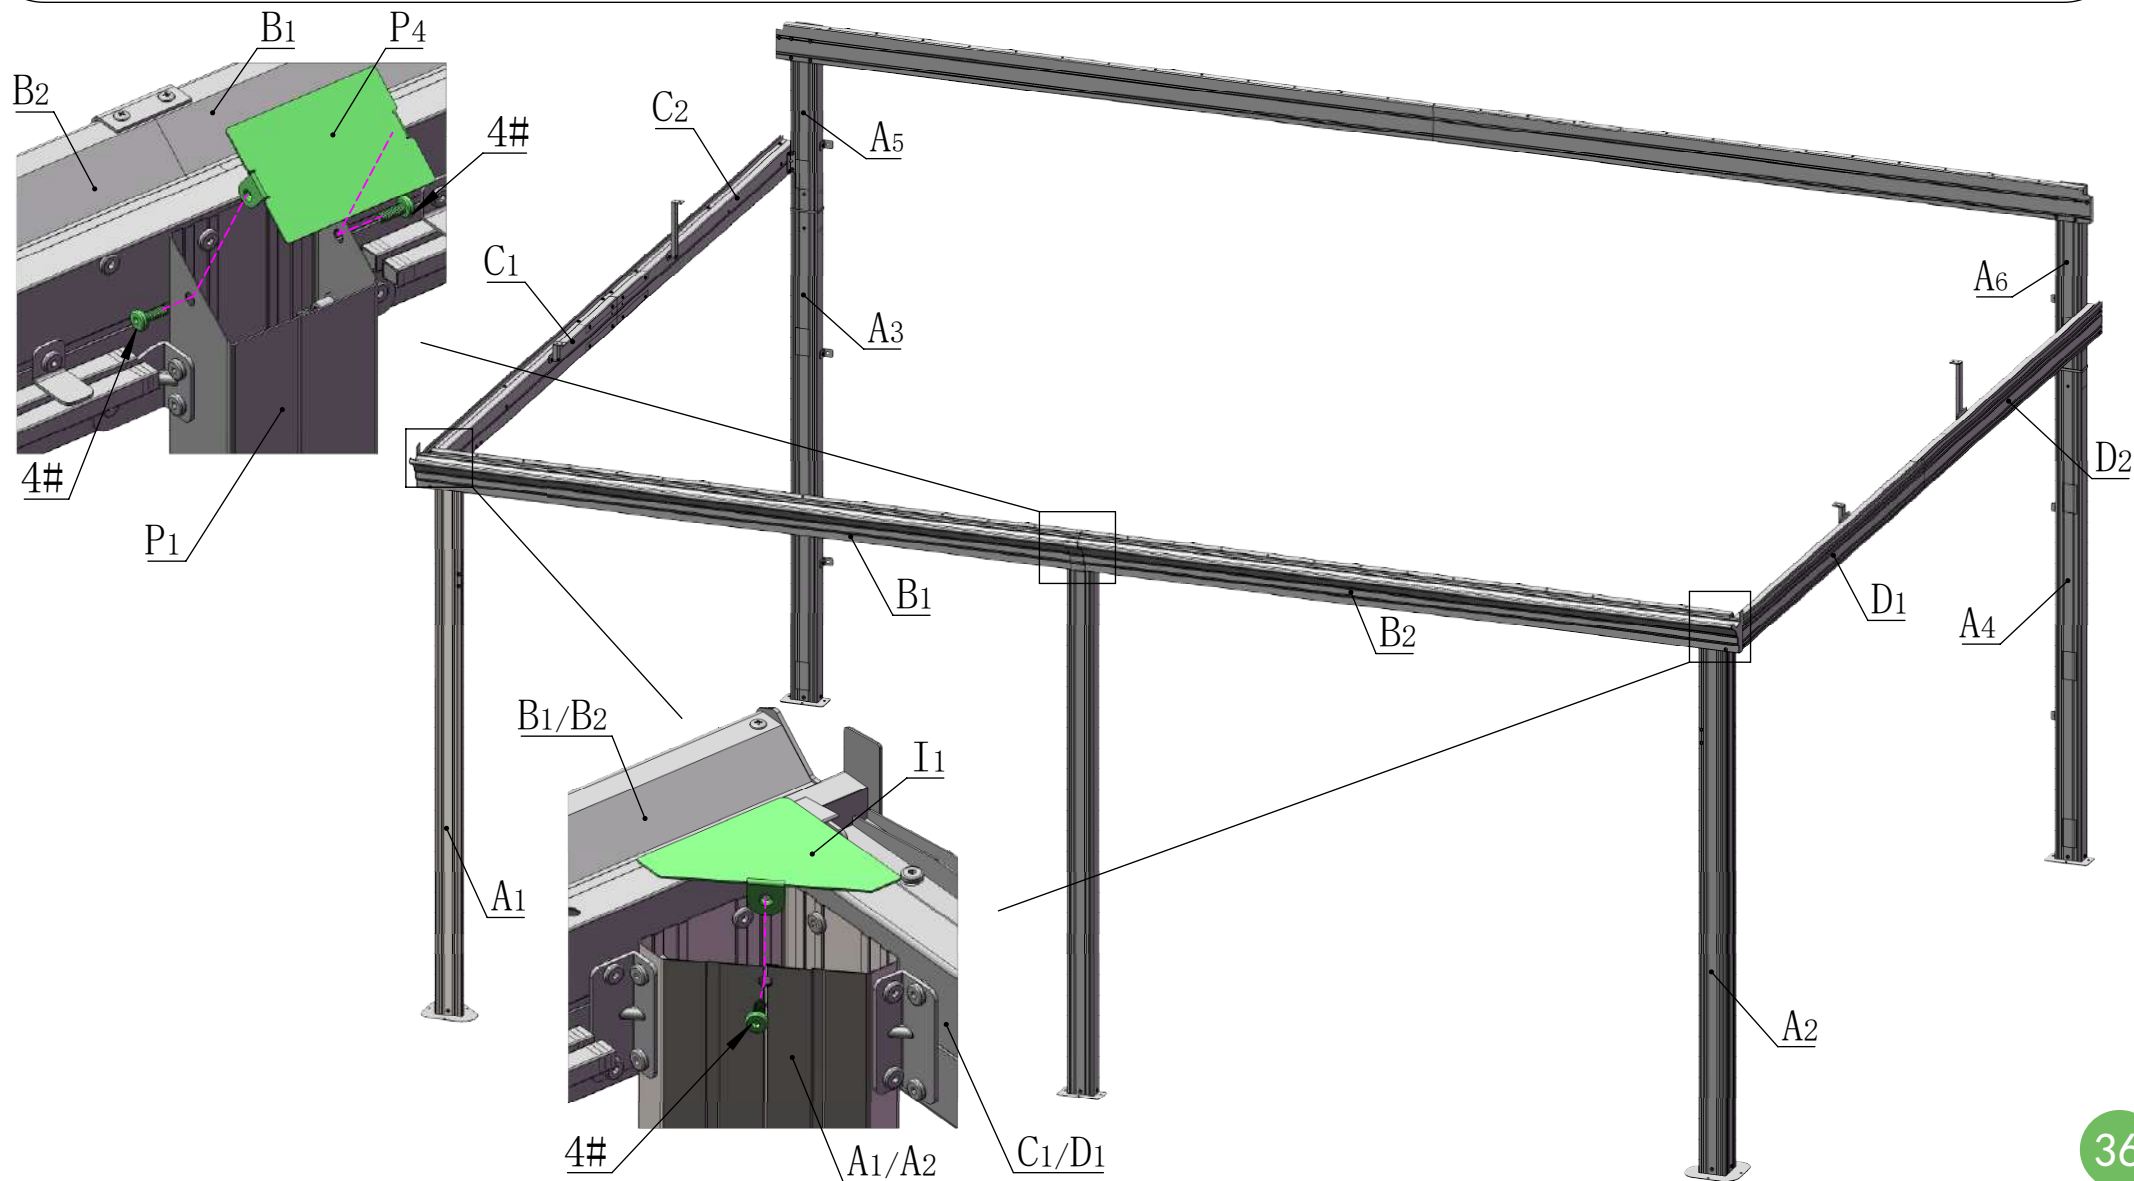

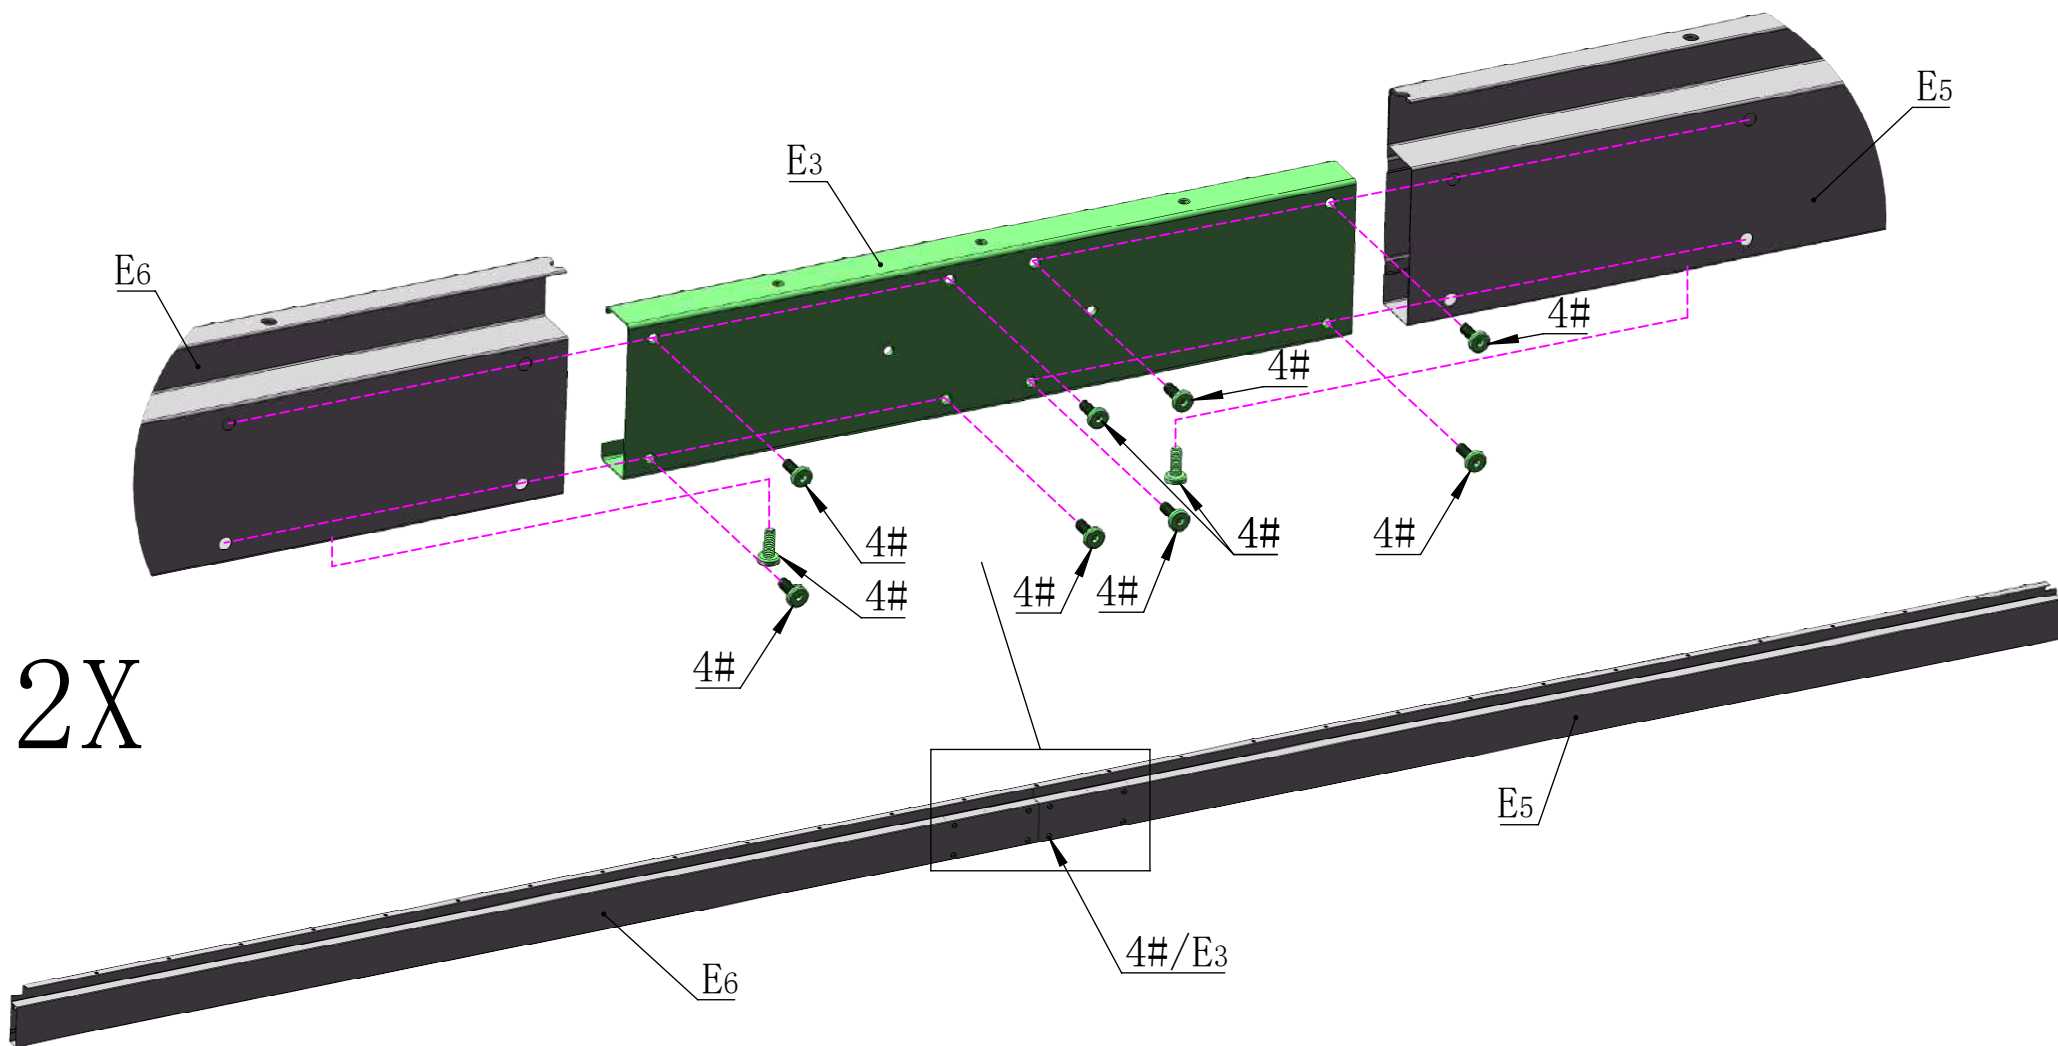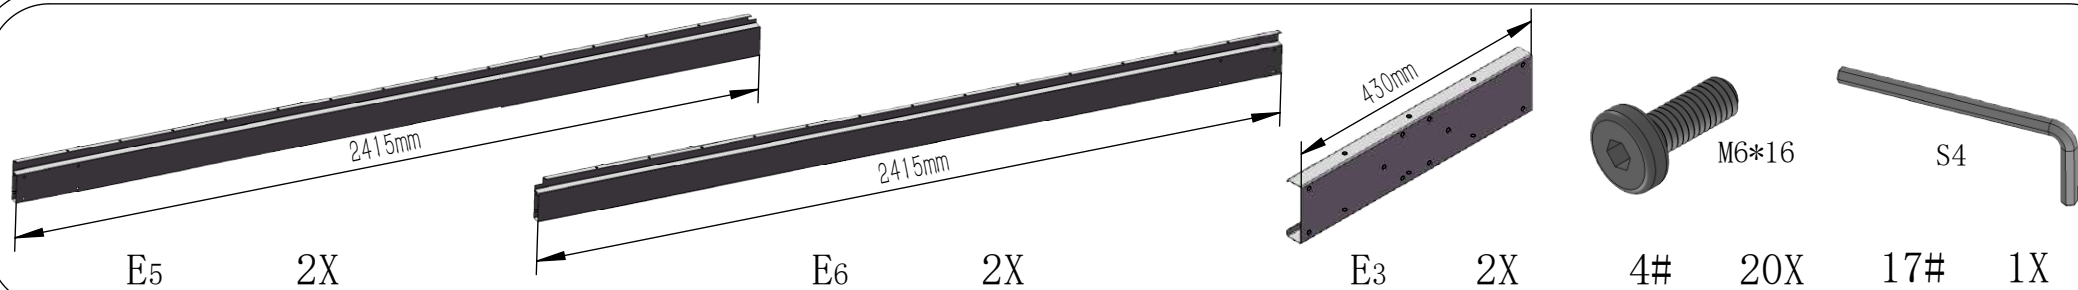

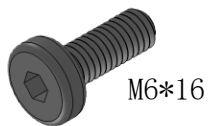

M6*16

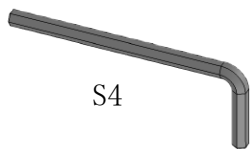


S4



4#


4X

17#


1X

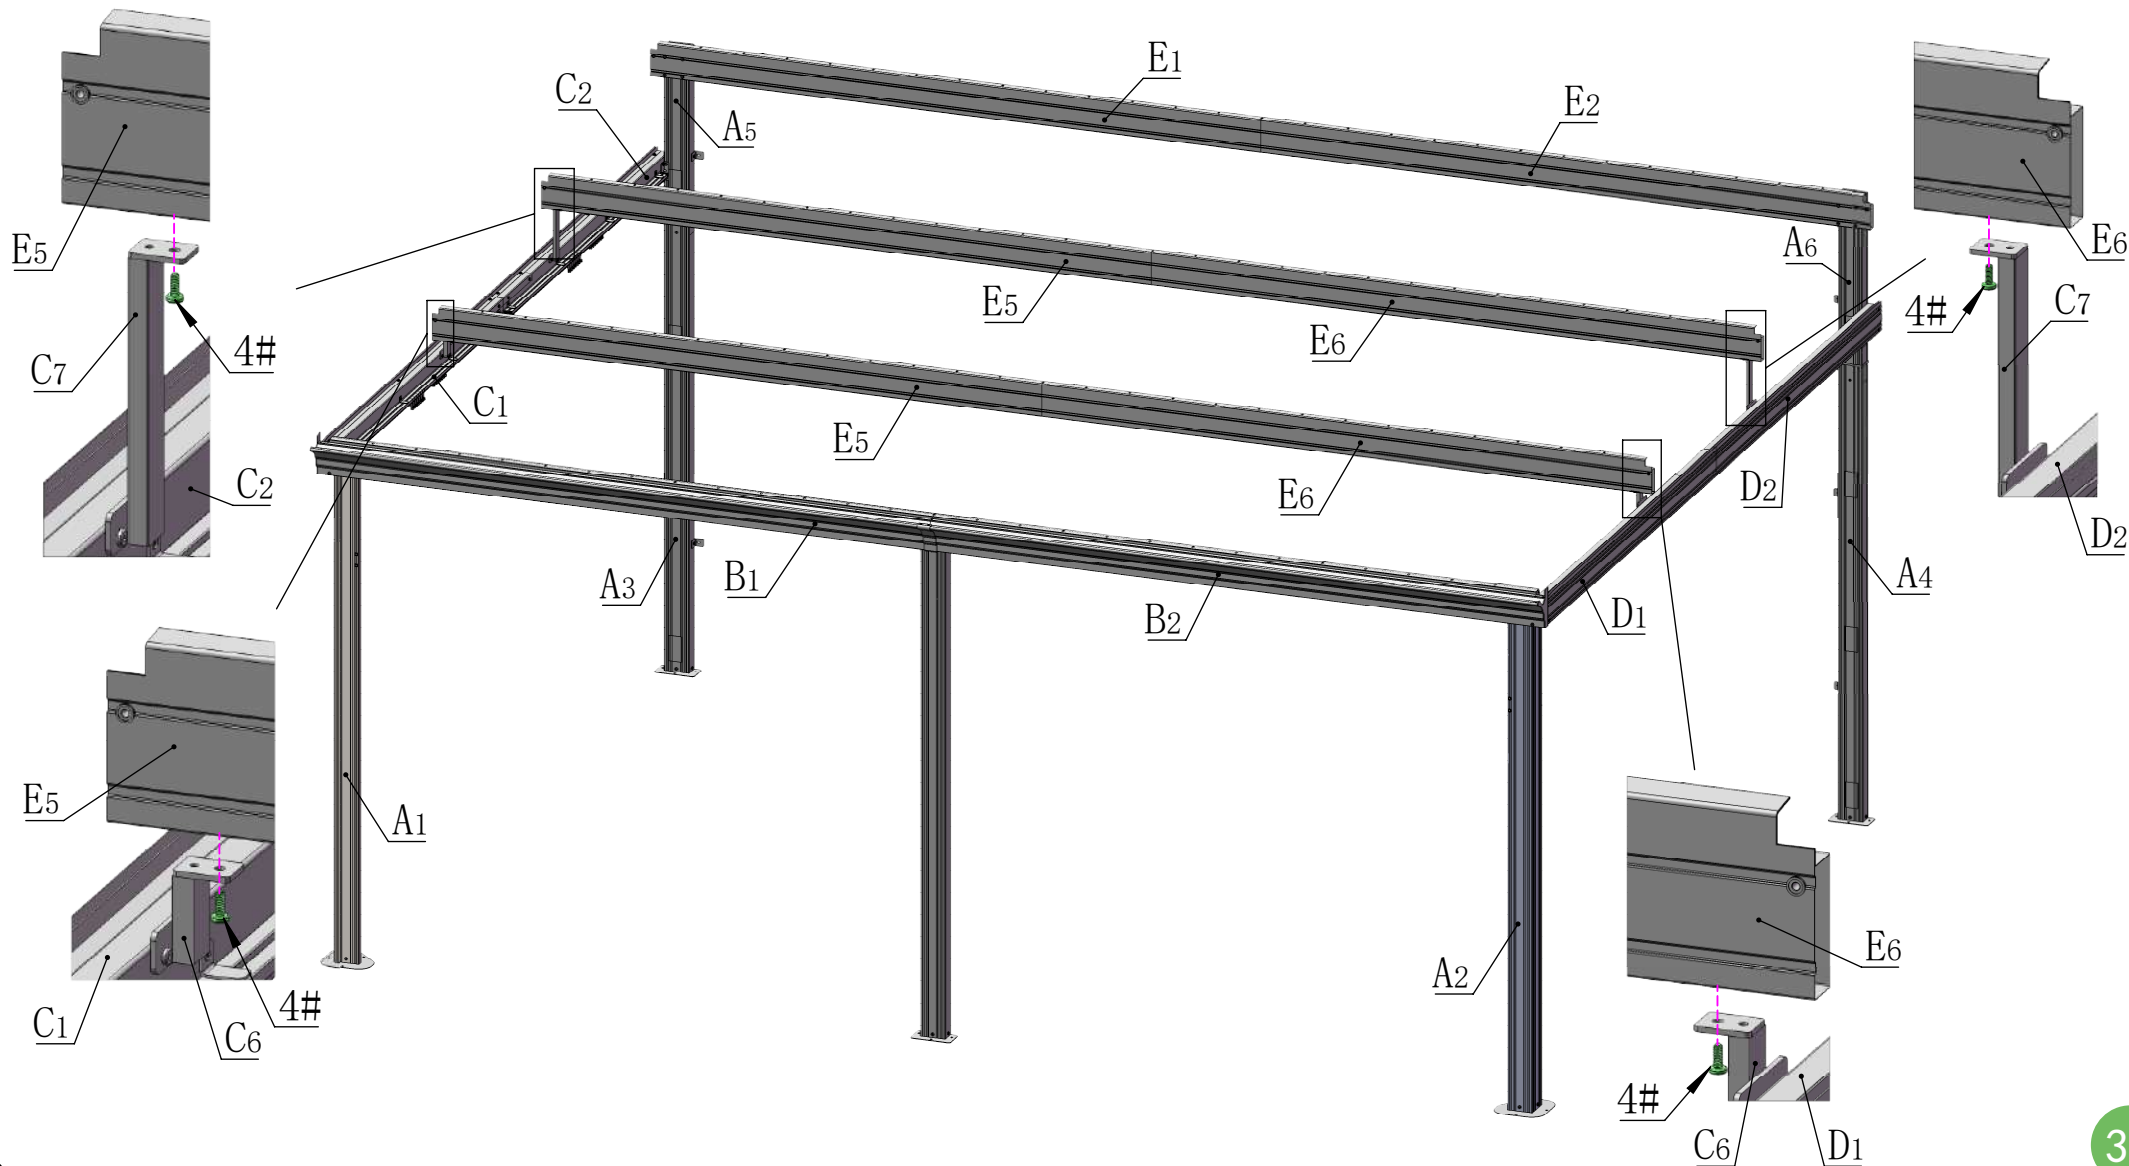

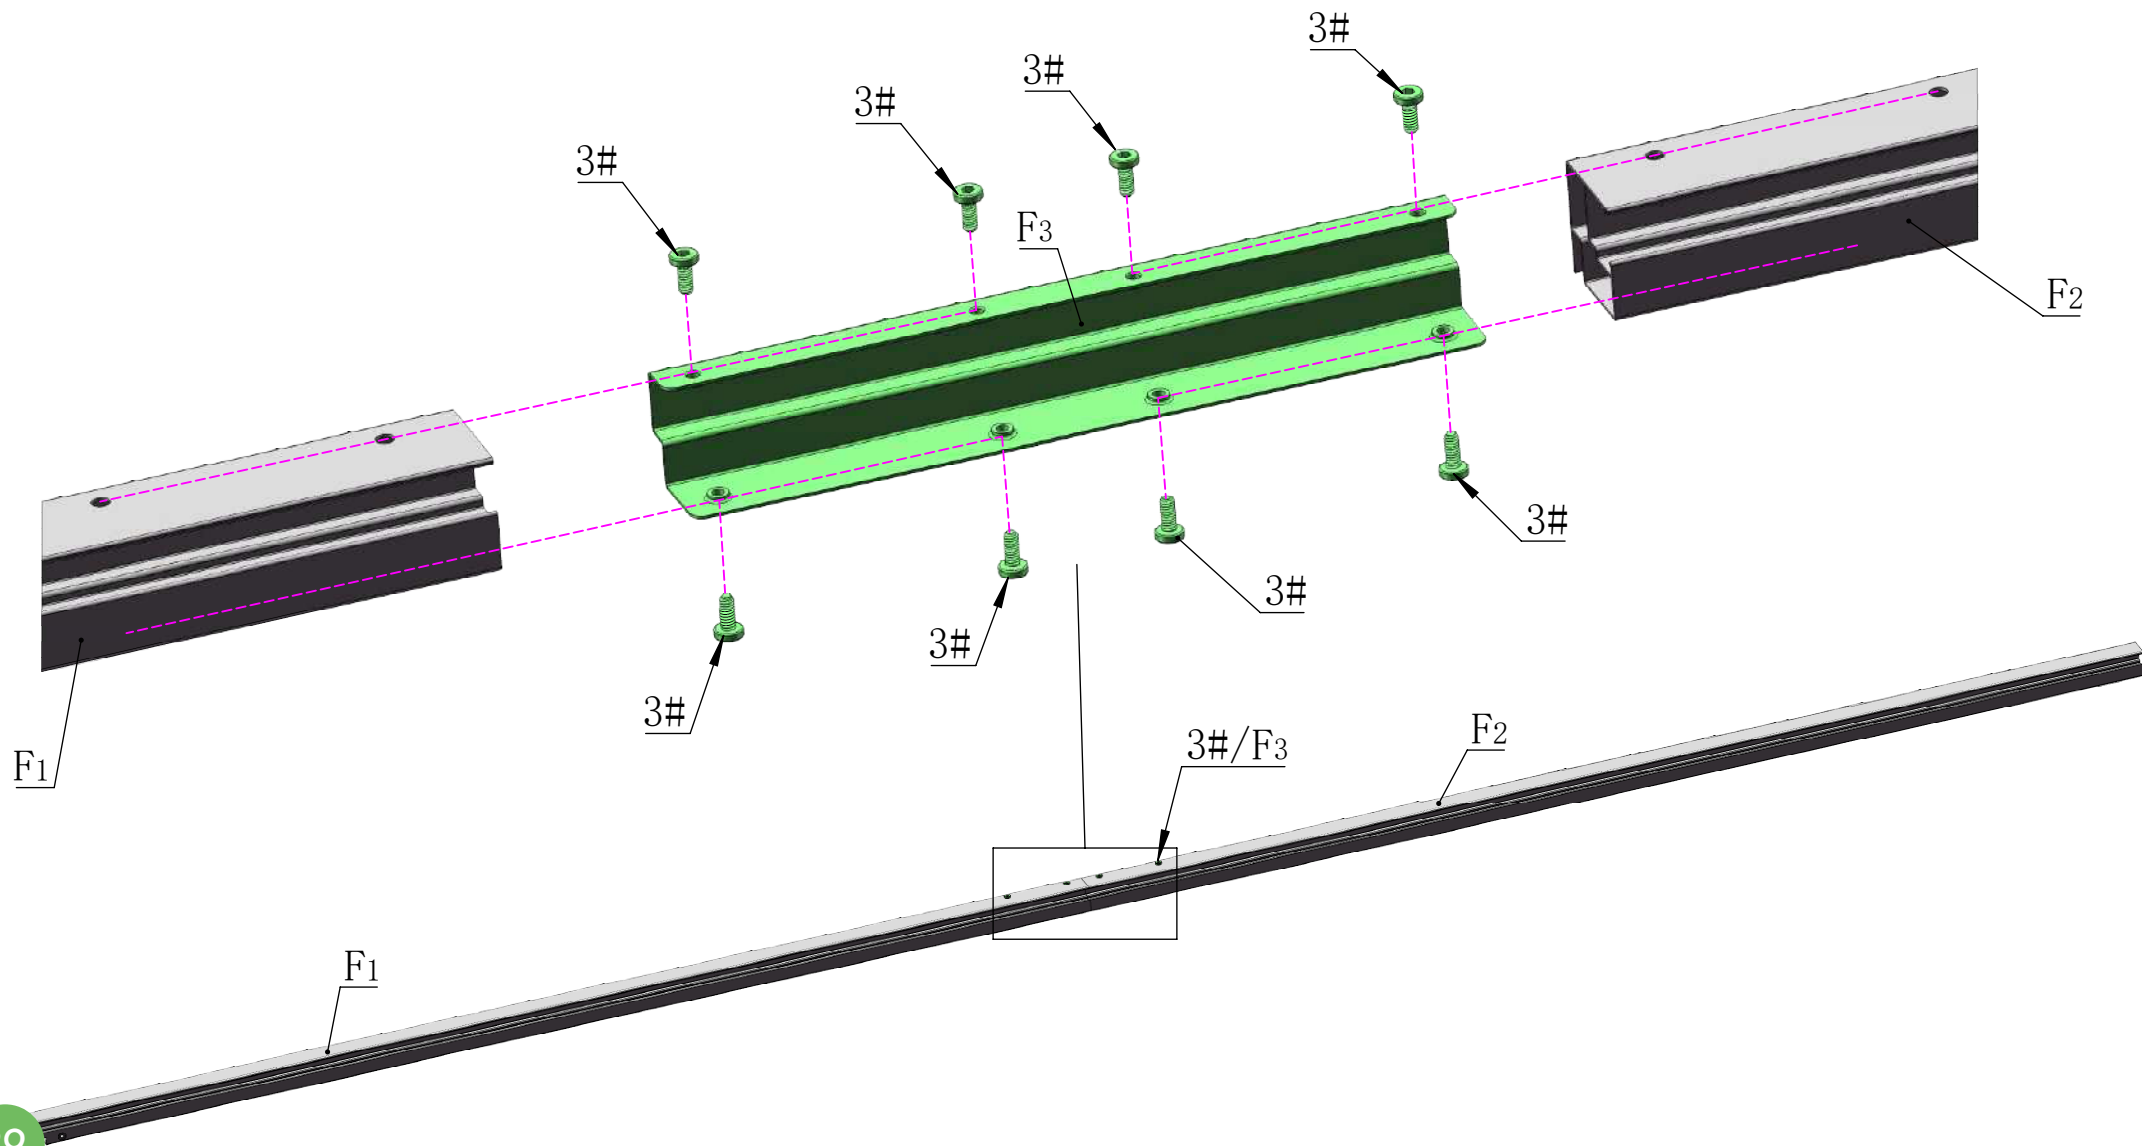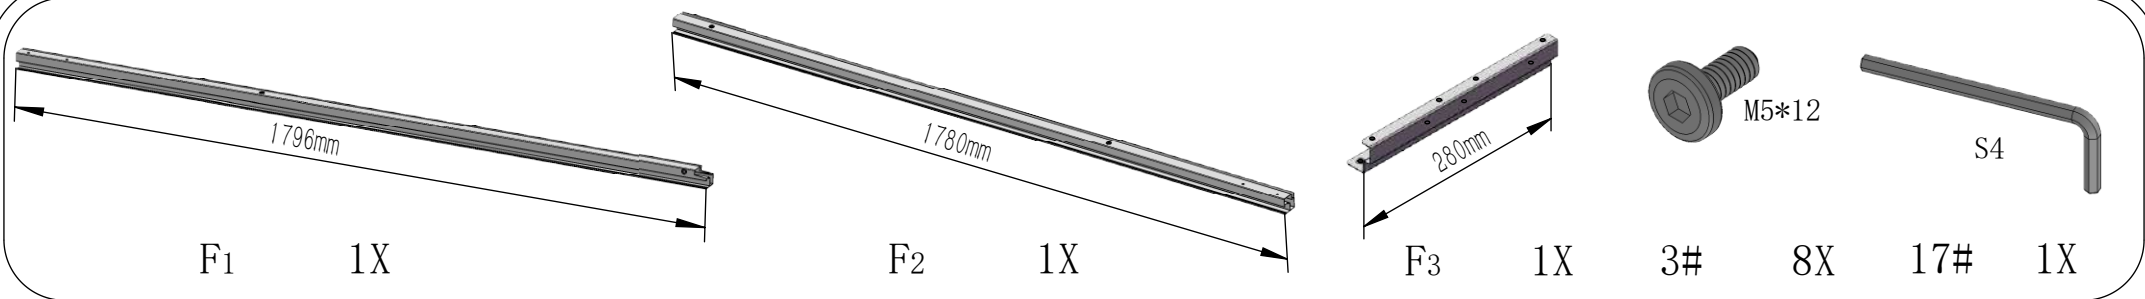


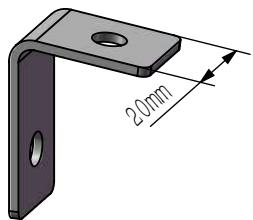

I₂ 6X

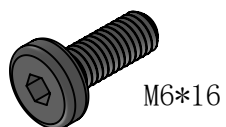



4# 14X

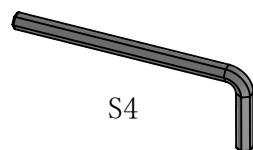


17# 1X

Please use bolts #4 to install the Bracket #12 to the BEAM FIRST, then to the Roof Tube.


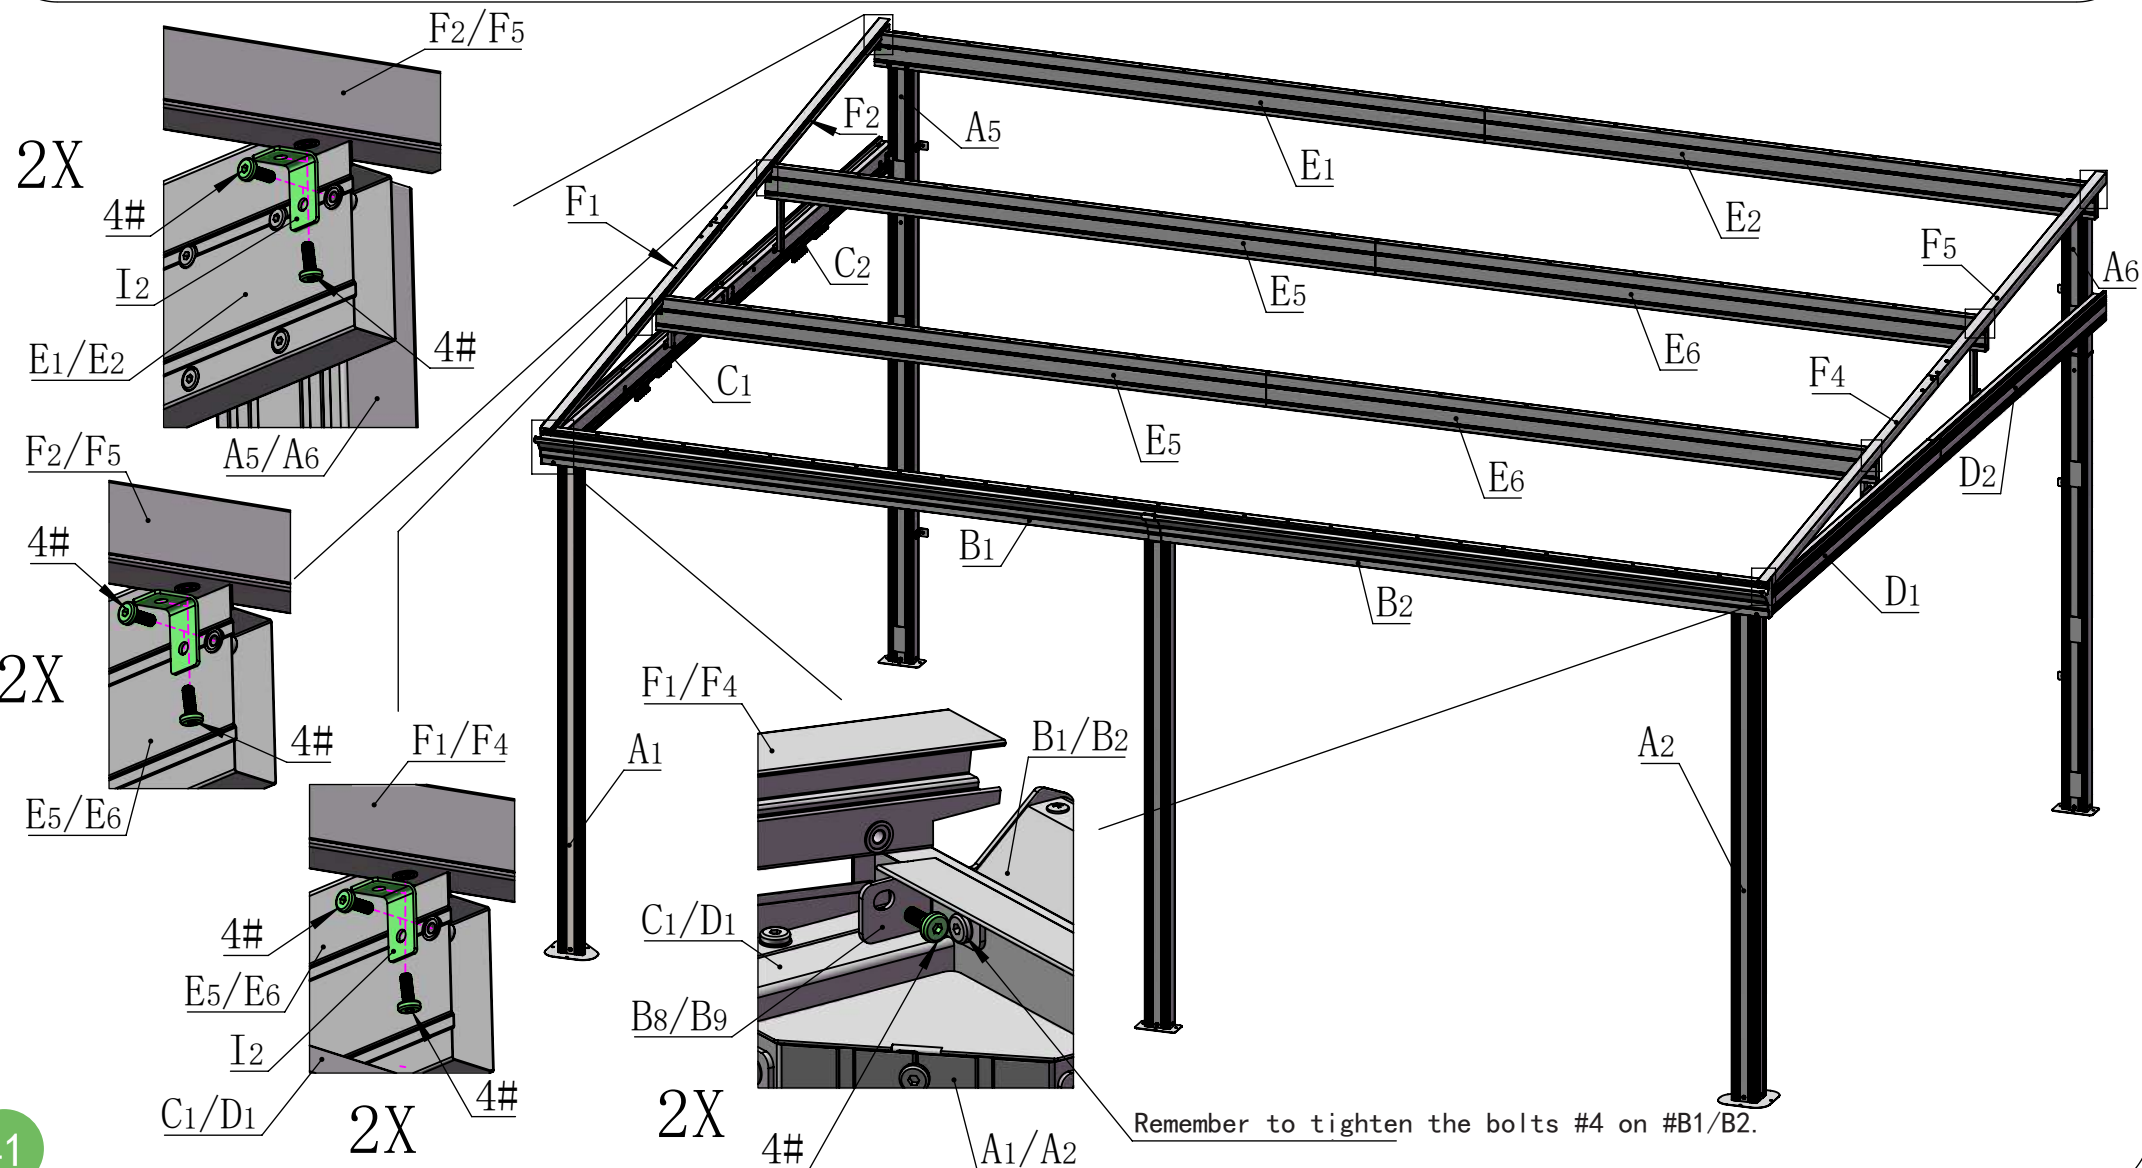



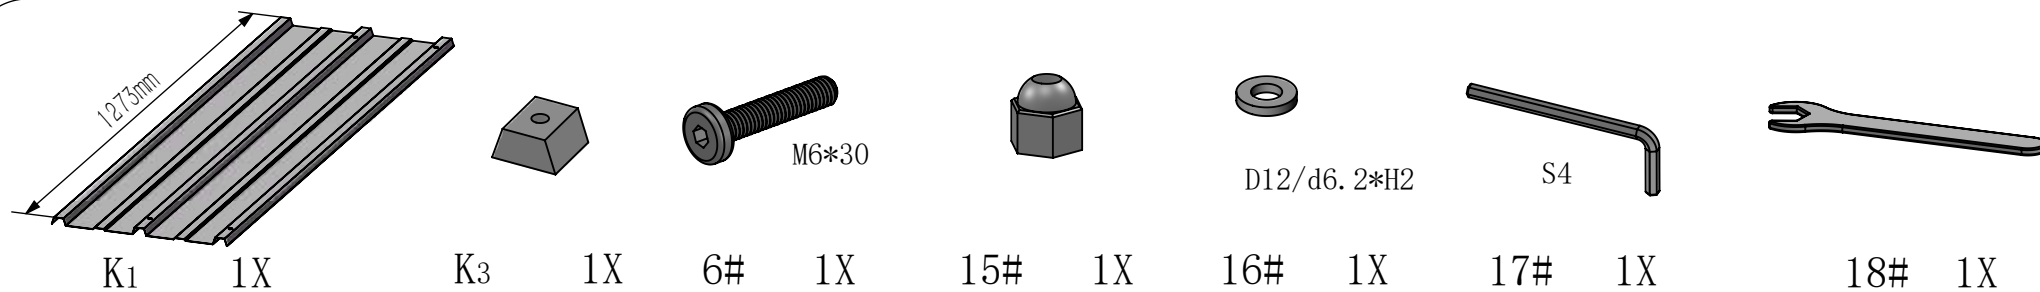





Rubber gaskets #16 is necessary to install together with bolts to prevent roof leaking.

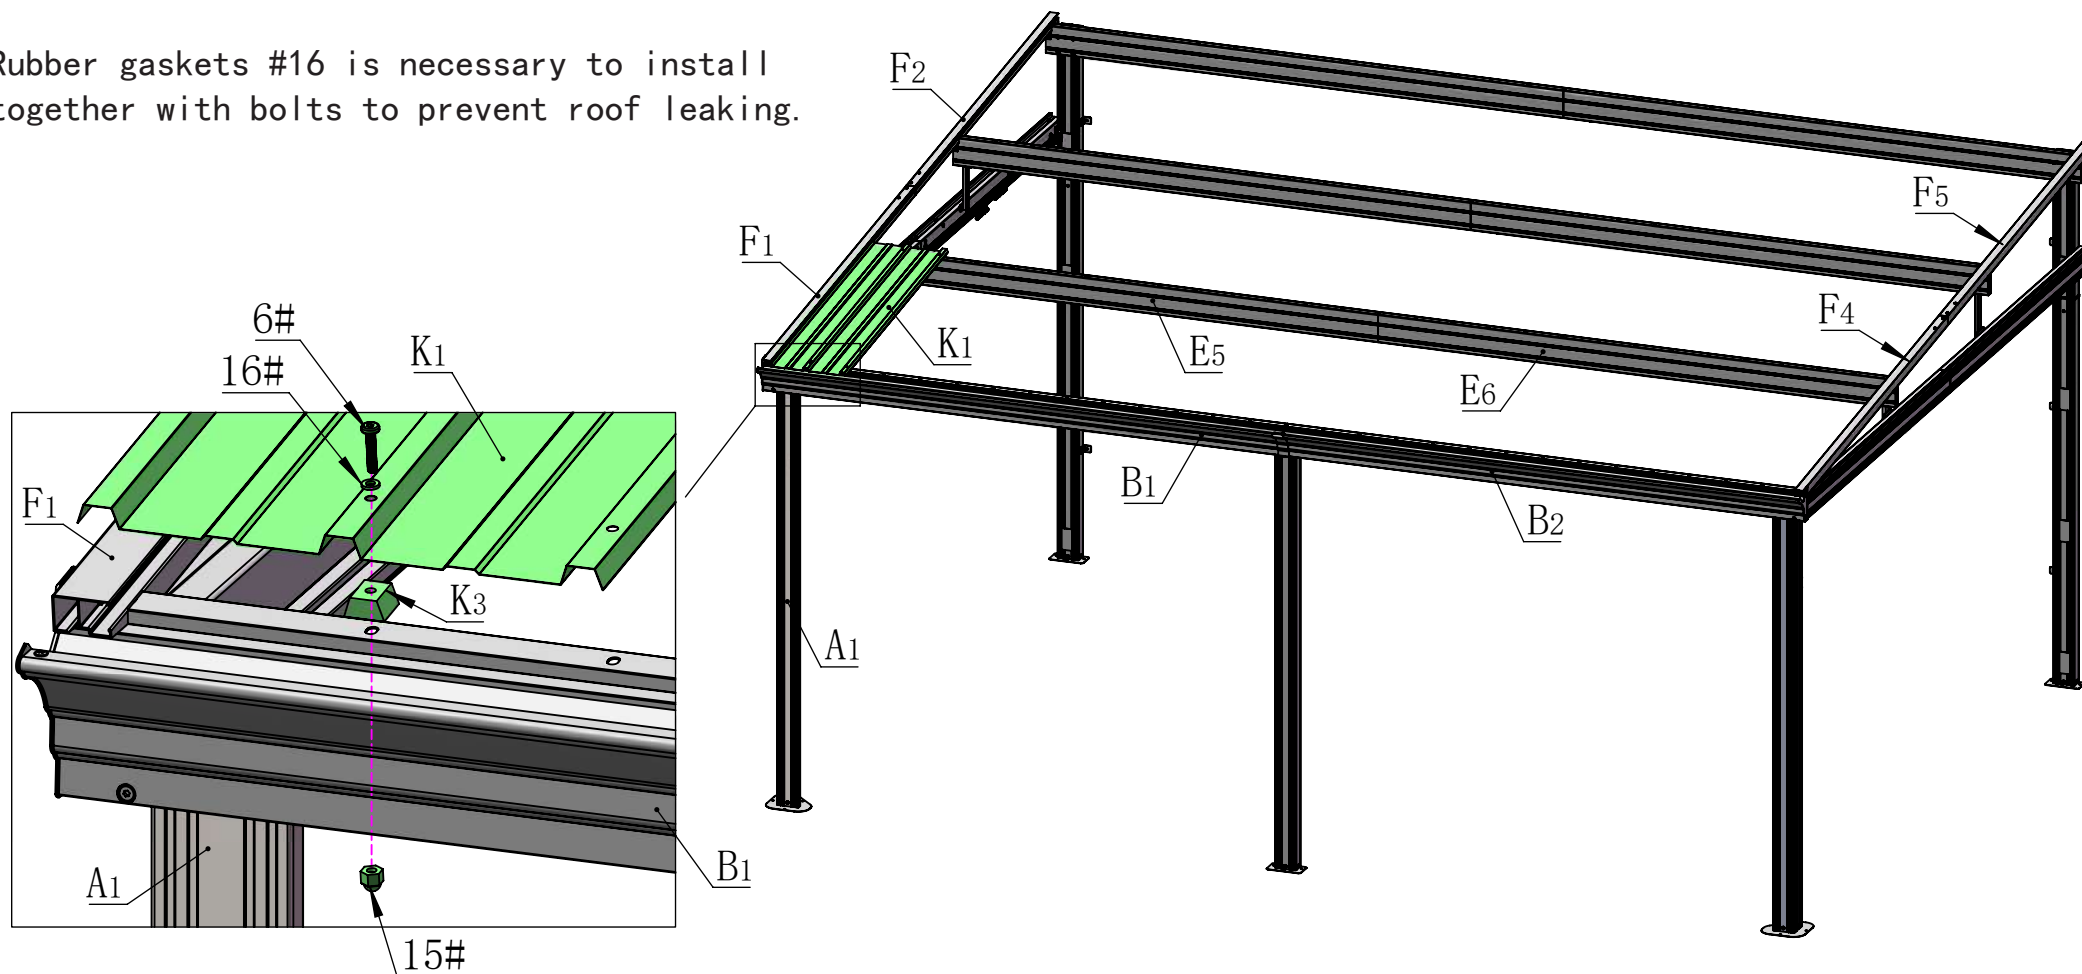








▲ Remove the protective film of the panels before installing the roofing panels.

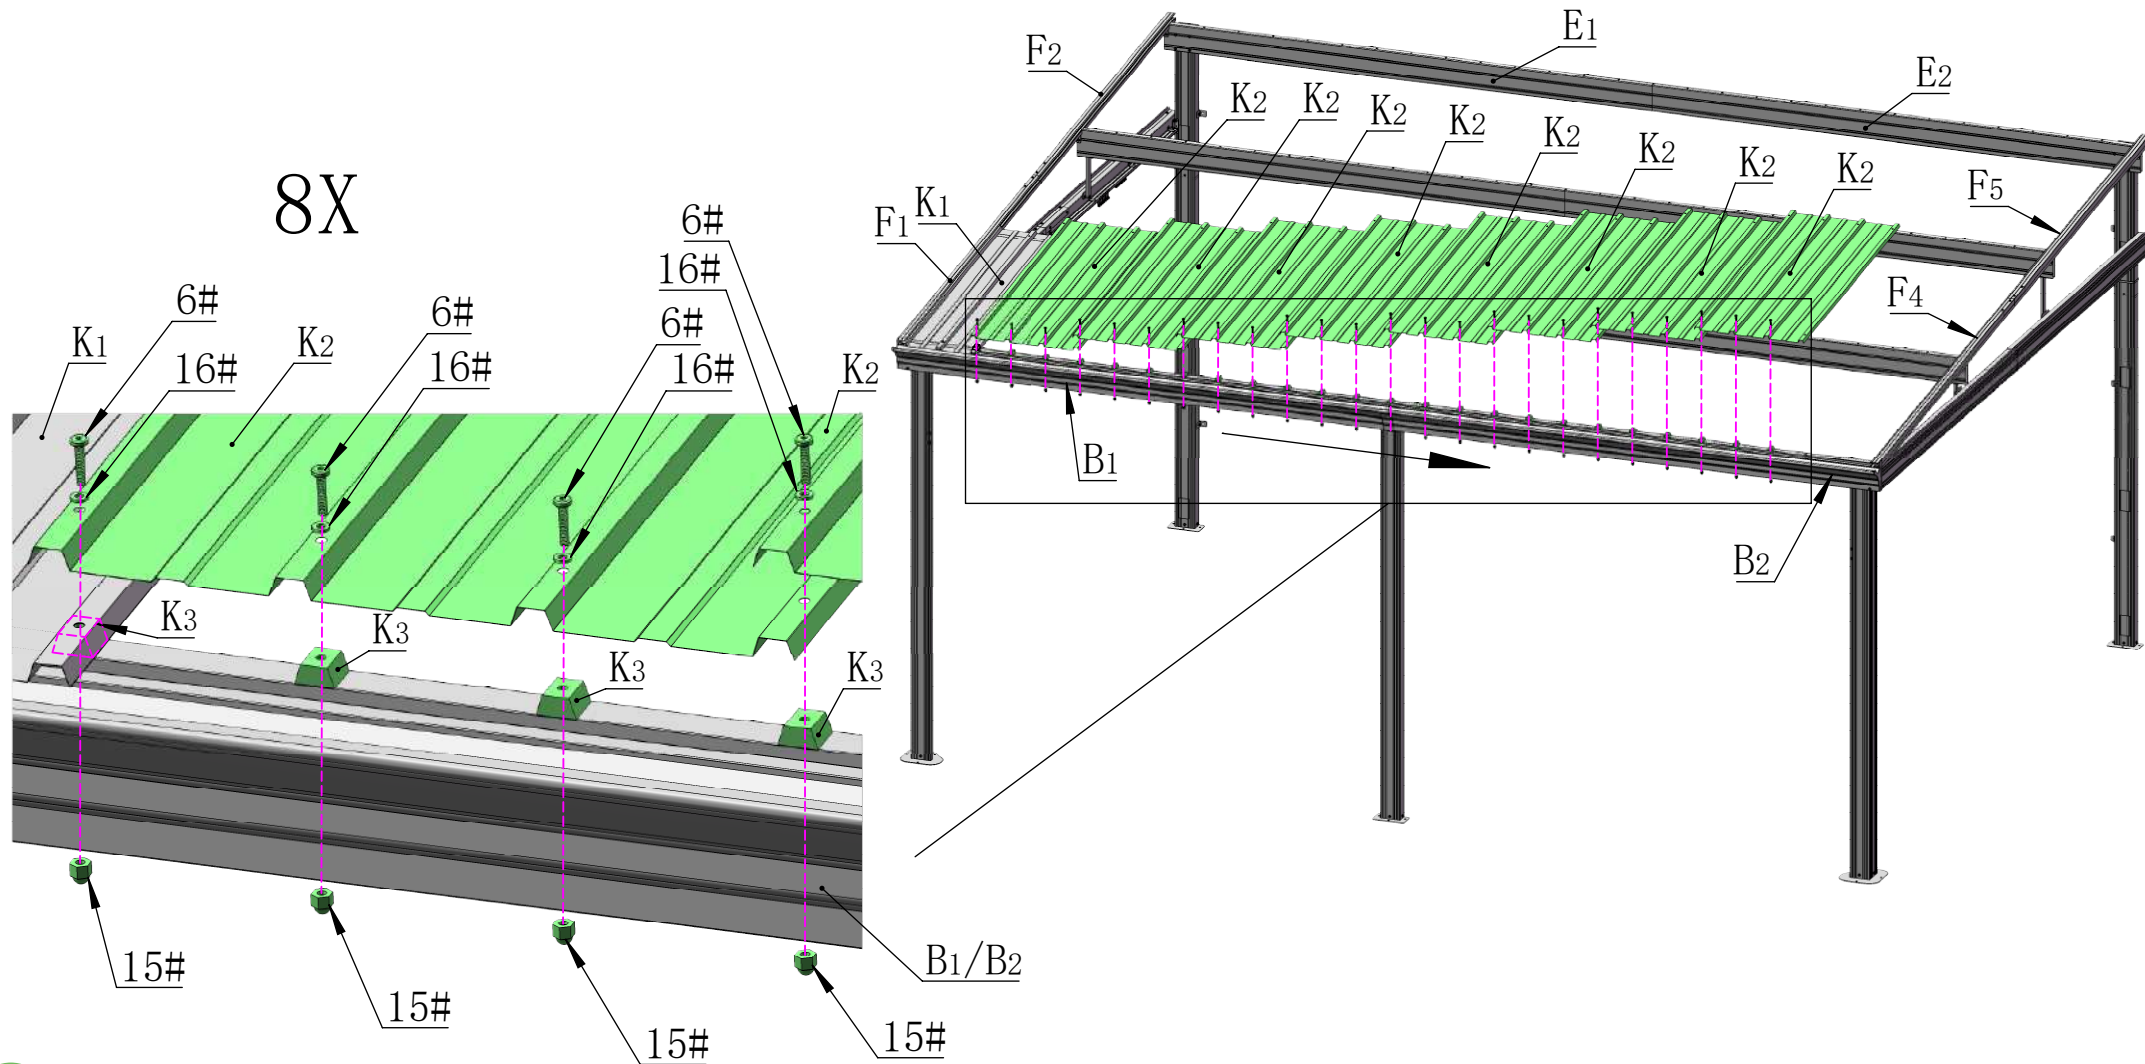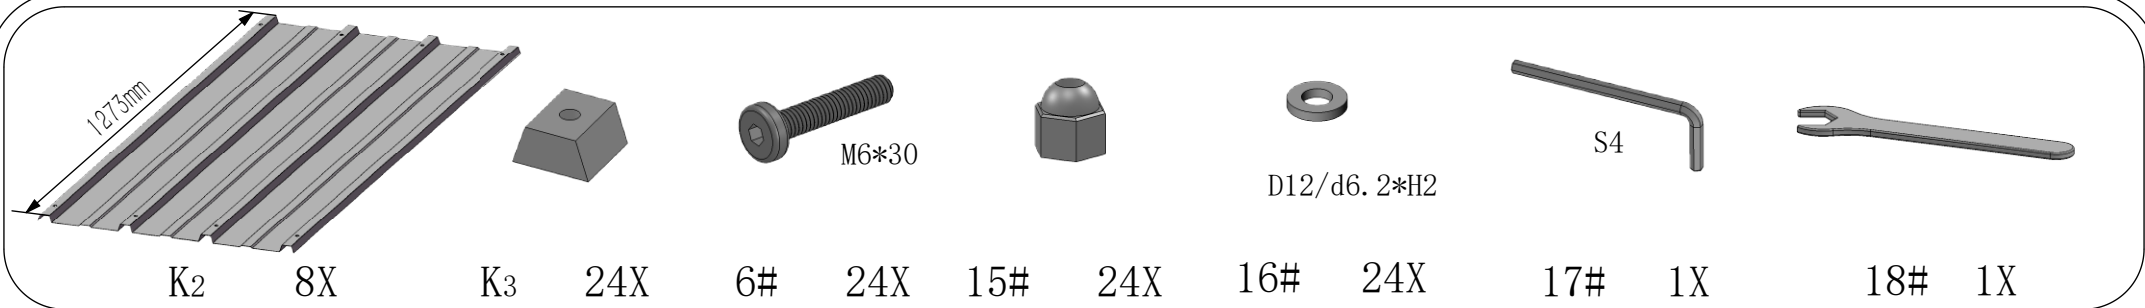


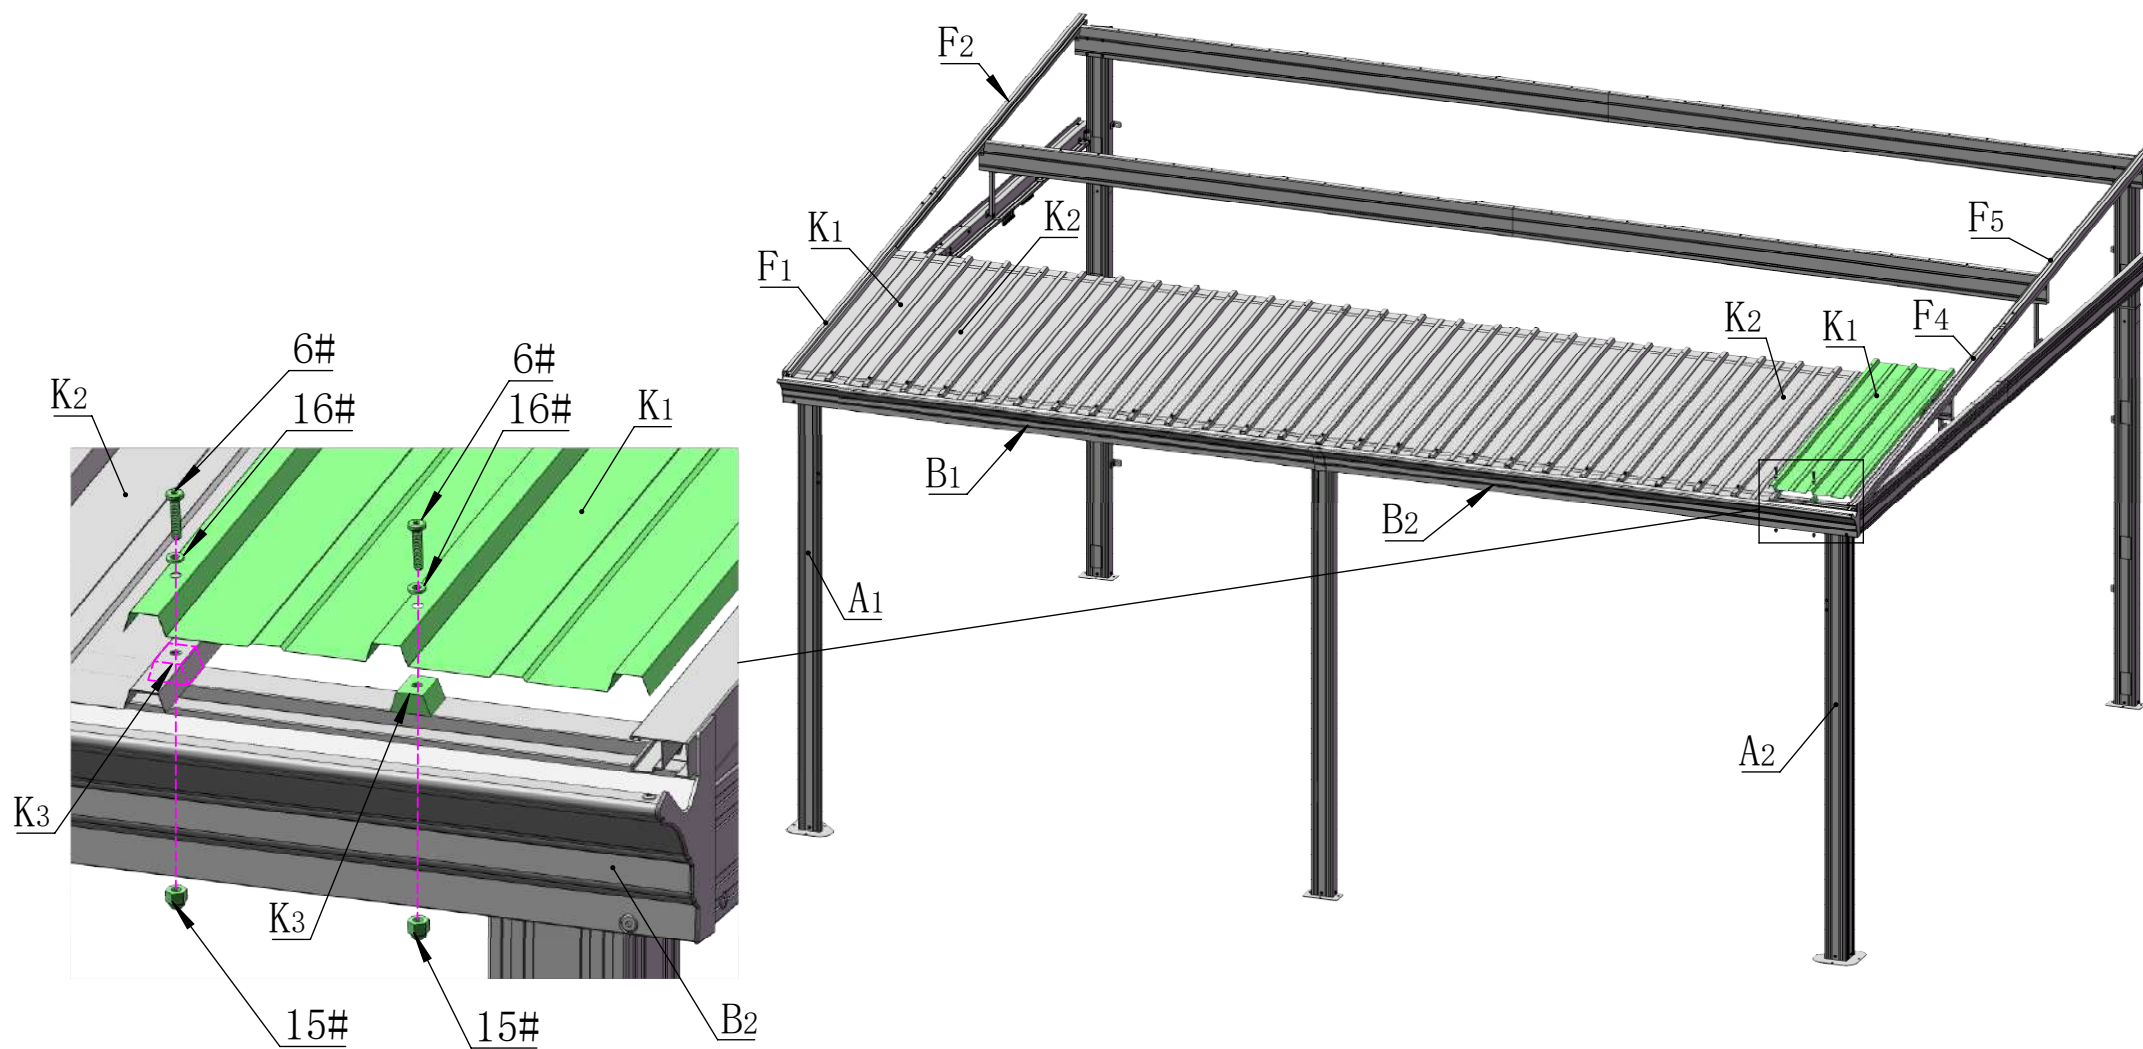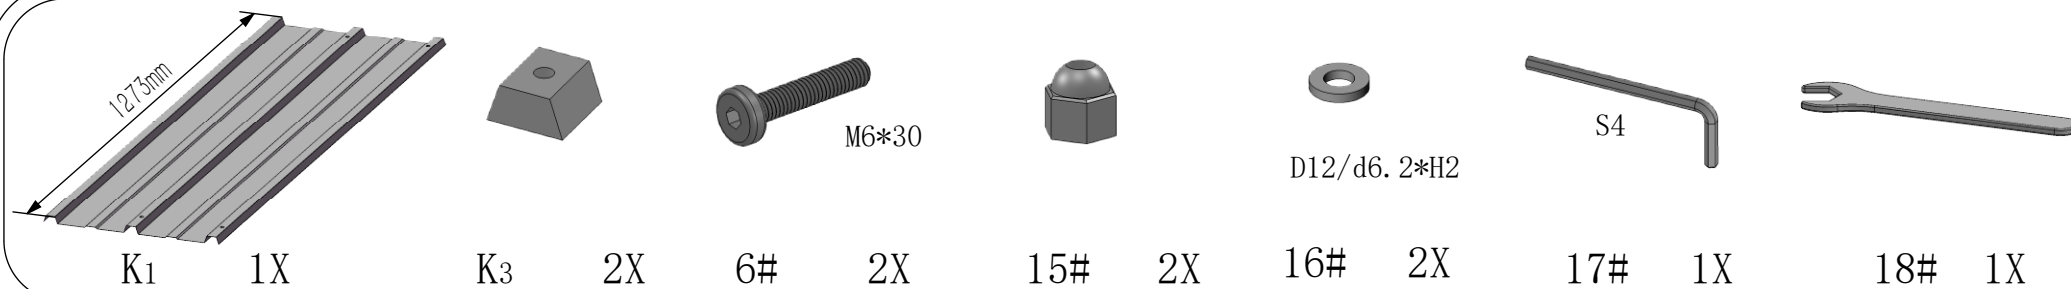

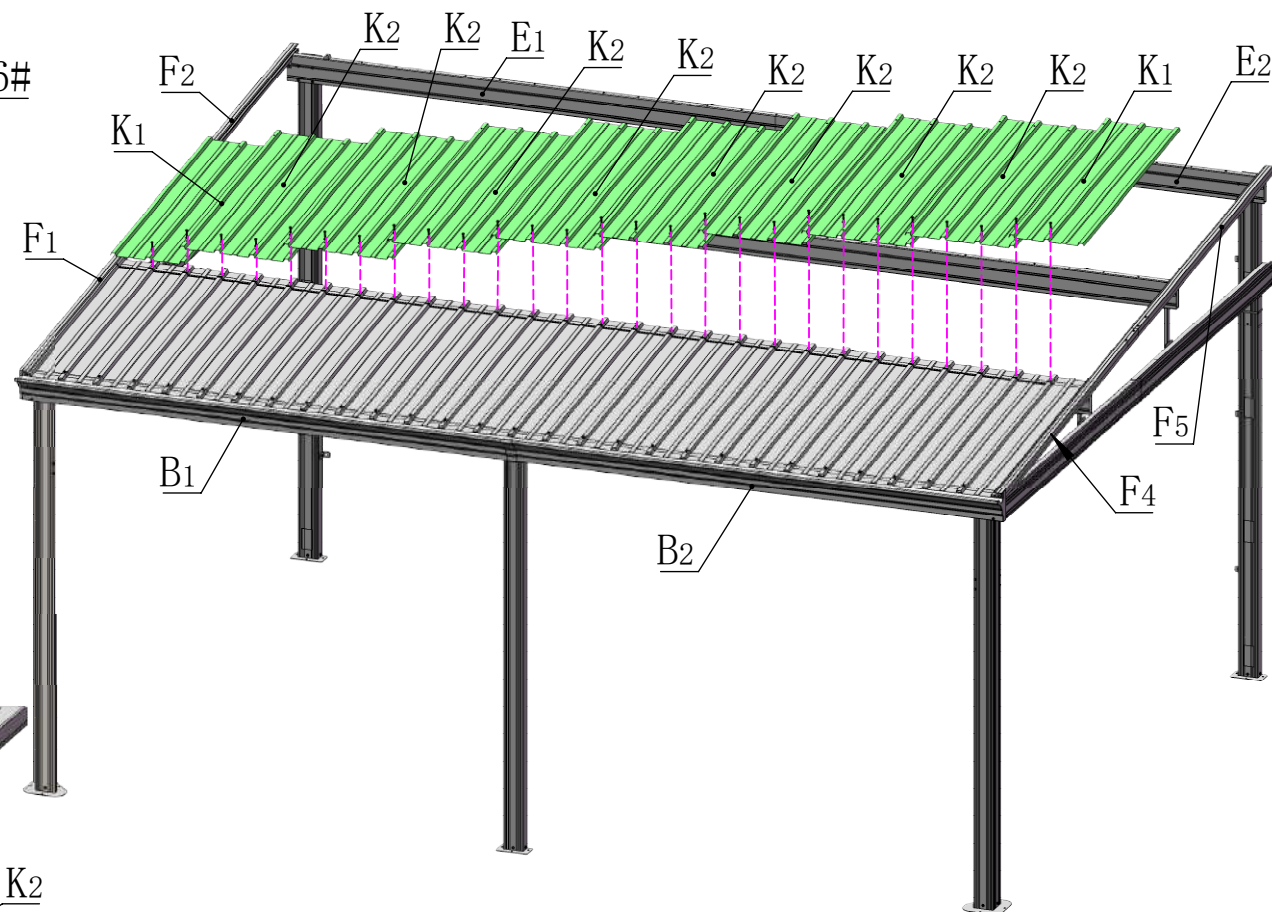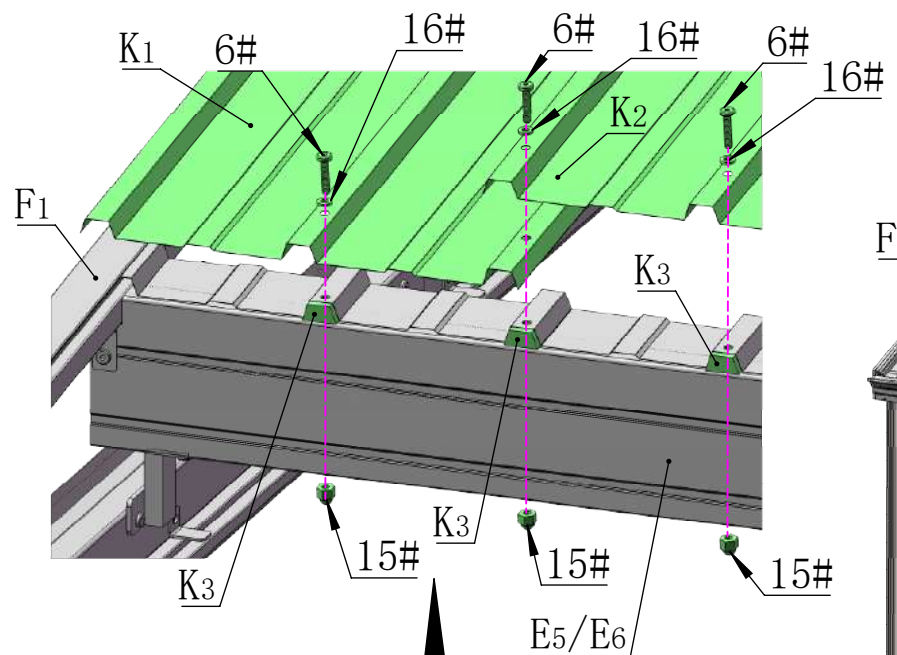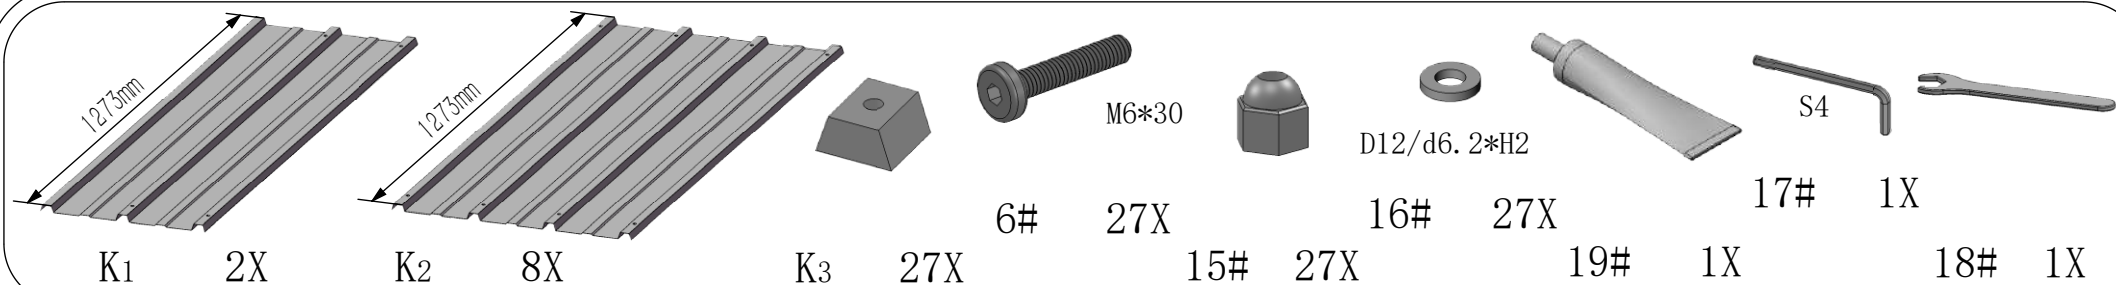


- (1) Apply sealant to the first row of roof panels as shown.
- (2) Follow the steps of the first row to install the second row of roof panels and fix the screws.

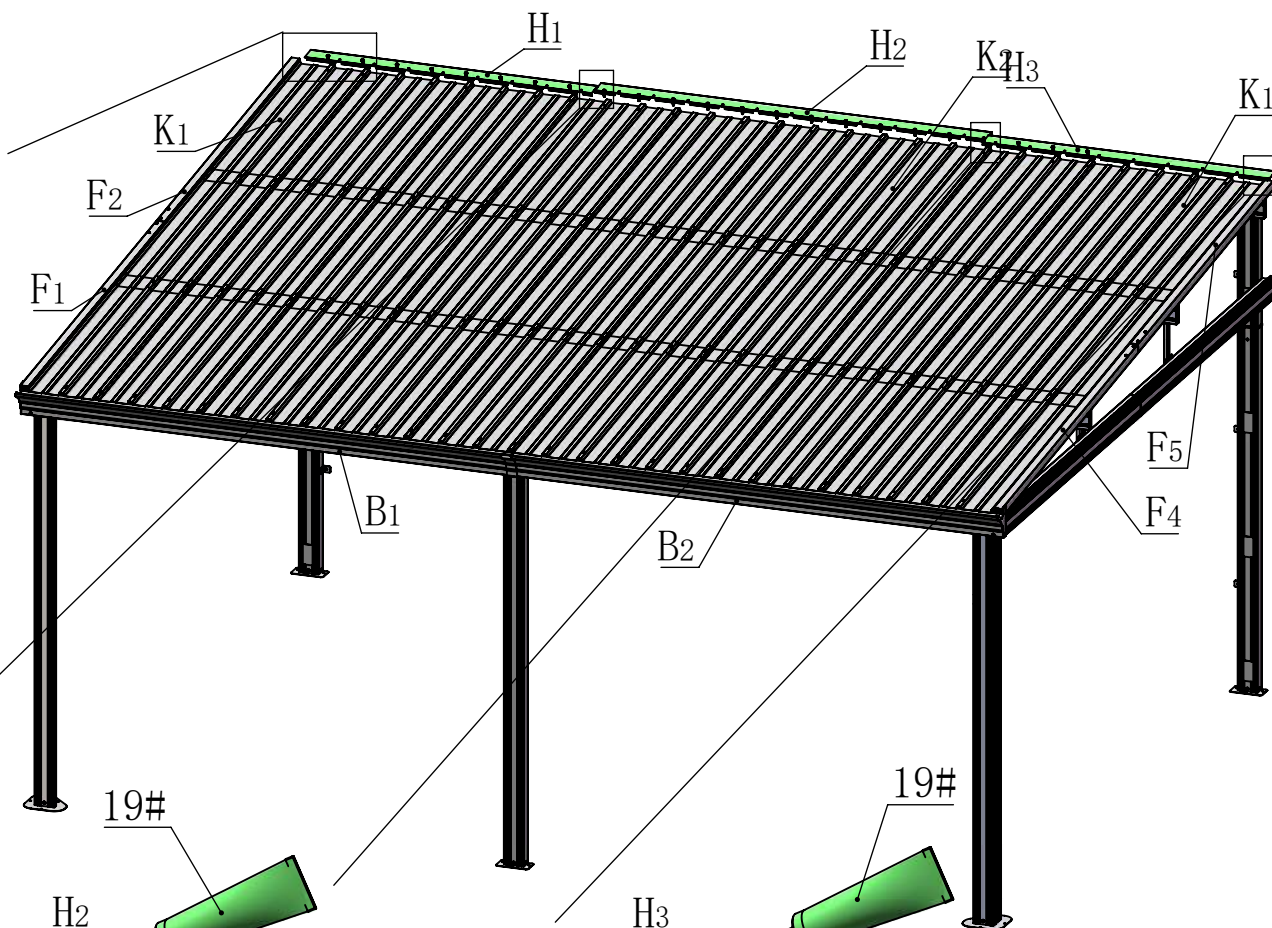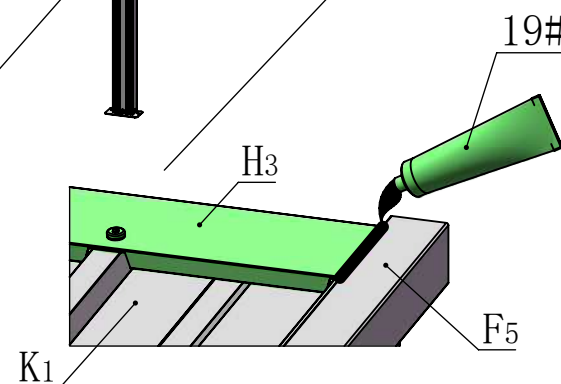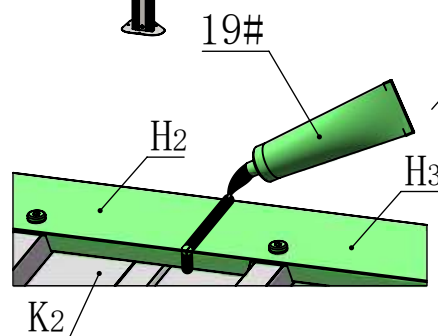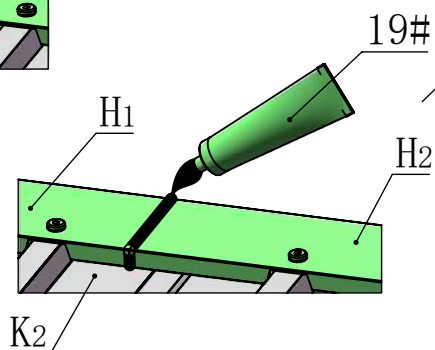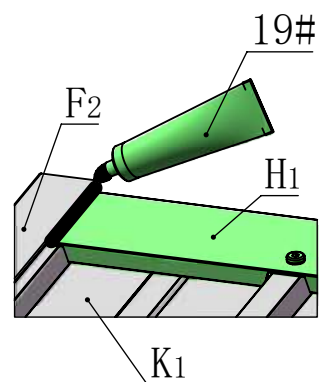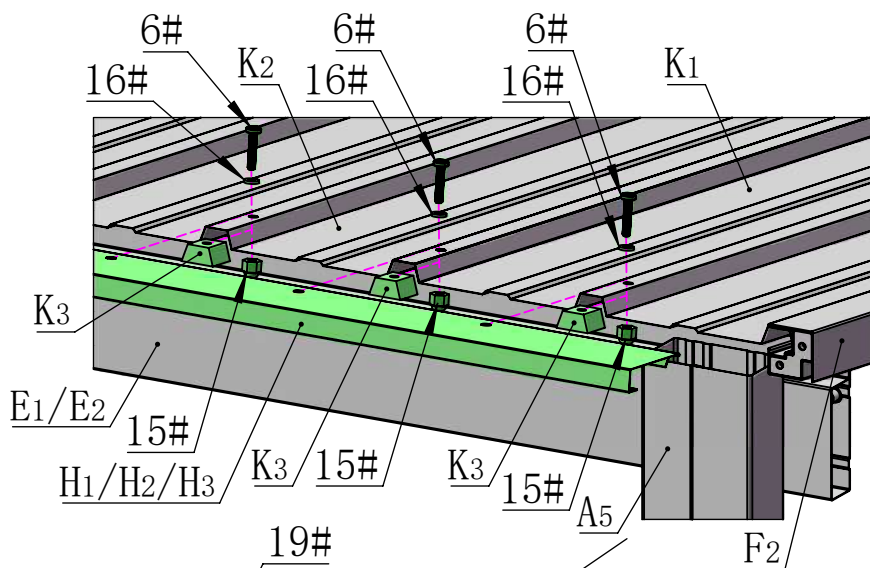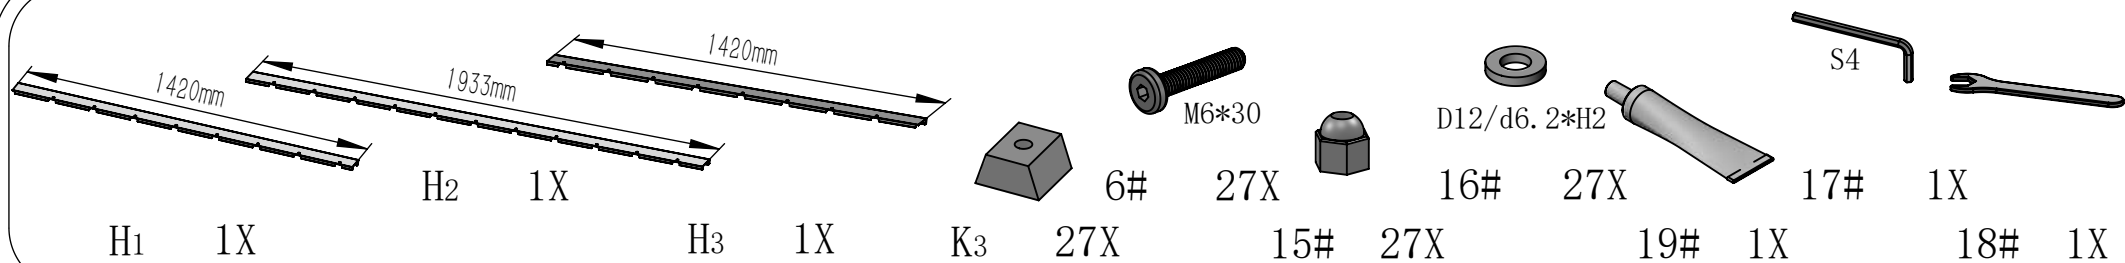


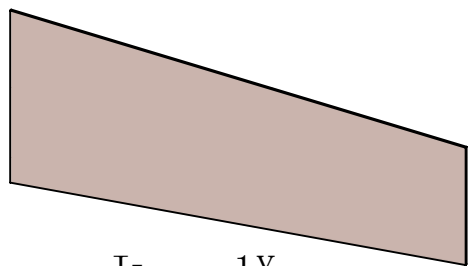


J5 1X

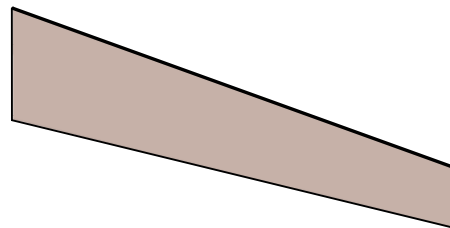

J7 1X

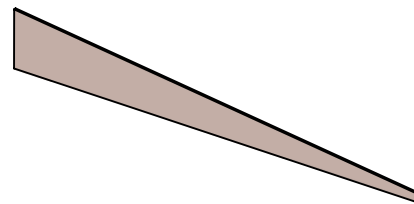


J9 1X

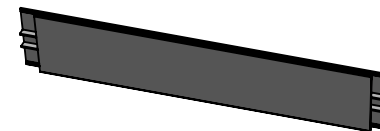


J3 1X




J1 1X

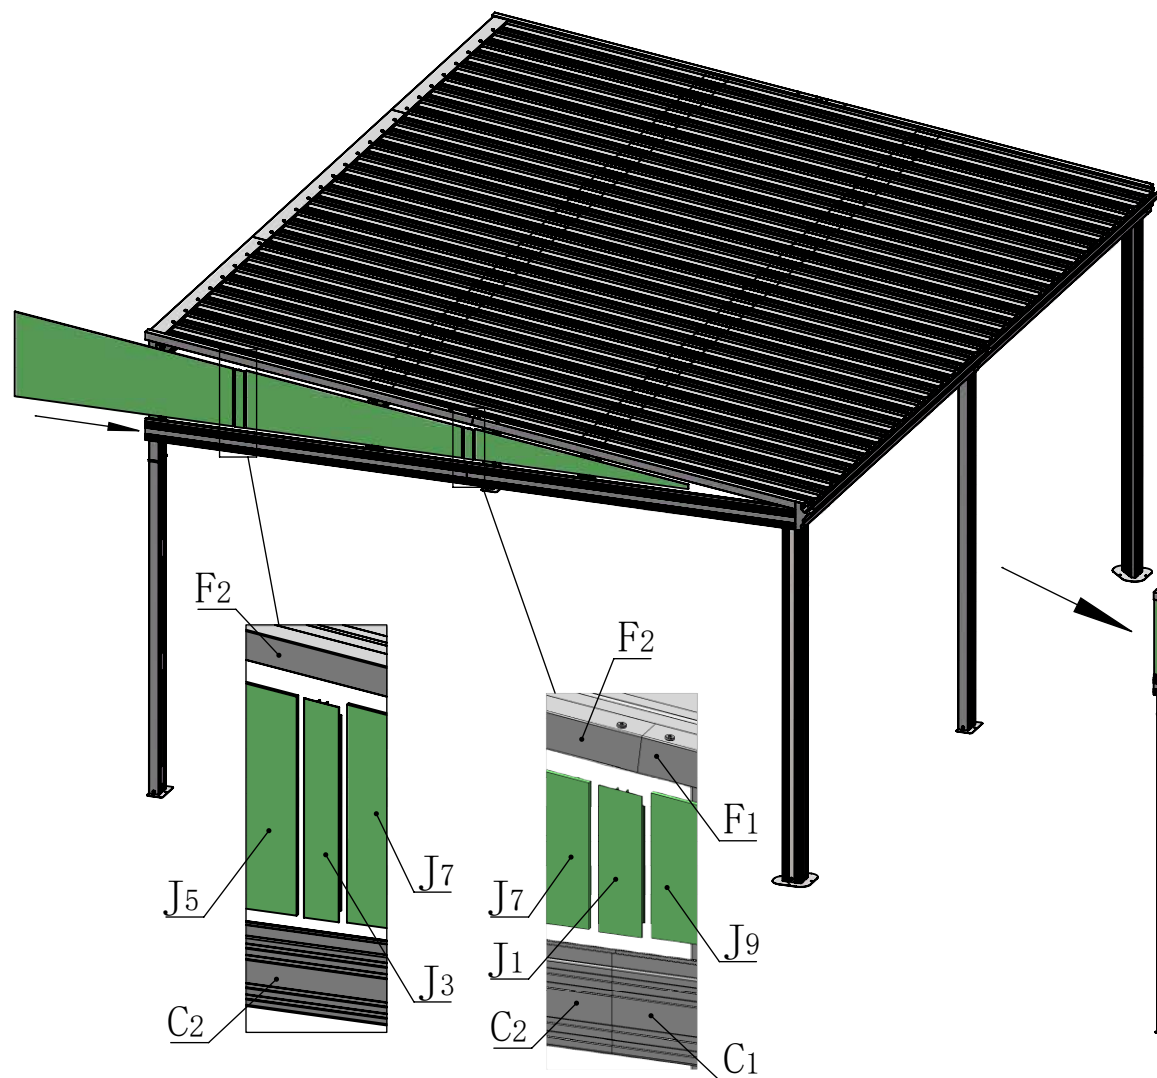


▲ There are front and back sides for the installation of the PC board, with the front side facing outward. The notch of #J1 & J3 is facing inward.

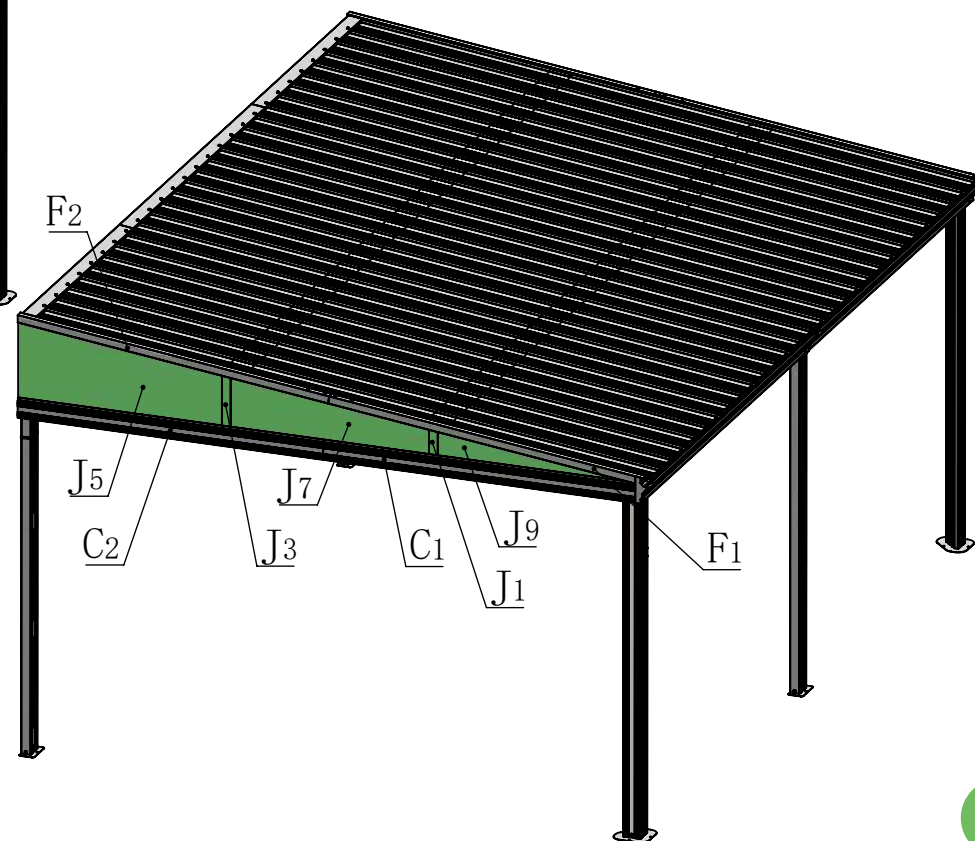


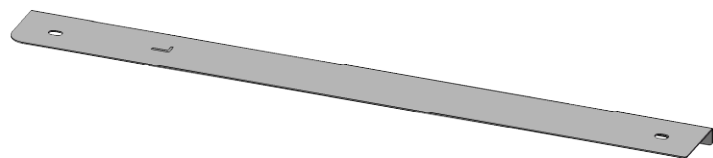



G1 1X

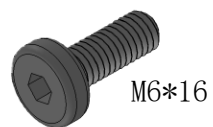


4# 2X

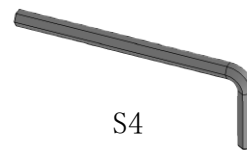



17# 1X

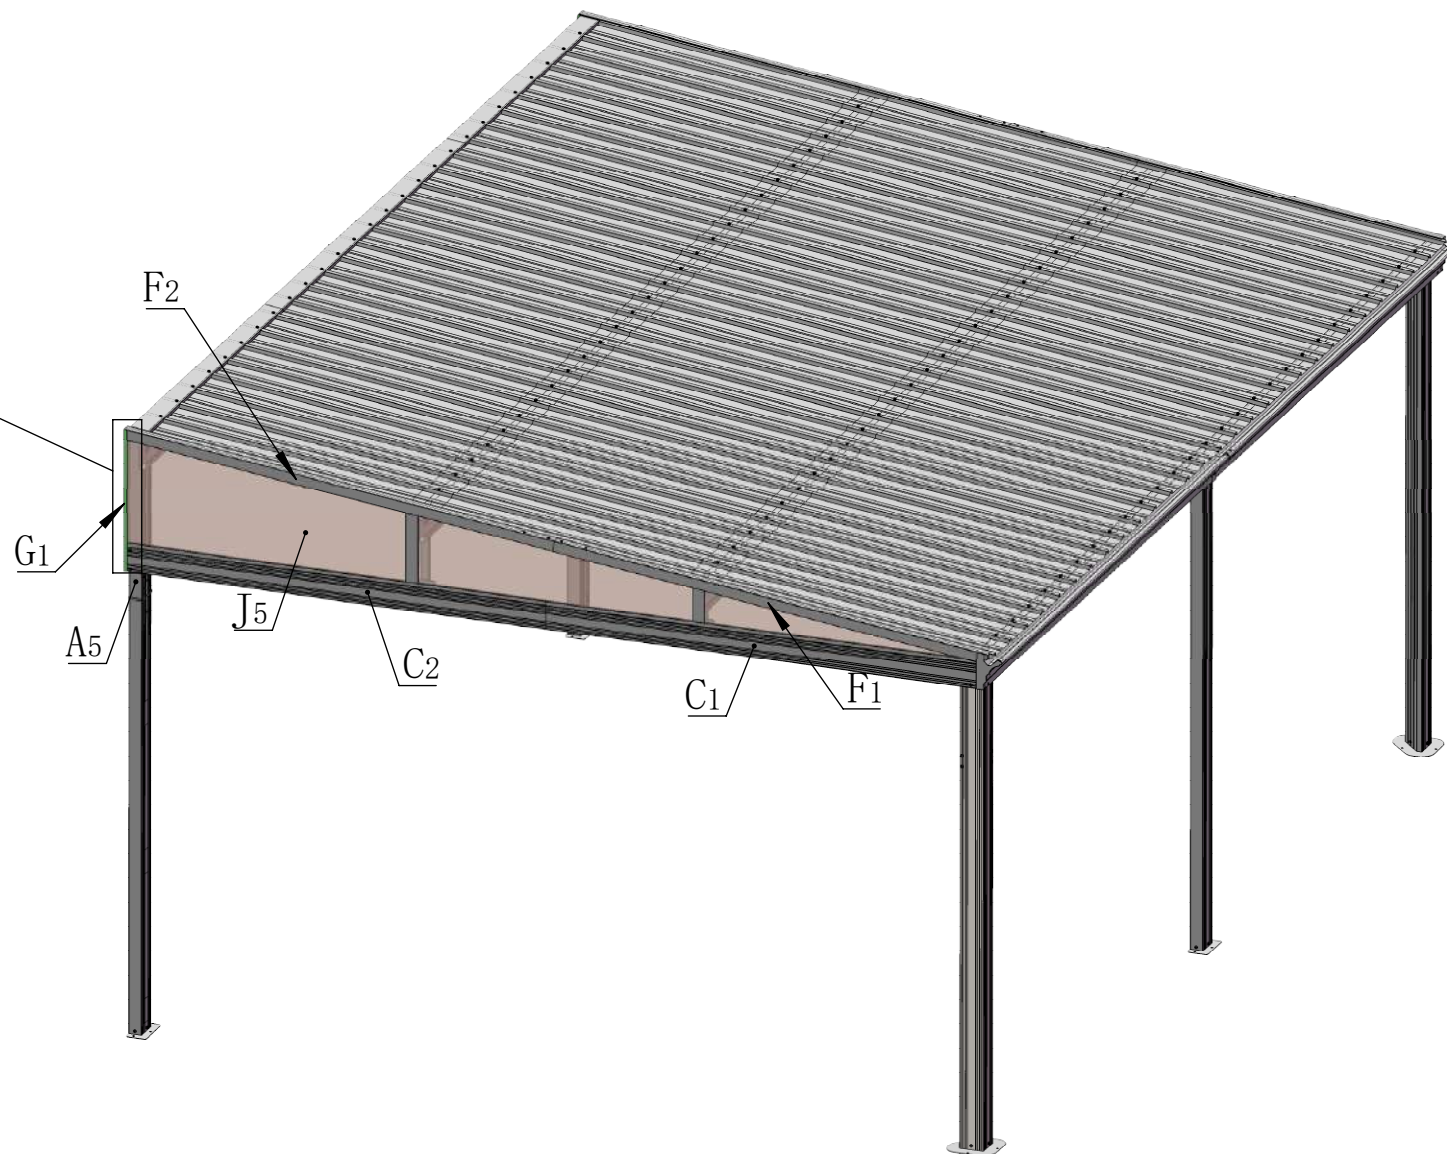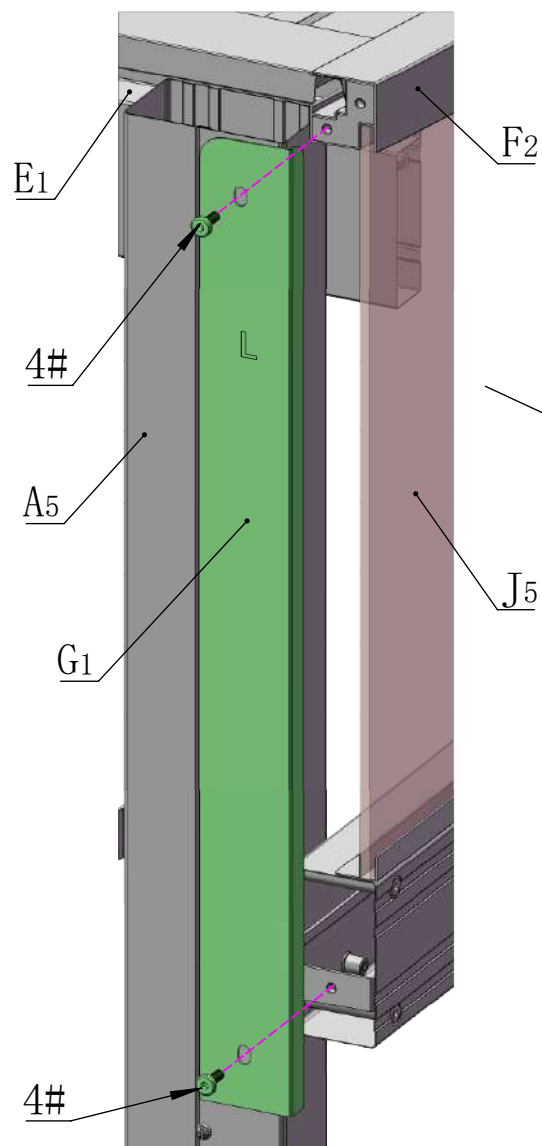

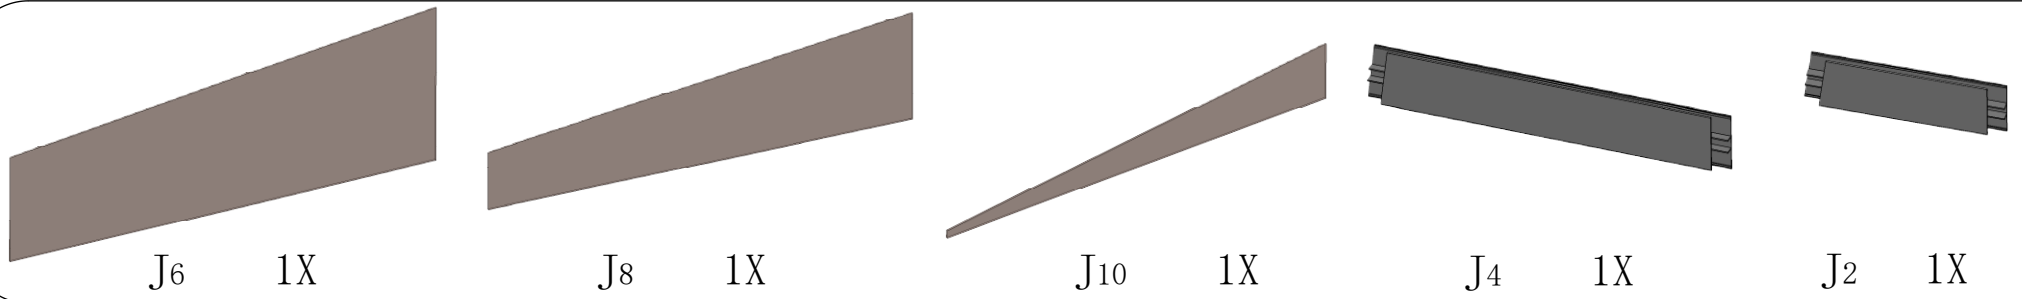


The notch of #J2 & J4 is facing inward.

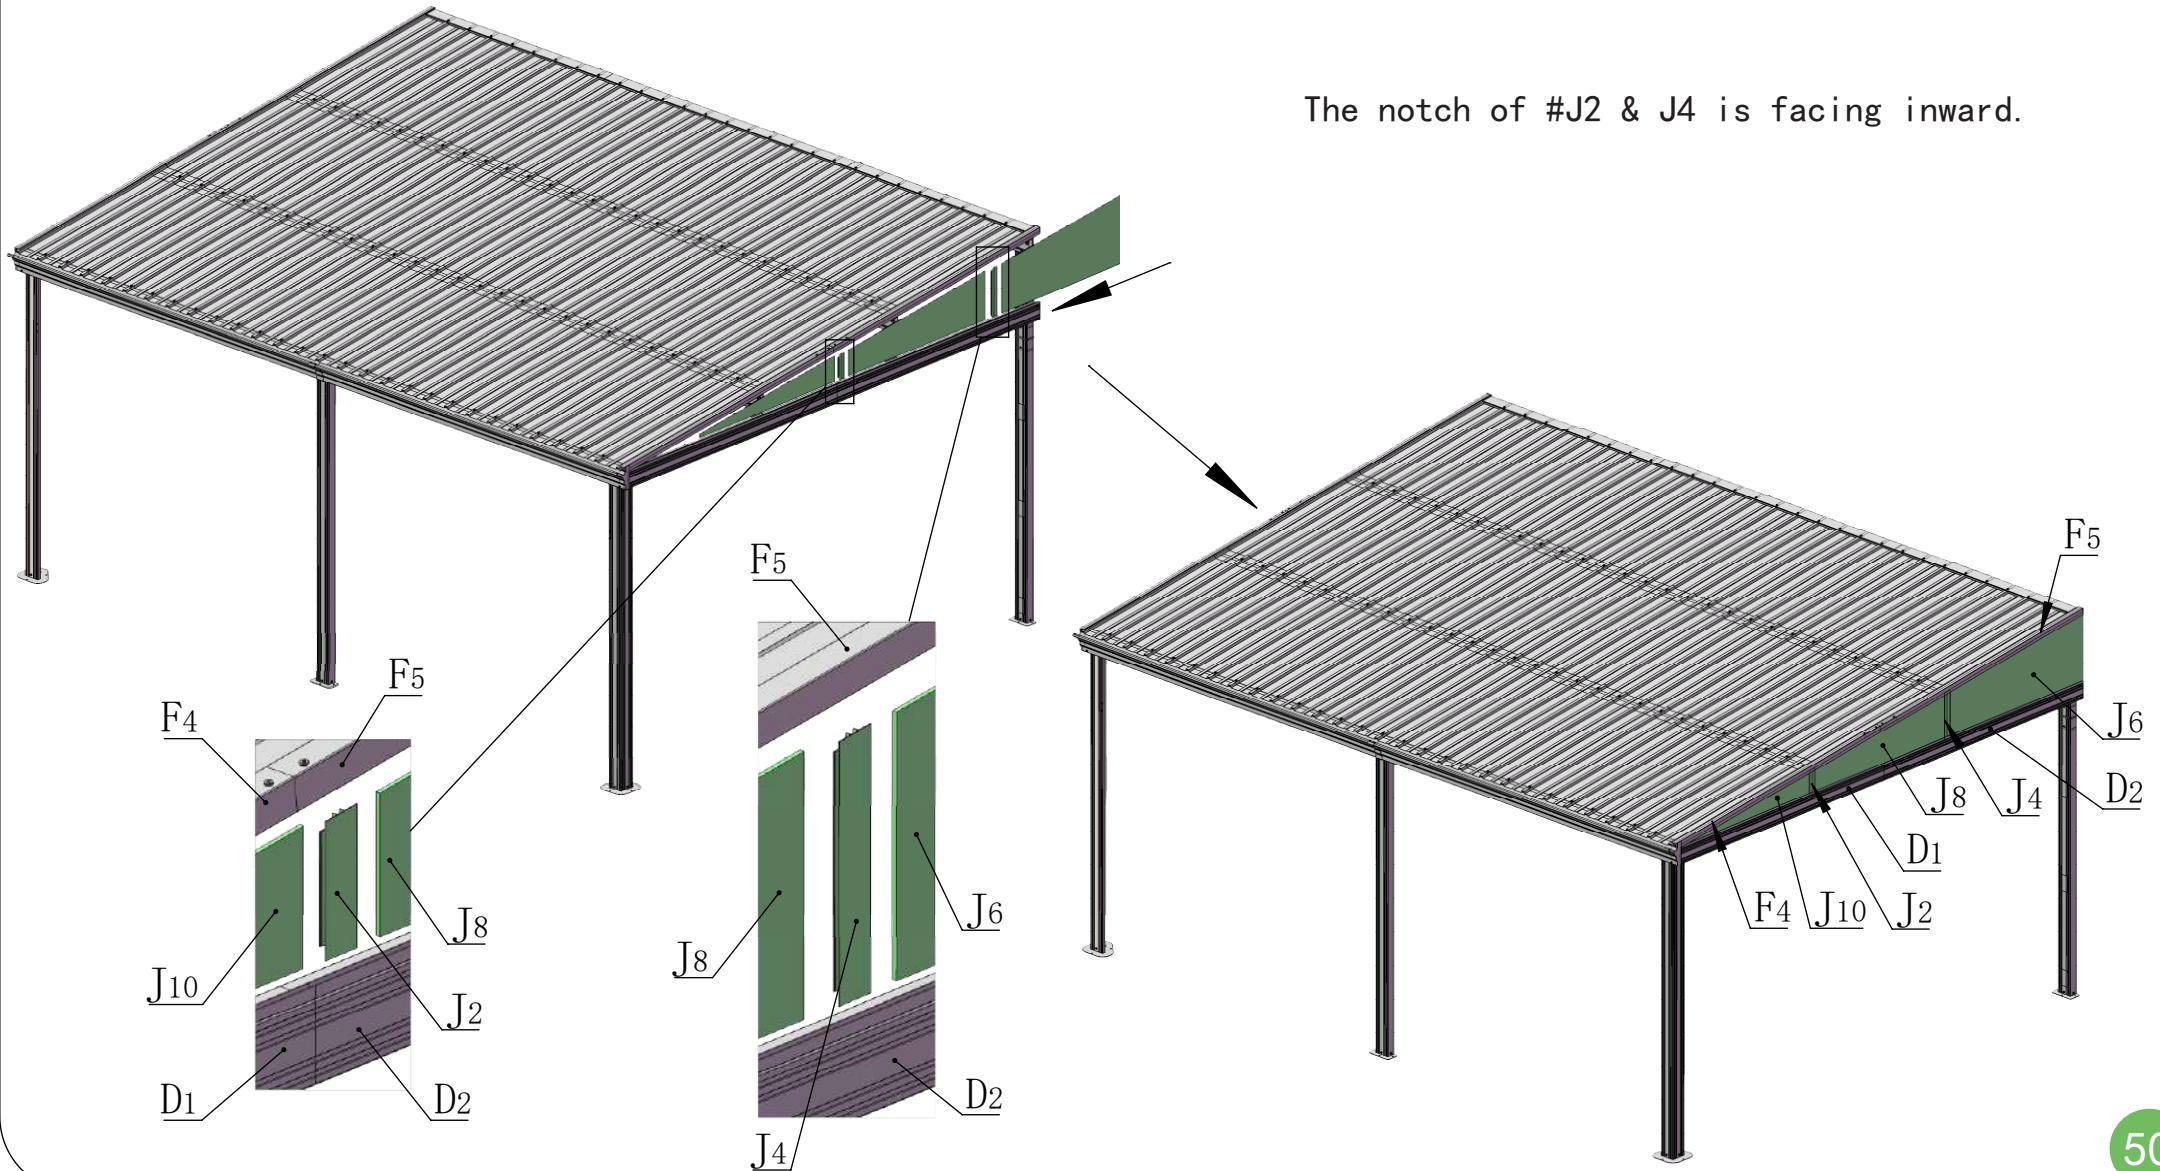


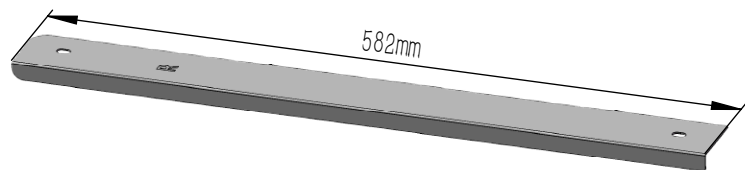


G2 1X

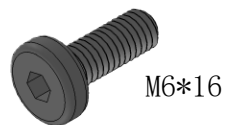


4# 2X

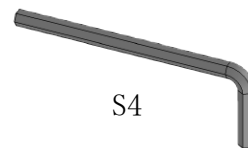


17# 1X

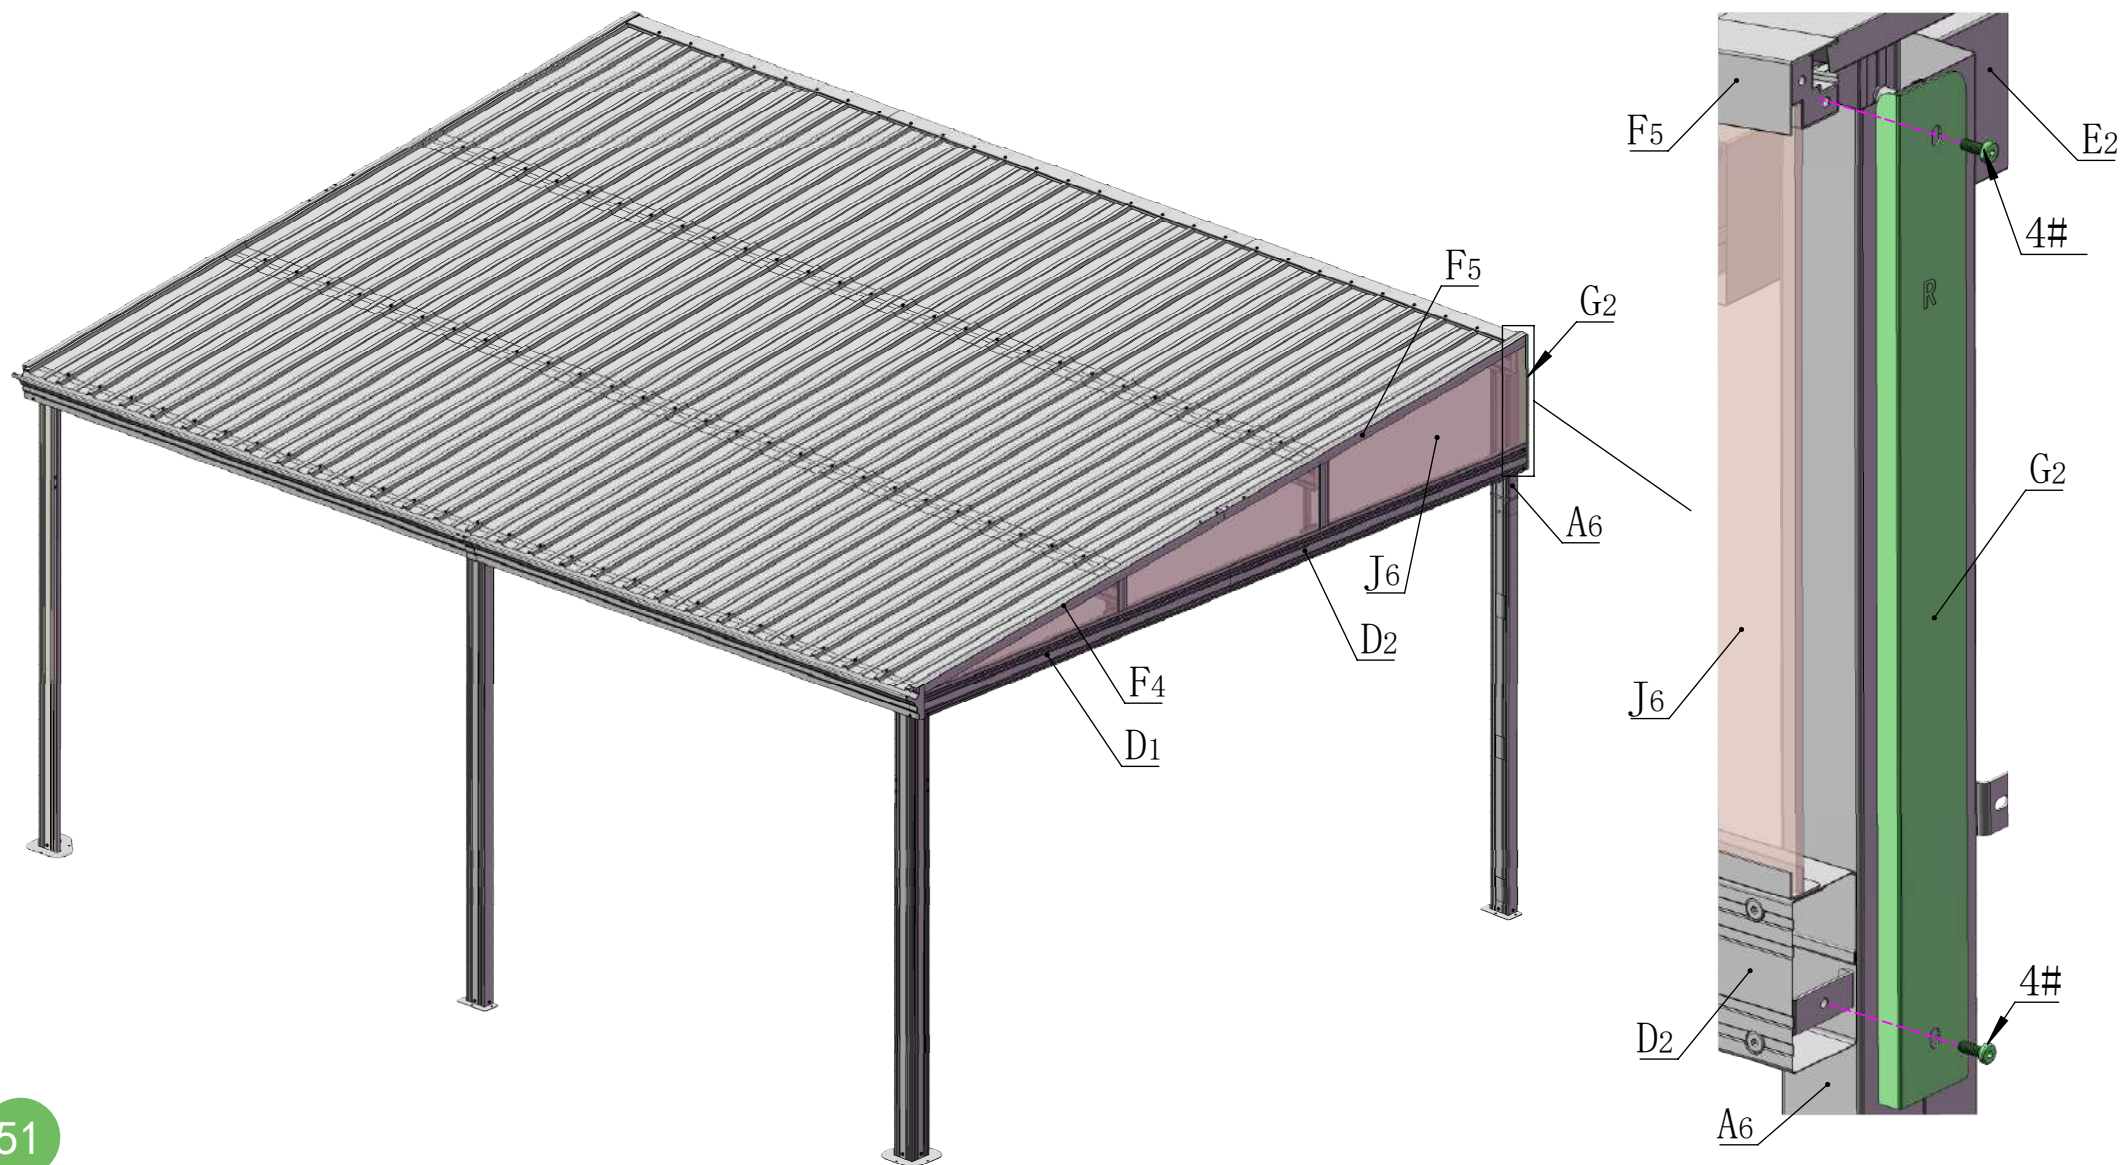


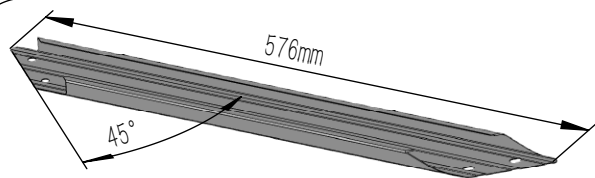


M1 2X

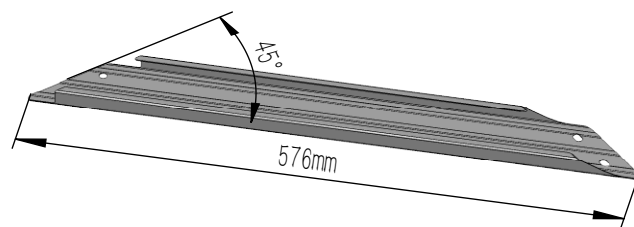


M2 2X

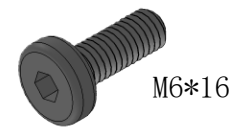


4# 16X

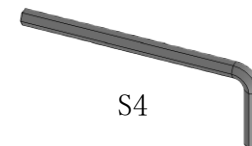

17# 1X

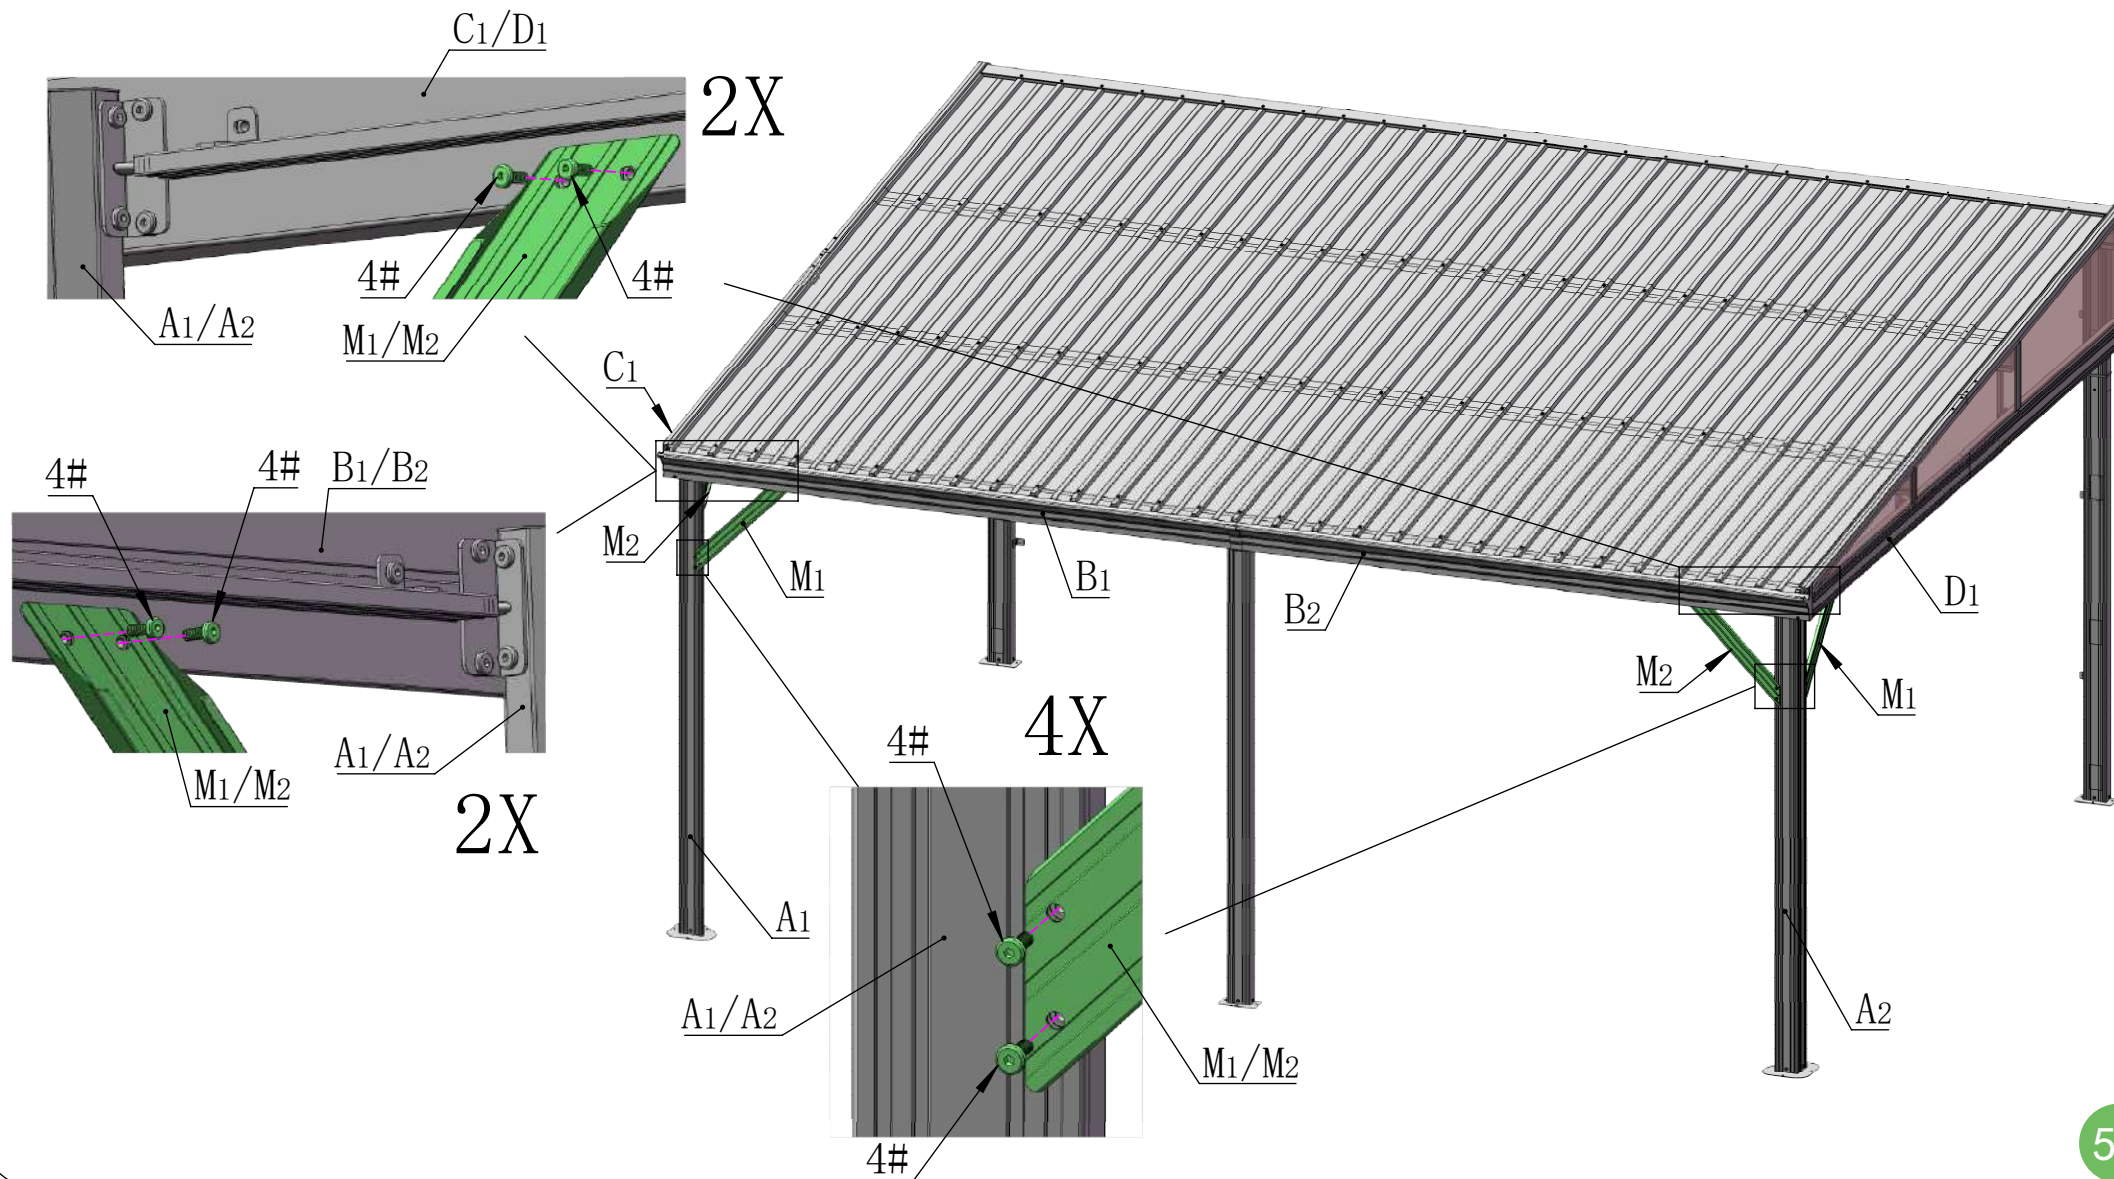

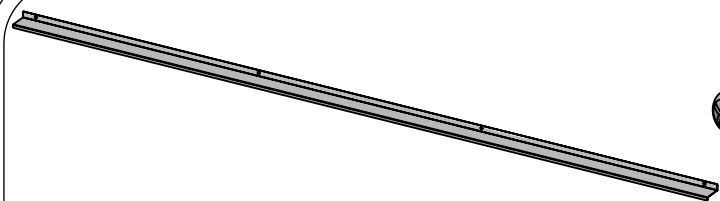

ST6.0*70



▲ Install this step if you need fix the canopy to the wall (you need to drill holes into the wall). Otherwise please skip this step.

H4

2X

10#





8X

11#

8X

19#

1X

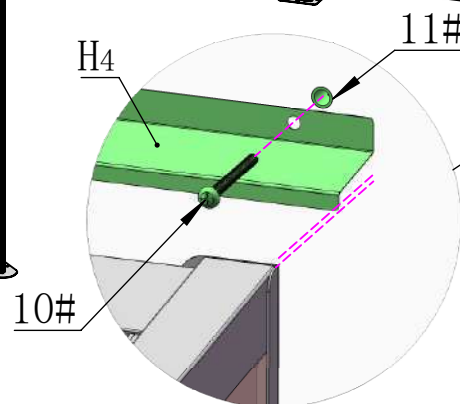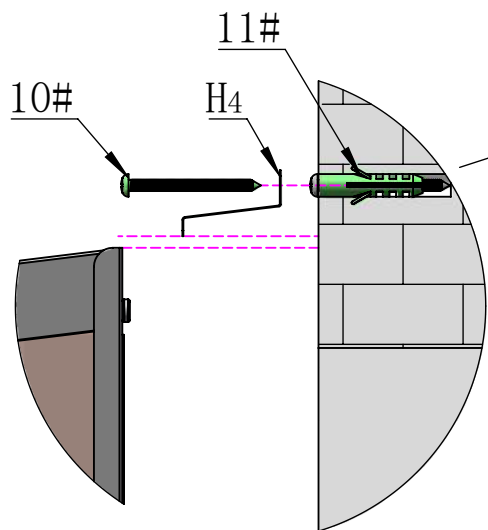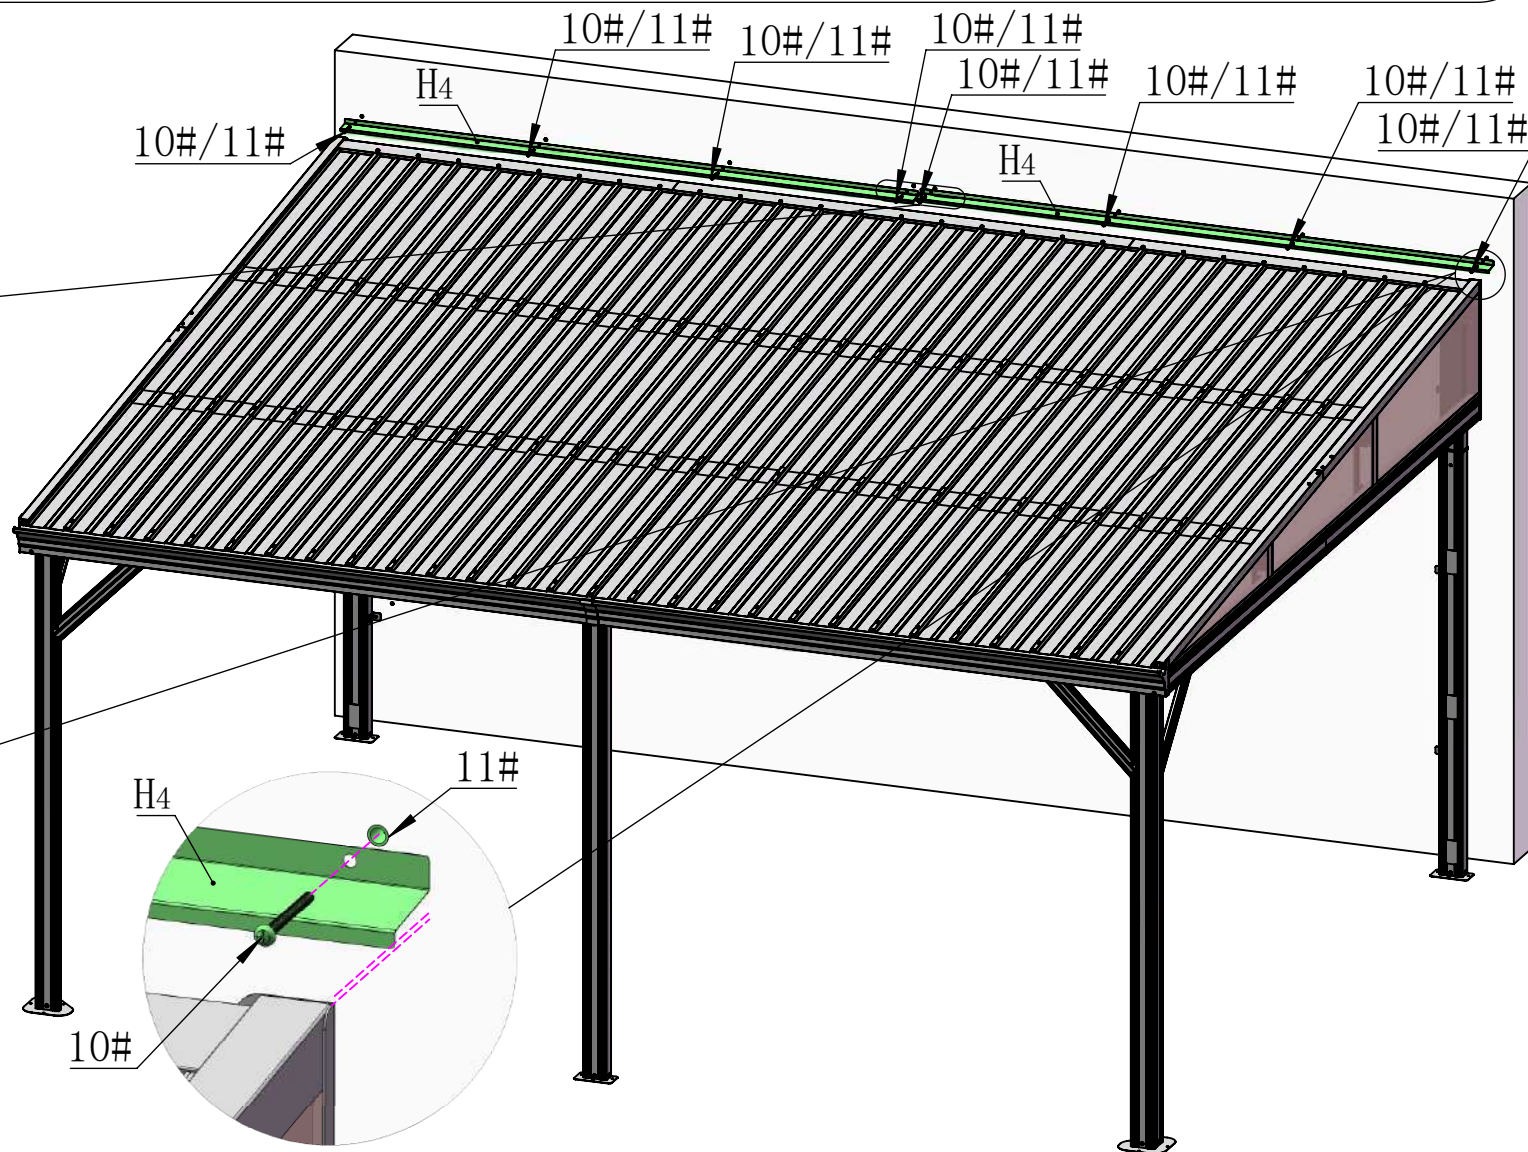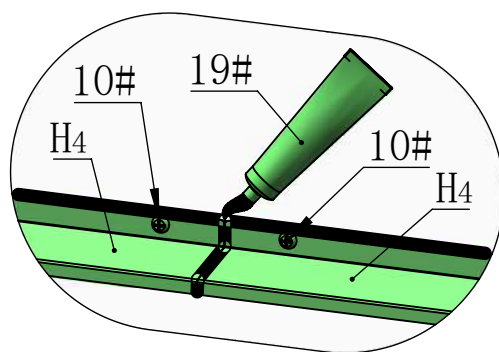



ST6.0*70

10#


8X



11#

8X

- ⚠ (1) If you don't consider fixing it to the wall, you can skip this step. (This step requires the user to drill holes in the wall for fixation.)
 (2) The bracket #A9 is used to fix the post against the wall. You can assemble only 2 pieces for each post according to the actual installation situation.

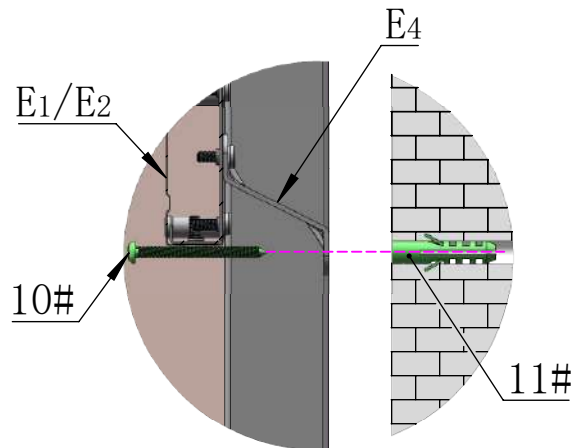



A3/A4/A5/A6

10#


A9

11#


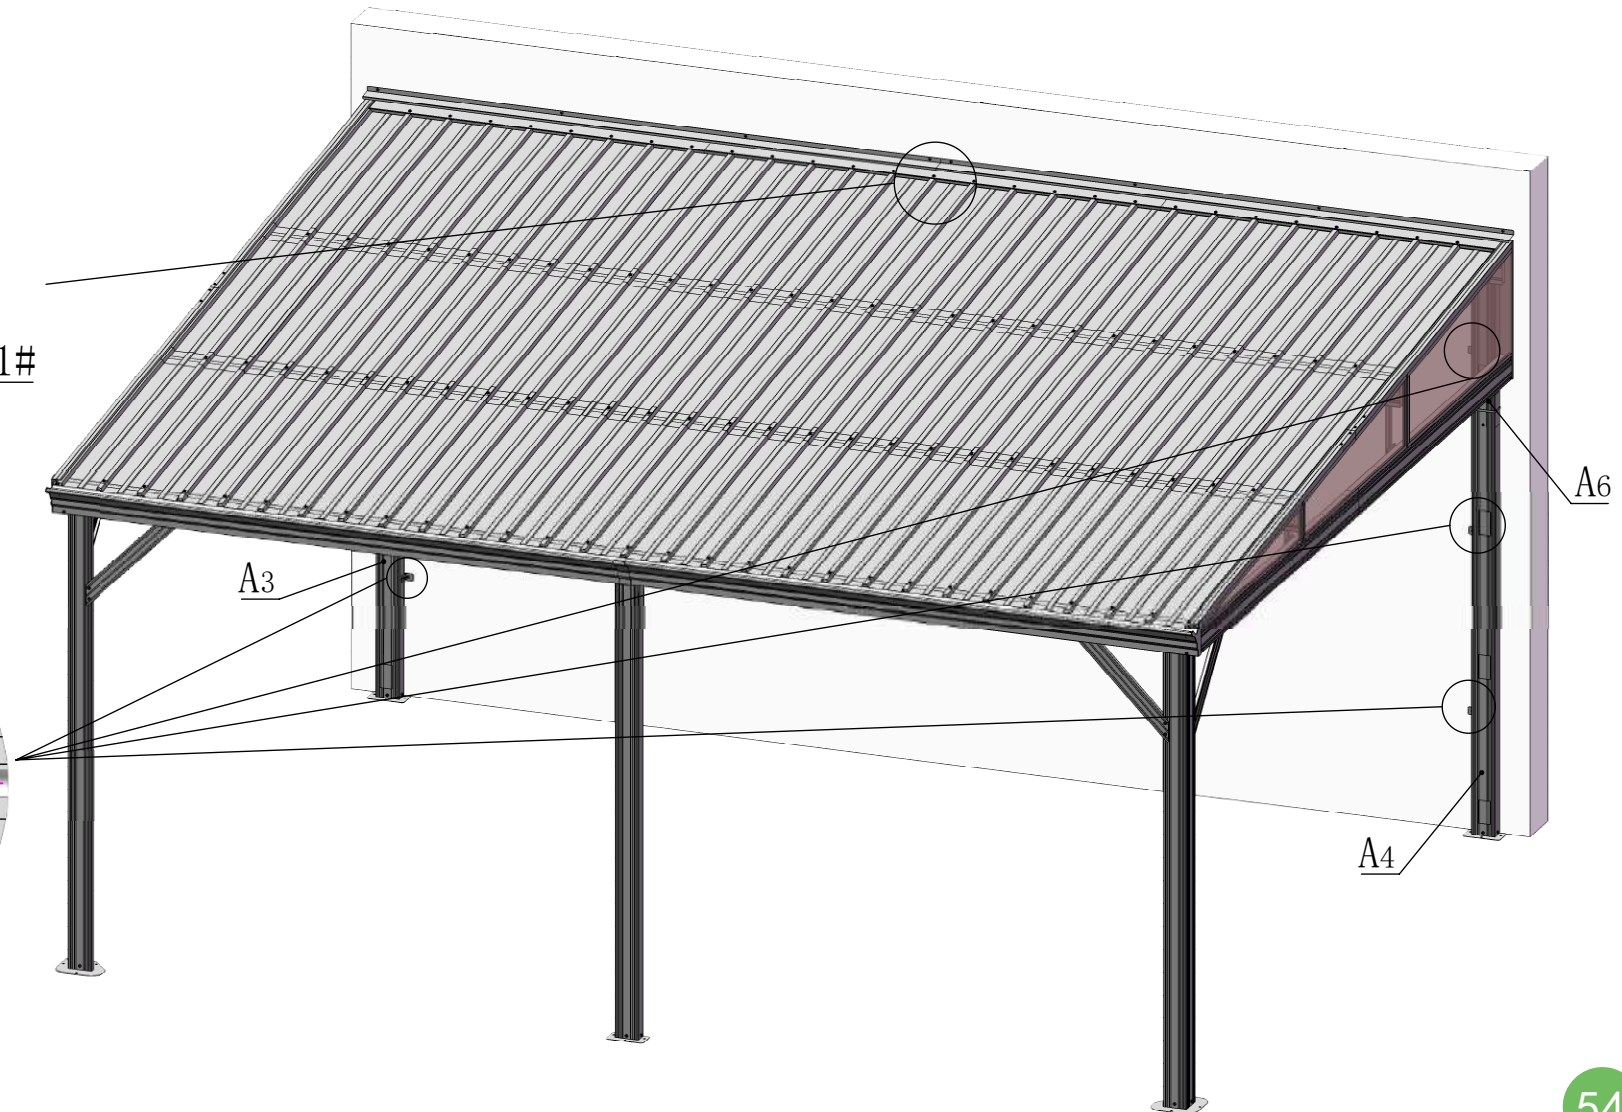


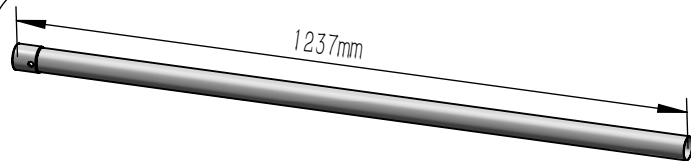


L2 2X

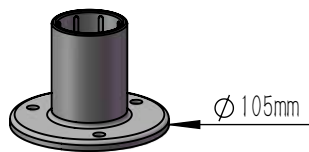


L3 2X

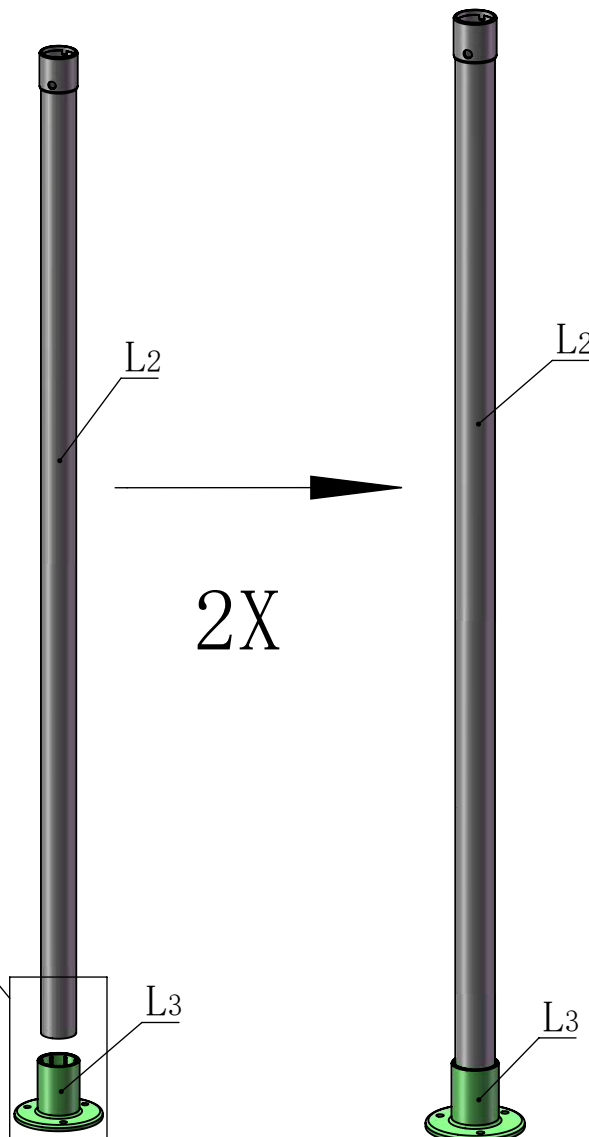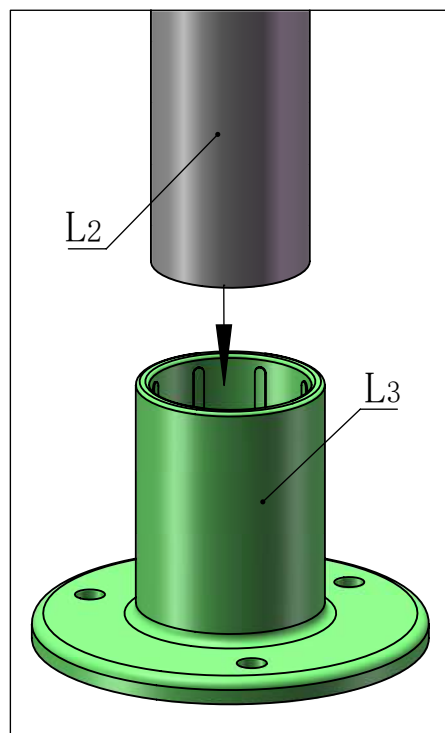

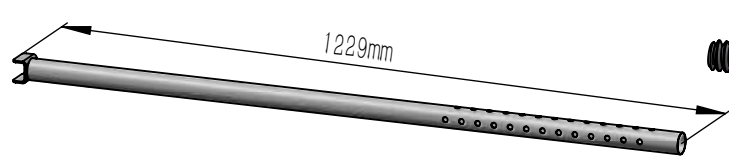


L1

2X

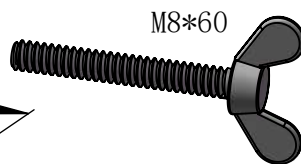

12#

2X



M8

13#



2X




M8


14#


2X

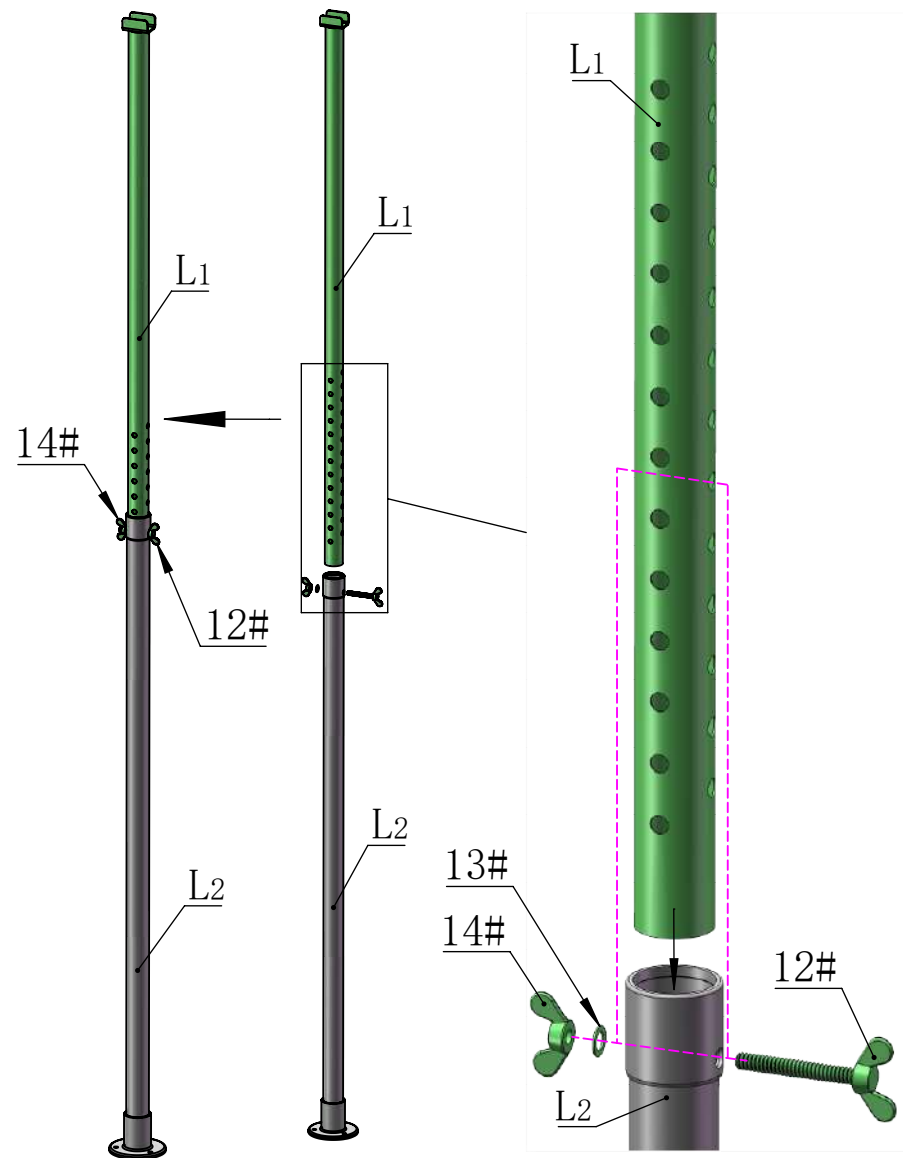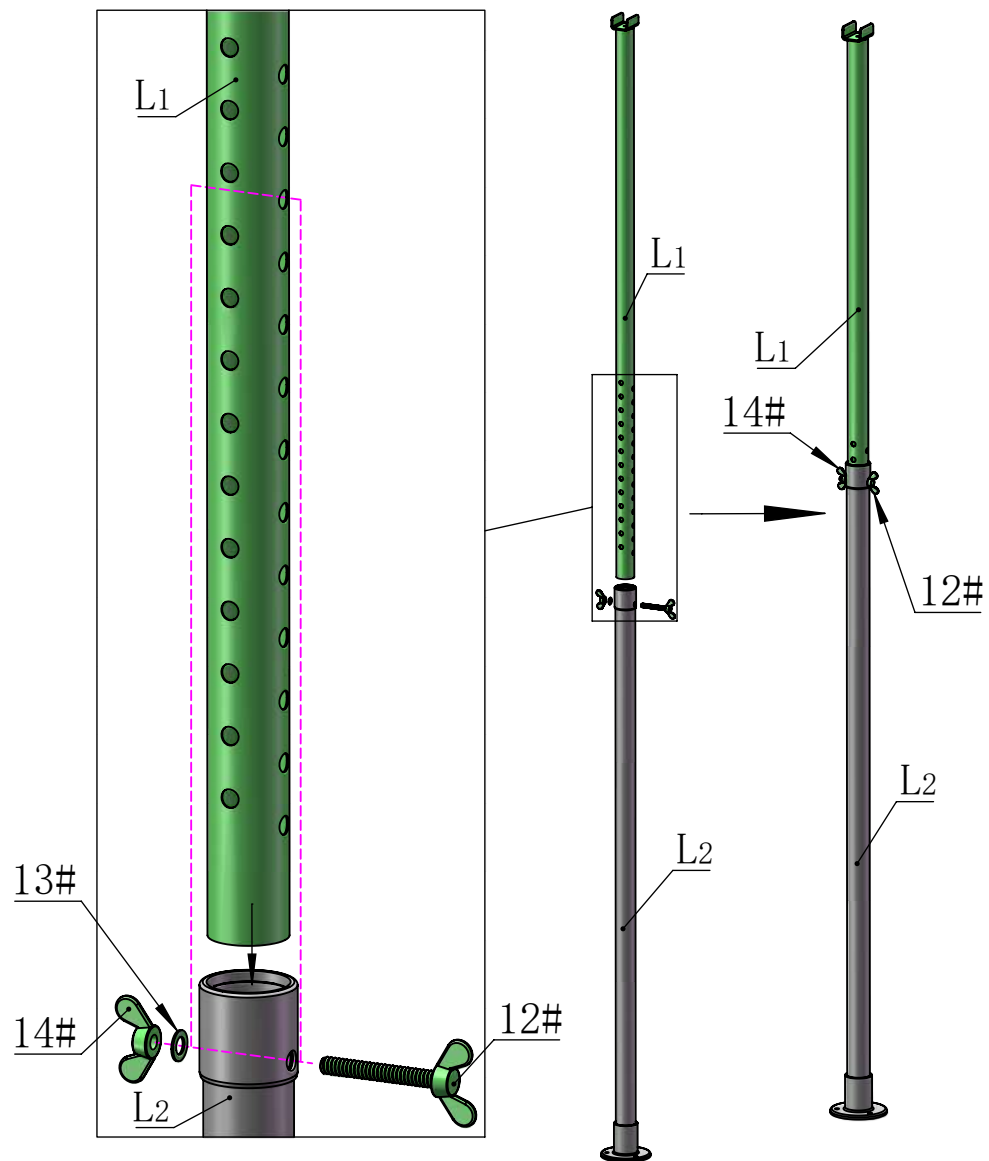


▲ The two support tubes can strengthen the weight capacity of the metal roof. In bad weather, especially snowstorm, they are essentially needed to prevent the roof from collapsing under heavy snow. In daily life, you can put them away.

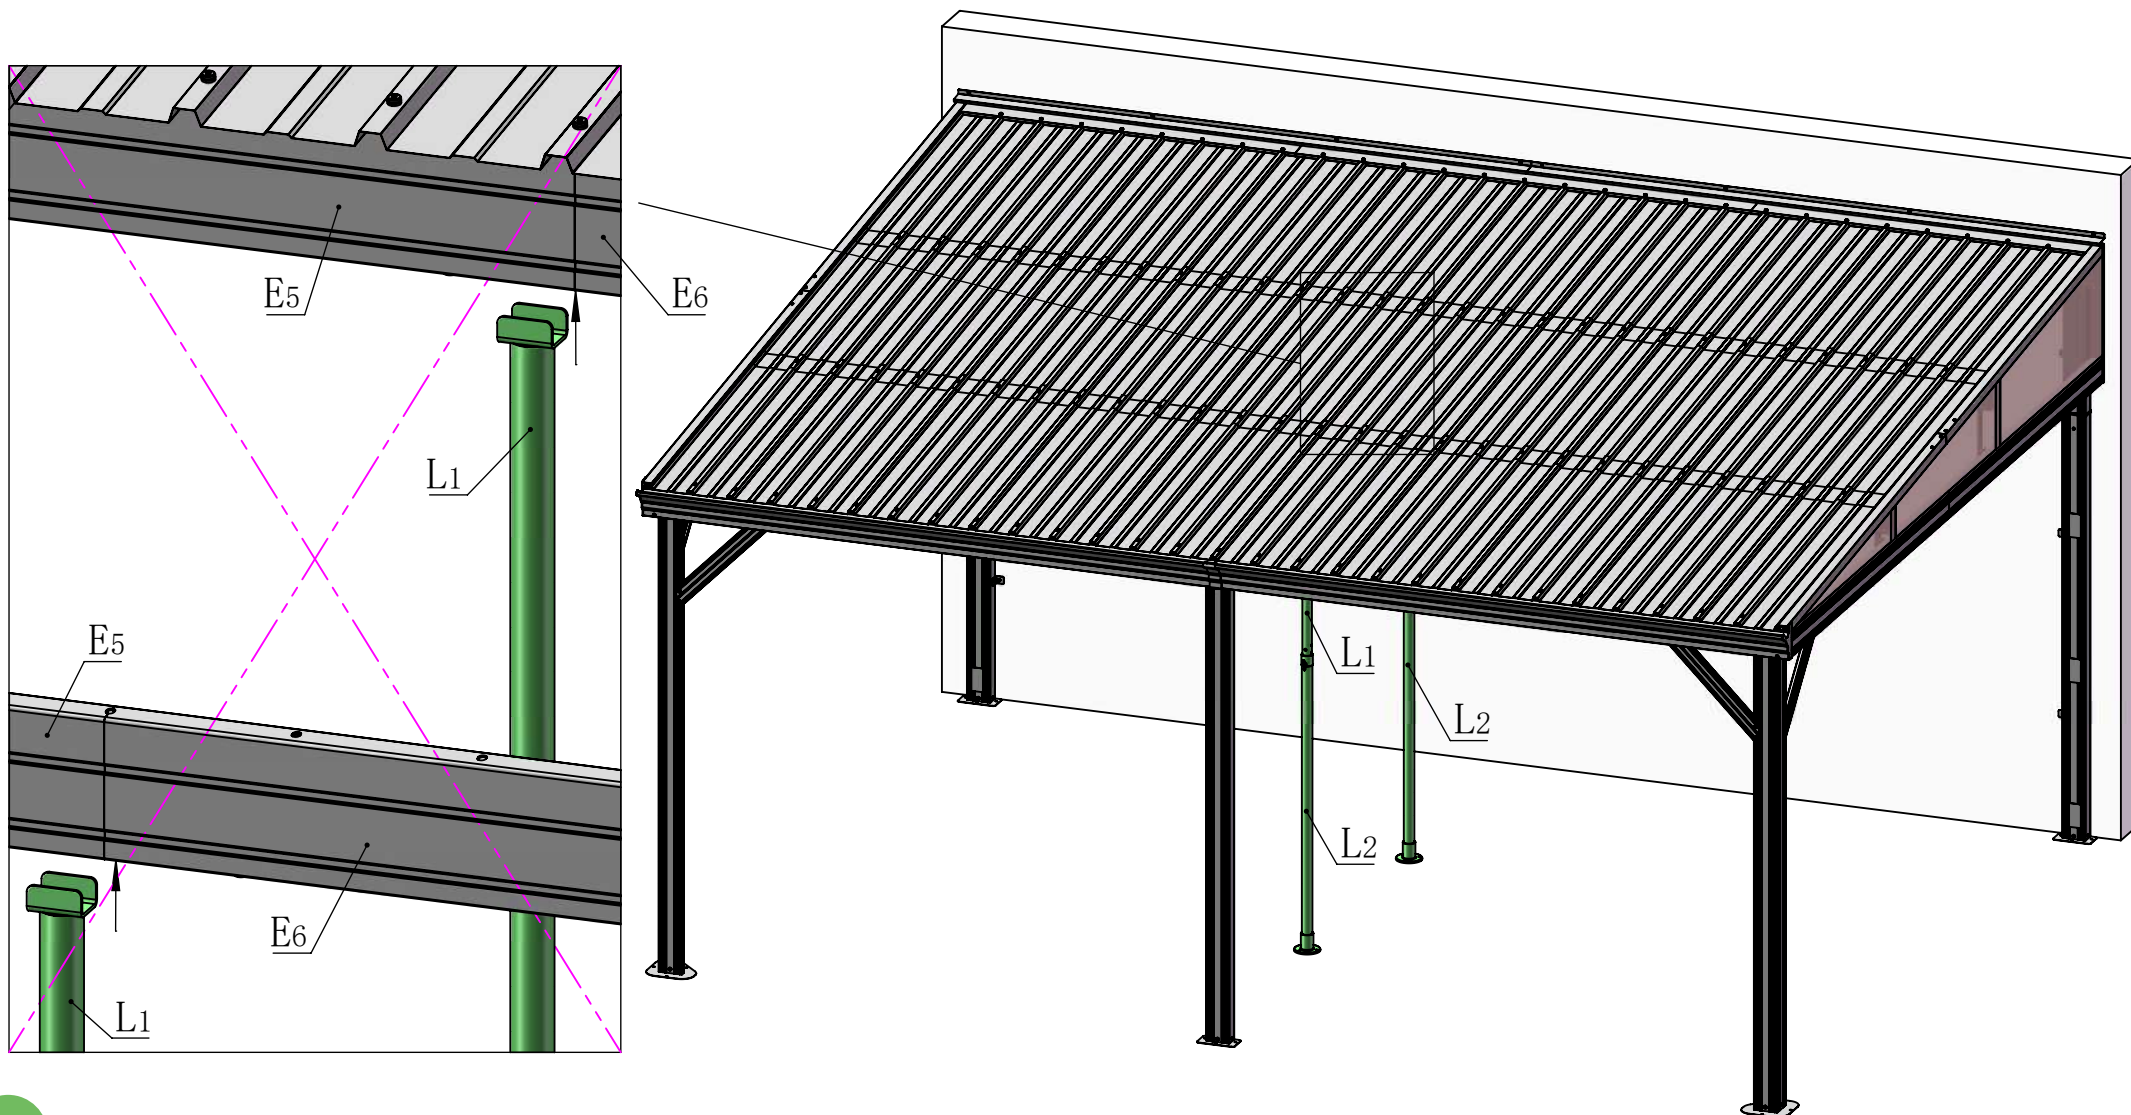

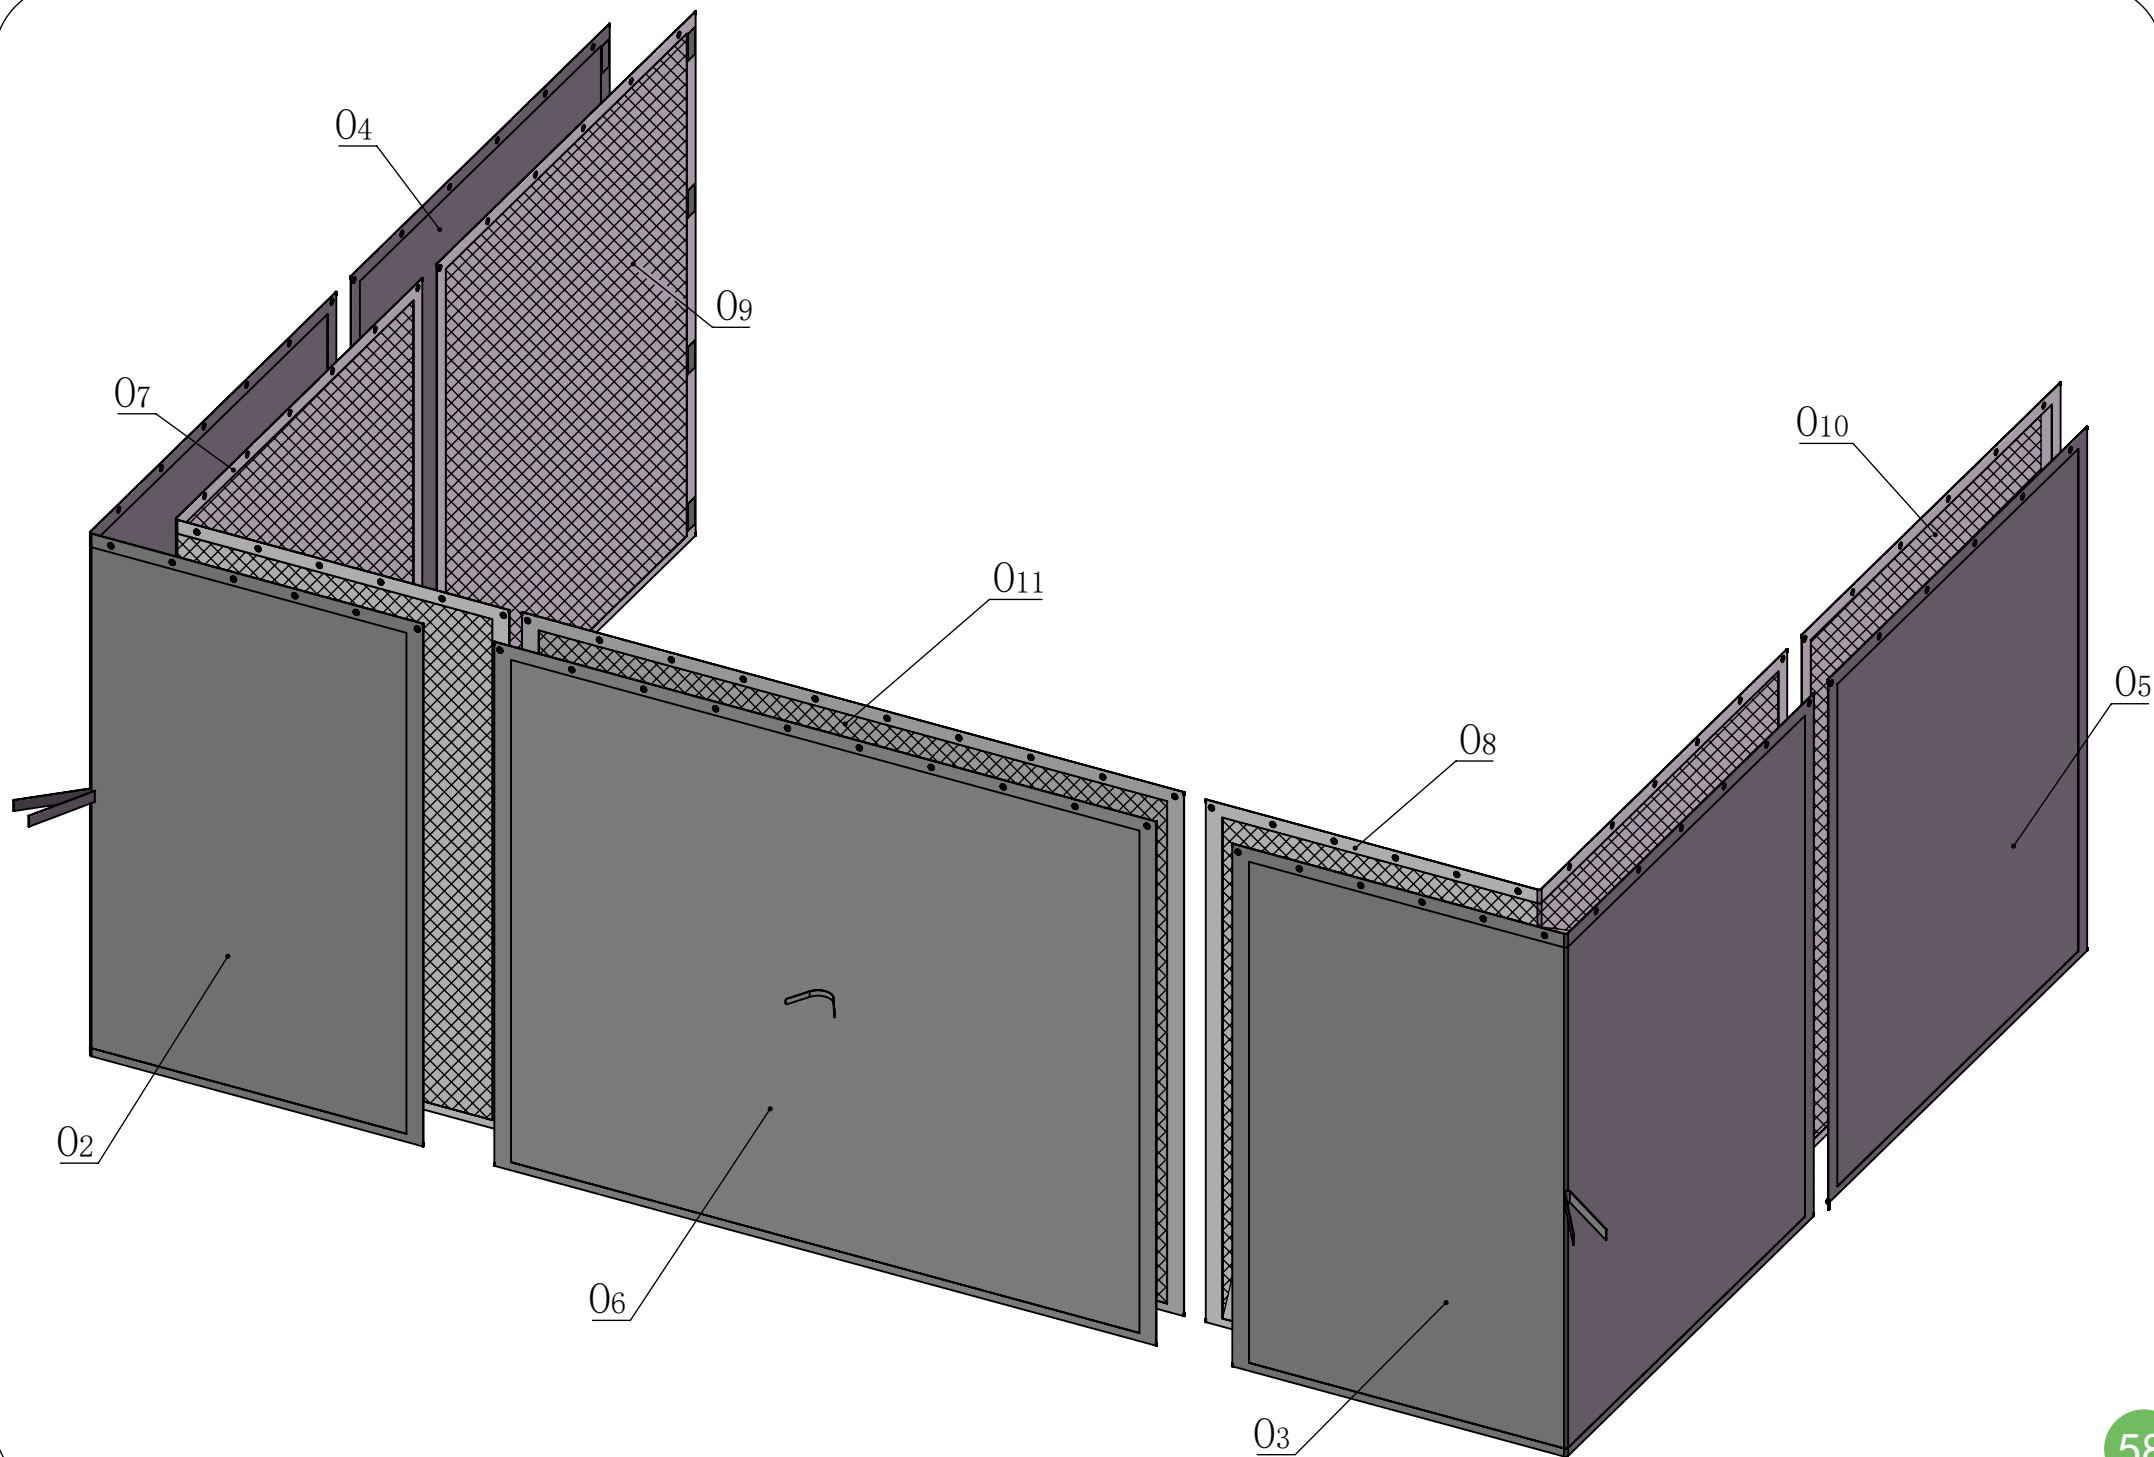


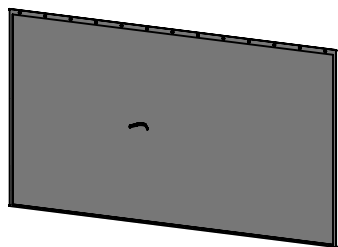


O2 1X

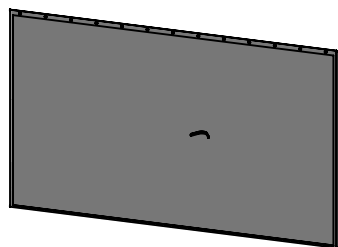


O3 1X

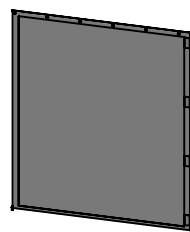

O4 1X

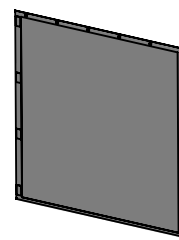


O5 1X


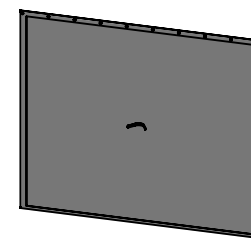



O6 1X

Curtains Assembly

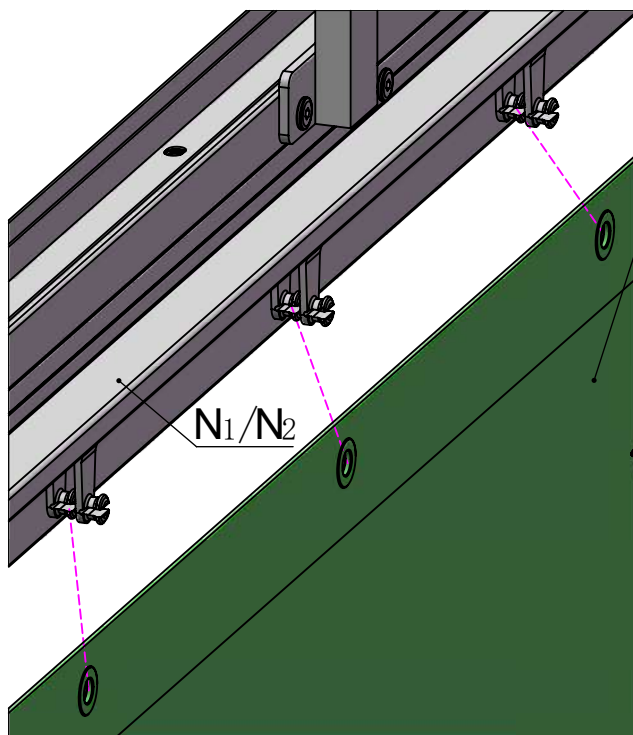


Outside Track

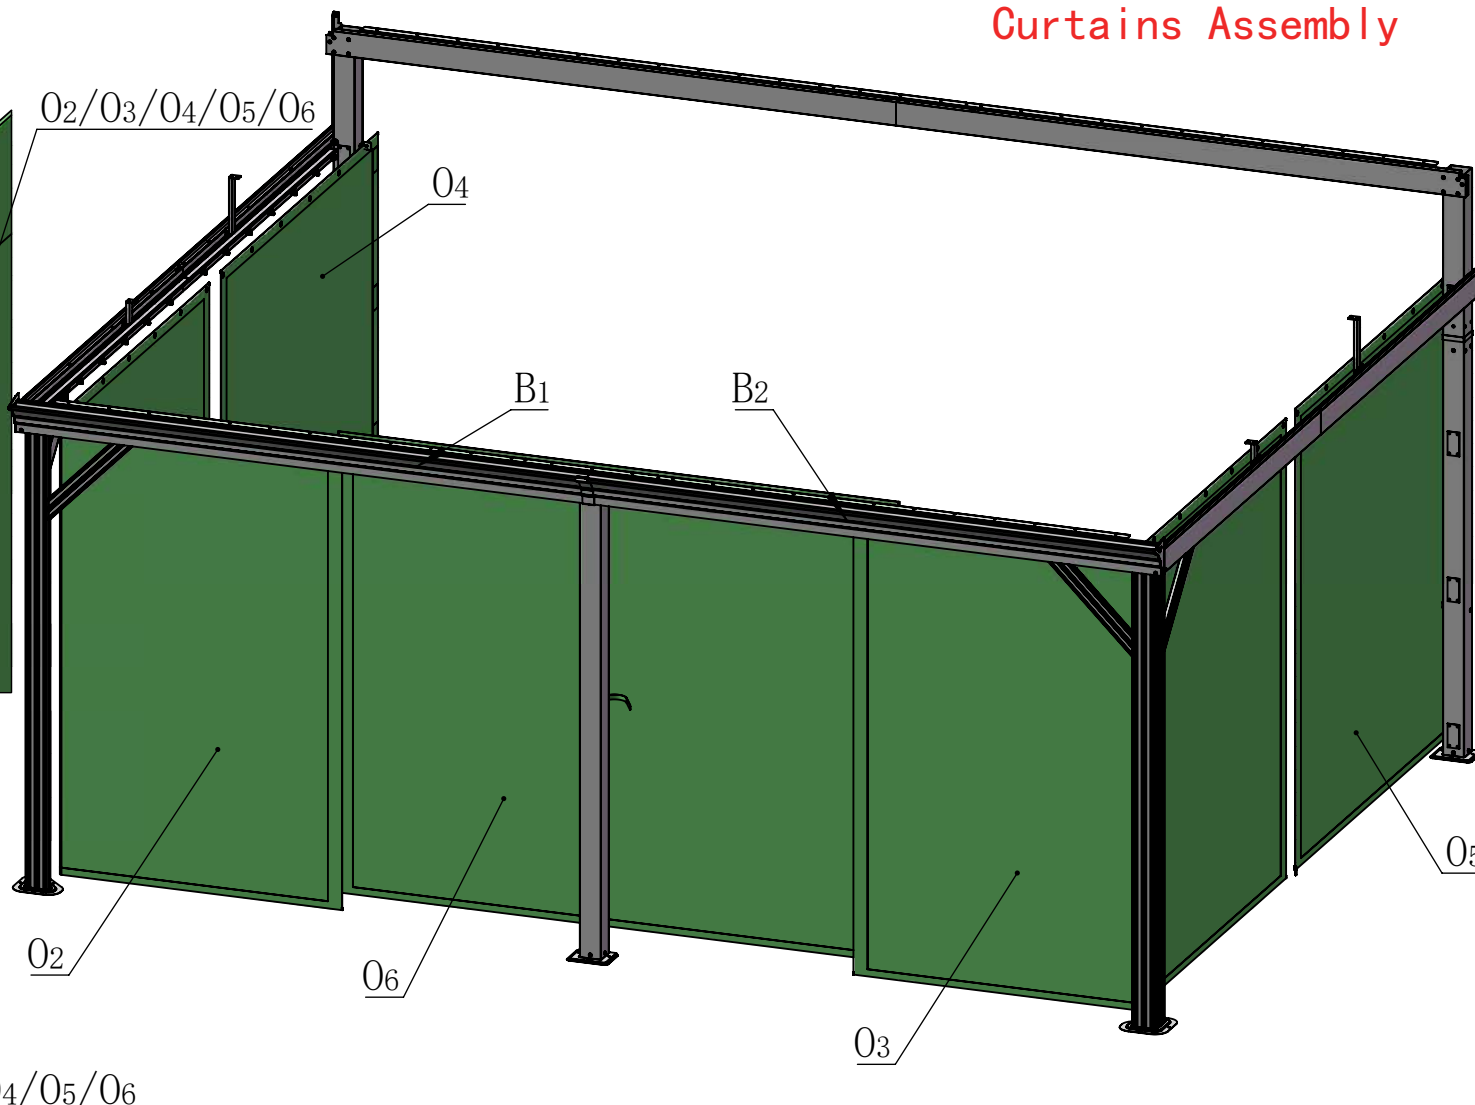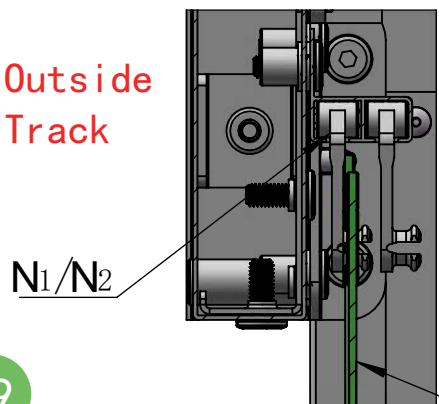


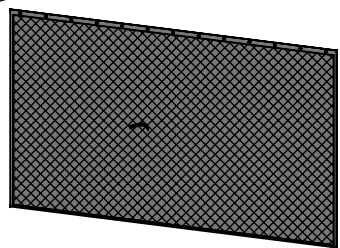


O7 1X

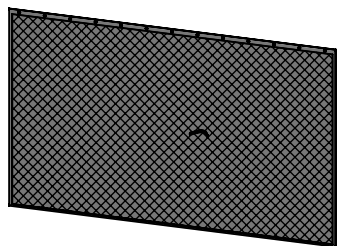


O8 1X

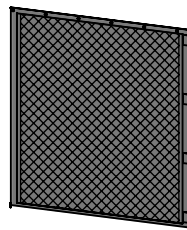

O9 1X

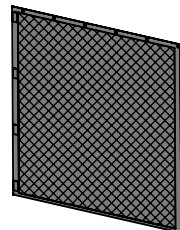


O10 1X

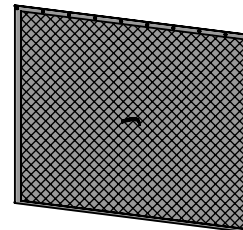


O11 1X

Netting Assembly


N₁/N₂

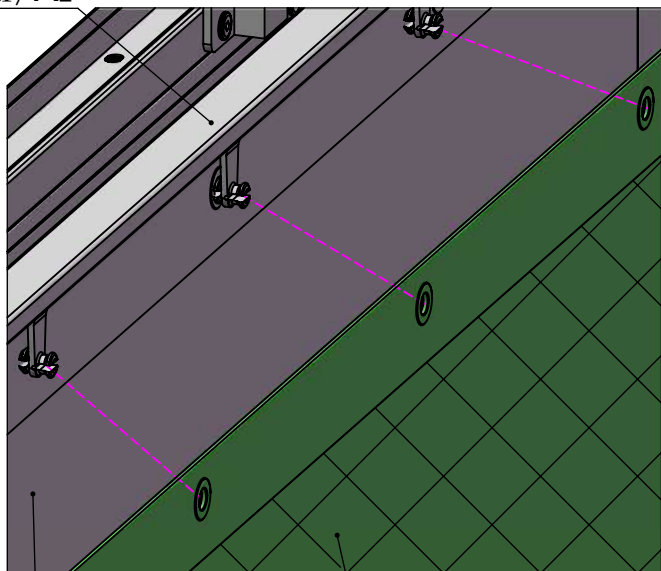

O2/O3/O4/O5/O6 O7/O8/O9/O10/O11

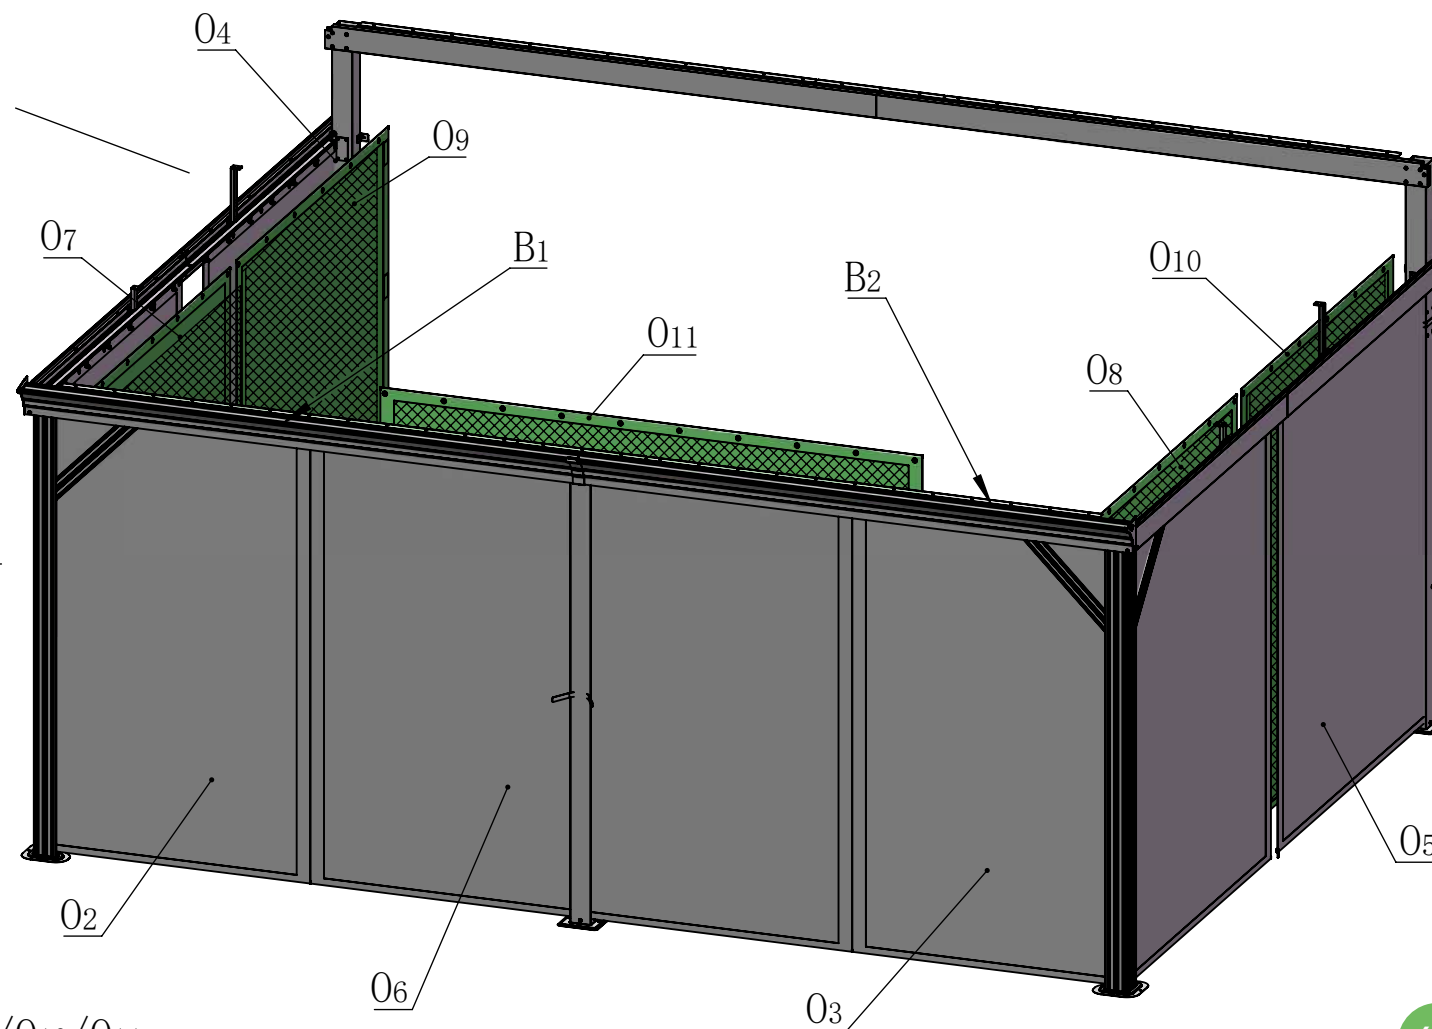





Inside
Track

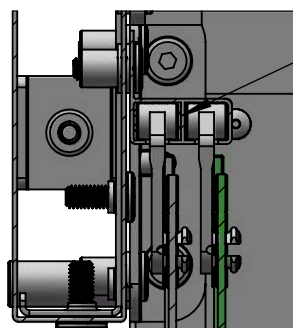

N₁/N₂

O2/O3/O4/O5/O6


O7/O8/O9/O10/O11

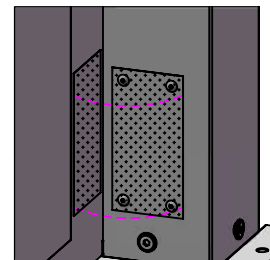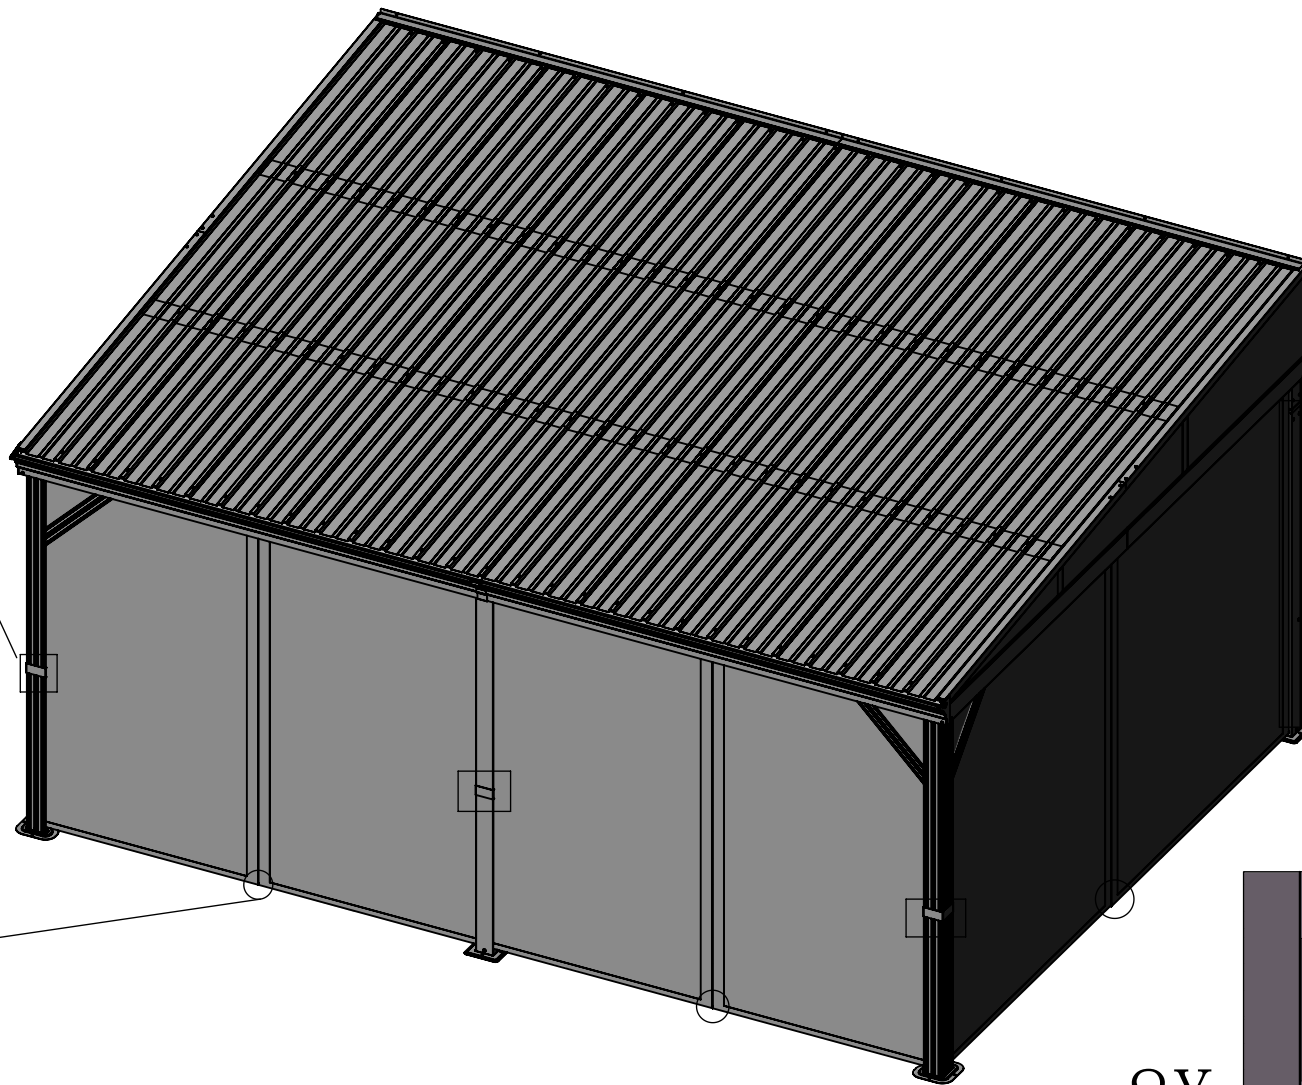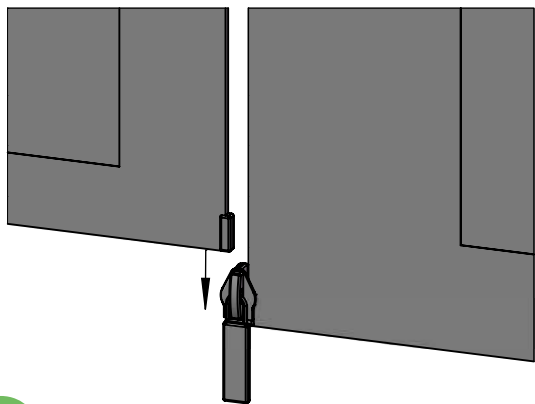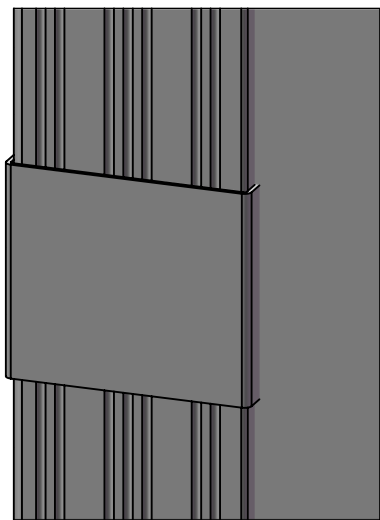



⚠ Please open your gazebo curtain when it is incoming over 30 mph wind, and tie with Strap #01.

01 5X

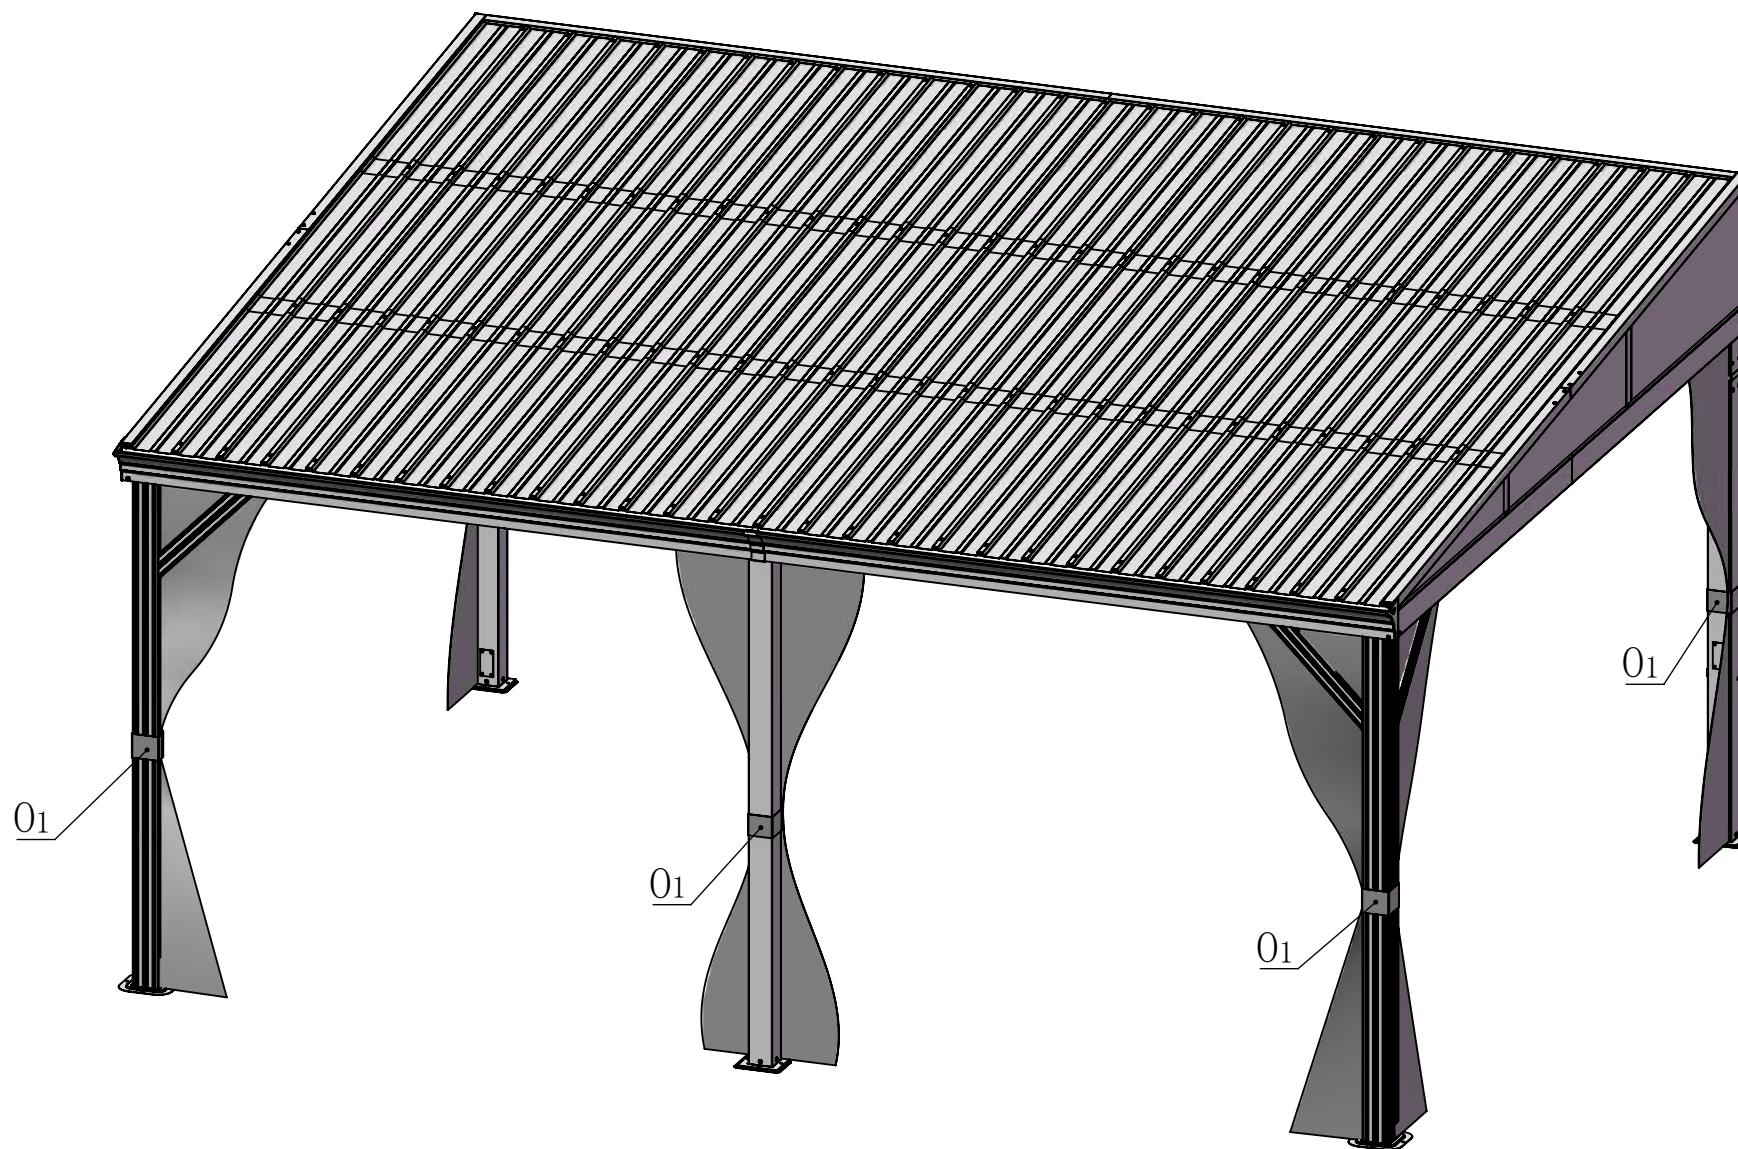

Care and Cleaning

Wash frame parts and fabric with mild soap and water, rinse thoroughly.

Dry frame completely and allow the fabric to drip dry.

Do not use bleach, acid, or other solvents on the fabric or frame parts.

Please inspect and tighten all bolts or fasteners on a regular basis to ensure proper performance and safety of your gazebo.

Warranty

Frames

Frames constructions are warranted to be free from defects in material and workmanship for 1 year from item purchased. Damage to frame from negligence won't be covered by this warranty.

Netting

Netting are warranted to be free from defects in material and workmanship for 1 year from item purchased. Damage from exposure to chemicals (including but not only oils ,spills, fluids) won't be covered by this warranty.

Bolts & nuts

Bolts and nuts are warranted to be free from defects in material and workmanship for 1 year from item purchased. Damage from exposure to chemicals (including not only oils ,spills, fluids) won't be covered by this warranty.

Warranty Limitation

This warranty is for the original purchase order only. (Order number required). This warranty is non-transferable. Domi outdoor living is responsible for the free replacement part including shipping charges for the 1 year warranty.

Warranty Exclusion

This warranty does not cover products subject to negligence, abuse usage, inappropriate installation. Domi outdoor living reserves the right to explain warranty exclusions. When the replacement item is applied, the 1 year warranty automatically expires. Please feel free to contact us for applying warranty.



RESORT COMFORT IN YOUR
OWN BACKYARD

Support:



Business cooperation contact email:

marketing@domioutdoorliving.com

After-sales contact email:

service@domioutdoorliving.com

Please tell us your order ID when contact.

Attach photos of damaged part for instant reply.